

## BATTERY POSITIVE TERMINAL COVER (RED) VERIFICATION AND SEAT INSTALLATION INSTRUCTIONS

### WARNING

**An electrical short can cause fire.** Do not let anything conductive, except during maintenance, touch the positive (+) battery post, such as seat base, metal seat belt components, and tools. The red battery terminal cover must completely cover the positive (+) battery post, except during maintenance.

### WARNING

**Do not set anything on top of battery** when positive (+) battery post is uncovered.

### WARNING

**Avoid damaging red battery terminal cover.** Improperly reinstalling seat can damage cover.

### WARNING

**Never use damaged red battery terminal cover.** Remove battery from service until damaged cover is replaced.

## VIDEO INSTRUCTIONS


To view video instructions for this verification procedure, please refer to the link below or scan the QR code.


### Video Instructions

<https://www.youtube.com/watch?v=IBddQNKAklc>



## SEAT REMOVAL

1. Determine which seat is over the battery location.
  - 2-seat models: under driver's seat
  - 4-seat models: under rear driver's side seat
2. Pull up on the seat latch strap  located at the base of the seat.

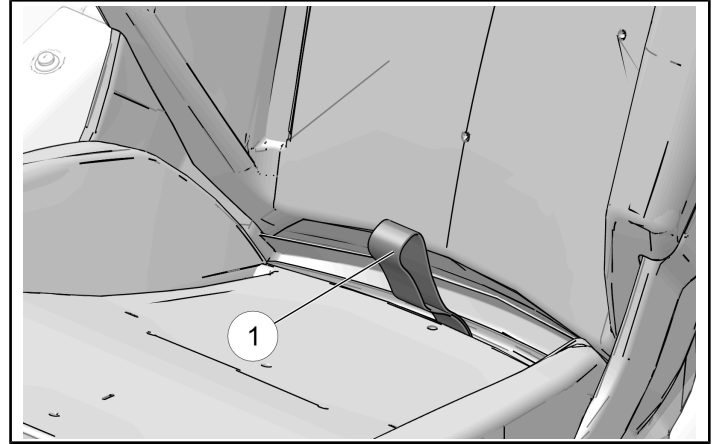


3. Tilt the seat forward and move it rearward.
4. Lift the seat upward to remove it from the vehicle.

## BATTERY POSITIVE TERMINAL COVER (RED) VERIFICATION

1. Check the condition and position of the battery positive terminal cover (red).

### NOTICE

Your vehicle may be equipped with either type of battery positive terminal cover (red) shown below.

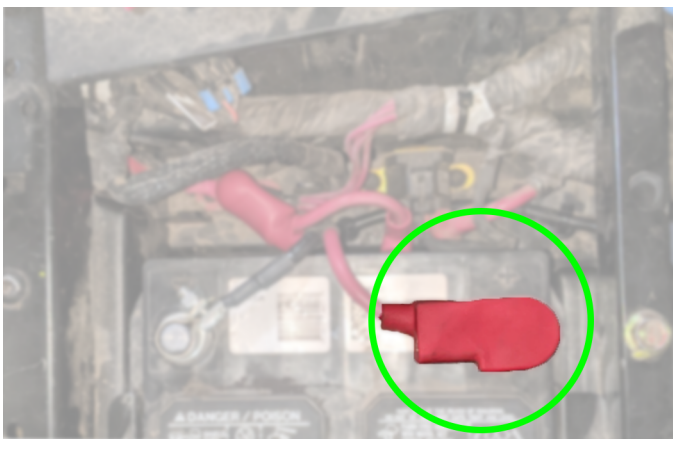

2. Make sure the battery positive terminal cover (red) is:
  - Undamaged (abrasions, cuts, tears, etc.)
  - Fully seated on the terminal, with no portion of the metal battery terminal or wire/cable exposed
  - If dislodged, the cover (red) can be carefully seated back over the battery positive terminal.

### ⚠ WARNING

Do not touch any metal portion of the battery terminal.

### IMPORTANT

**If the battery positive terminal cover (red) is undamaged and in position:**  
Proceed to Seat Installation.



**If the battery positive terminal cover (red) is damaged:**  
The vehicle **should not be operated** until the damage has been repaired by your authorized Polaris dealer.

### NOTICE

Keep this document for reference with your Owners Manual.

## SEAT INSTALLATION

1. Move any metal components, such as seat belt harness latches and adjusters, out of the way.
2. Tilt the front edge of the seat down, and engage the four hooks at the front edge of the seat base with the frame tube.
3. With the front hooks of the seat engaged, push the seat back firmly until the latch engages.

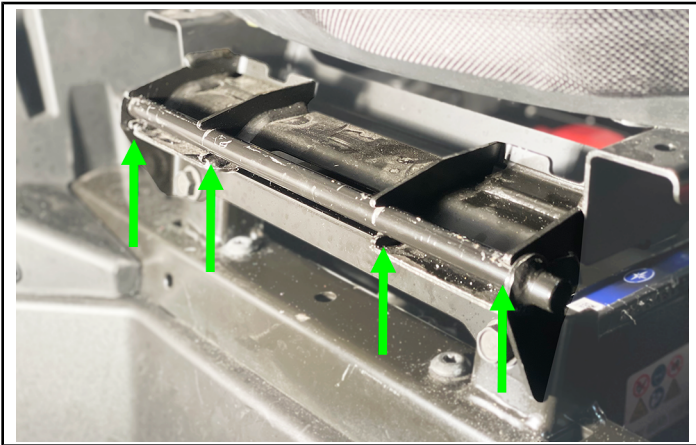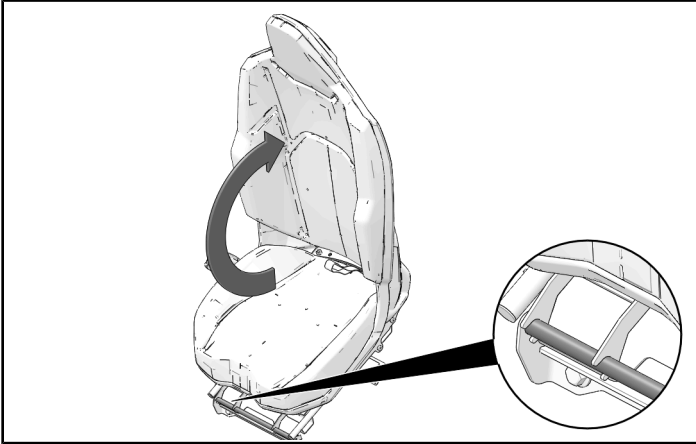

4. Confirm the seat is secure by pulling on the seat back and lifting up on the front edge of the seat. The seat should not disengage.
5. Re-confirm that no metal components, such as seat belt harness latches and adjusters, are not under the seat or contacting the battery.