

BATTERY COVER INSTALLATION INSTRUCTIONS



P/N 2212597

BATTERY COVER INSTALLATION INSTRUCTIONS

Dear Polaris Owner,

You previously received a letter regarding a repair for Model Year 2024-2025 RZR XP and XP 4 vehicles affected by Safety Recall Z-24-01. As a reminder, please review the following options for safety recall completion:

Option 1:

Read, understand, and follow the procedures within this document.

Option 2:

If you do not feel comfortable following the procedures within this document and installing the battery cover on your vehicle, the repair can be completed by your Polaris dealer at no cost to you.

Failure to follow these instructions may lead to injury.

WARNING

An electrical short can cause fire. Do not let anything conductive, except during maintenance, touch the positive (+) battery post, such as seat base, metal seat belt components, and tools. The red battery terminal cover must completely cover the positive (+) battery post, except during maintenance.

WARNING

Do not set anything on top of battery when positive (+) battery post is uncovered.

WARNING


Avoid damaging red battery terminal cover. Improperly reinstalling seat can damage cover.

WARNING

Never use damaged red battery terminal cover. Remove battery from service until damaged cover is replaced.

TOOLS REQUIRED

- Socket Set, Torx® Bit
 - T40 or T40 wrench included in the vehicles tool kit
 -

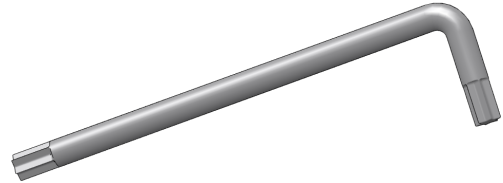

- Safety Glasses
- Nitrile Gloves or Work Gloves

HELP CENTER ARTICLE


To view information and video instructions regarding Z-24-01 Safety Recall, please refer to the link below or scan the QR code.

<https://www.polaris.com/en-us/off-road/owner-resources/help-center/article/KA-05996/>



SEAT REMOVAL

1. Determine which seat is over the battery location.
 - 2-seat models: under driver's seat
 - 4-seat models: under rear driver's side seat
2. Pull up on the seat latch strap ① located at the base of the seat.

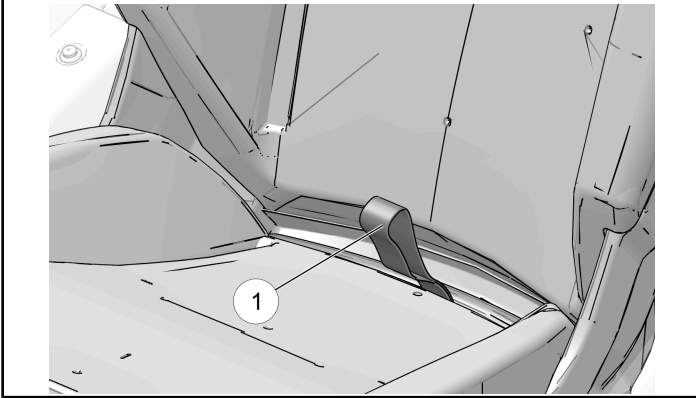



3. Tilt the seat forward and move it rearward.
4. Lift the seat upward to remove it from the vehicle.

BATTERY POSITIVE TERMINAL COVER (RED) VERIFICATION

1. Check the condition and position of the battery positive terminal cover (red).

NOTICE

The vehicle may be equipped with either type of battery positive terminal cover (red) shown below.

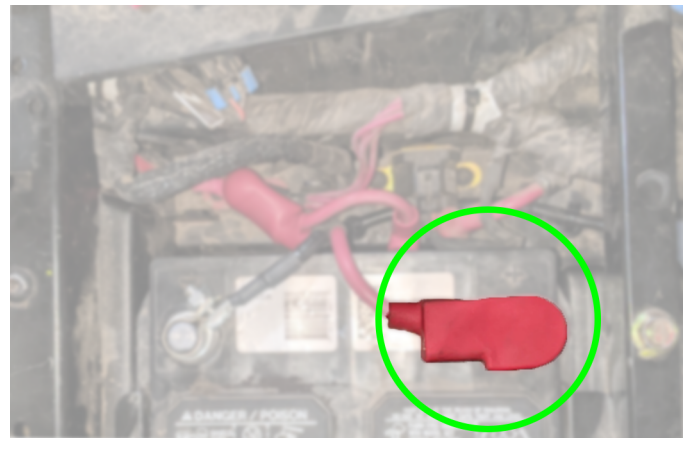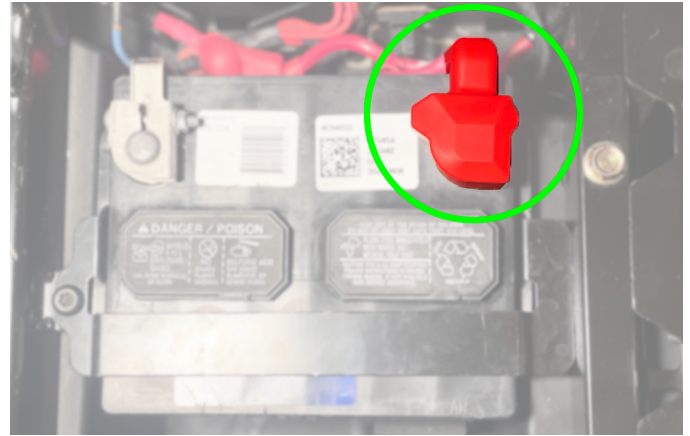

2. Make sure the battery positive terminal cover (red) is:
 - Undamaged (abrasions, cuts, tears, etc.)
 - Fully seated on the terminal, with no portion of the metal battery terminal or wire/cable exposed
 - If dislodged, the cover (red) can be carefully seated back over the battery positive terminal.

⚠ WARNING

Do not touch any metal portion of the battery terminal.


IMPORTANT

If the battery positive terminal cover (red) is undamaged and in position:
Proceed to Battery Cover Installation.

If the battery positive terminal cover (red) is damaged:
The vehicle **should not be operated** until the damage has been repaired by your authorized Polaris dealer.

BATTERY COVER INSTALLATION


1. Remove and **retain** the battery bracket strap fastener ①.

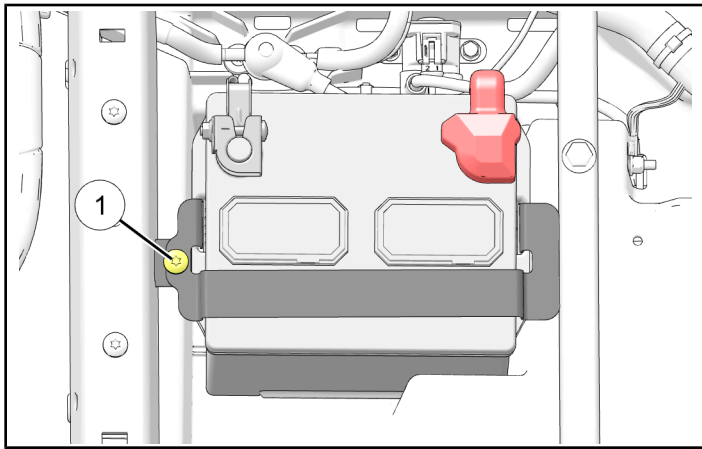

2. Remove and **discard** the battery bracket strap ②.

STOP!


Discard the battery bracket strap. The new battery cover includes a bracket strap.

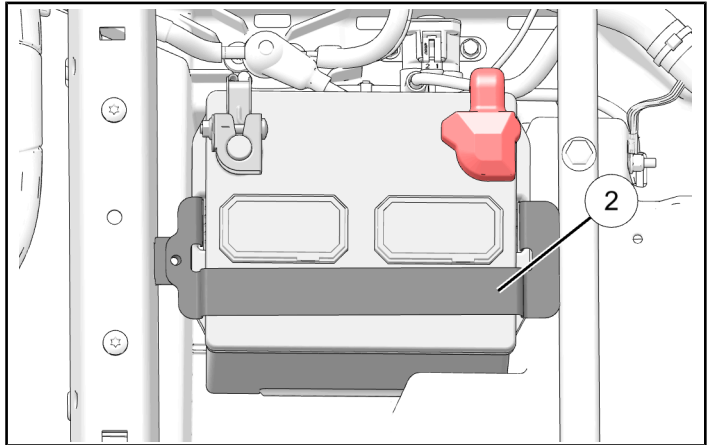


3. Make sure the battery terminals are in the correct orientation, so the terminals do not interfere with the battery cover during installation.
Correct orientation of battery terminals:

NOTICE

The vehicle may be equipped with either type of battery positive terminal cover (red) shown below.

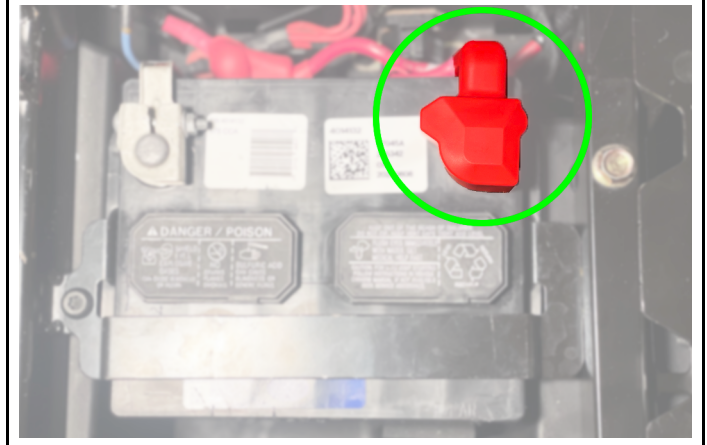


4. Install the NEW battery cover assembly ③, then install the battery bracket strap fastener ① that was previously retained. Tighten the fastener until fully seated.

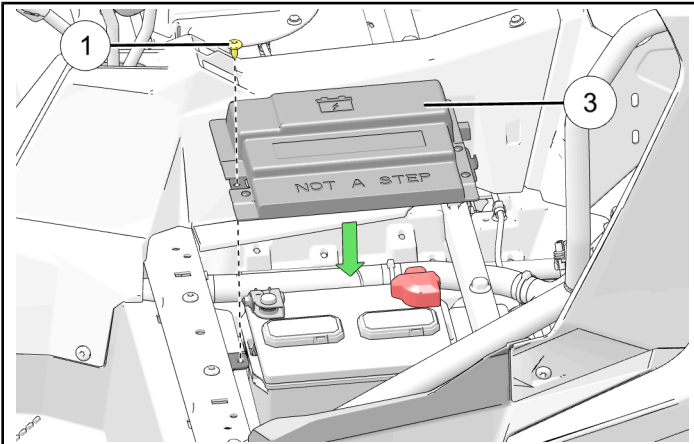

NOTICE

The metal bracket tab on the battery cover assembly goes into the slot on the rear seat support tube, as shown below. Tip the cover up, insert the metal bracket tab, and rotate the battery cover assembly downward. The battery may have to be adjusted slightly to avoid battery cover and terminal cable cover interference. Refer to the Help Center article link for video instructions.


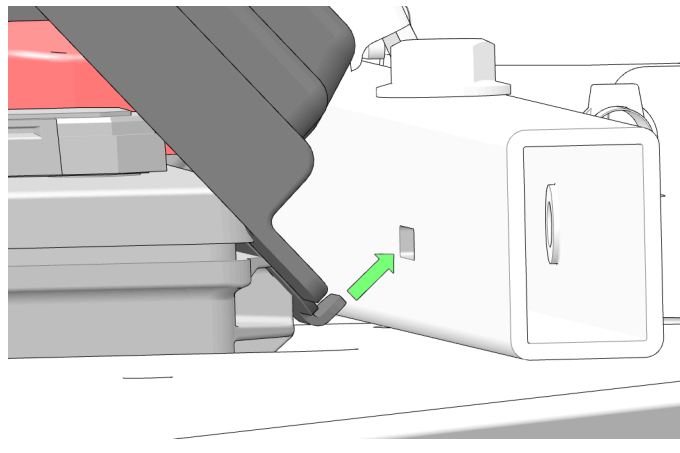


TORQUE

Battery Bracket Strap Fastener:
8 ft-lbs (11 N·m)

SEAT INSTALLATION

1. Move any components, such as seat belt harness latches and adjusters, out of the way.
2. Tilt the front edge of the seat down, and engage the four hooks at the front edge of the seat base with the frame tube.
3. With the front hooks of the seat engaged, push the seat back firmly until the latch engages.

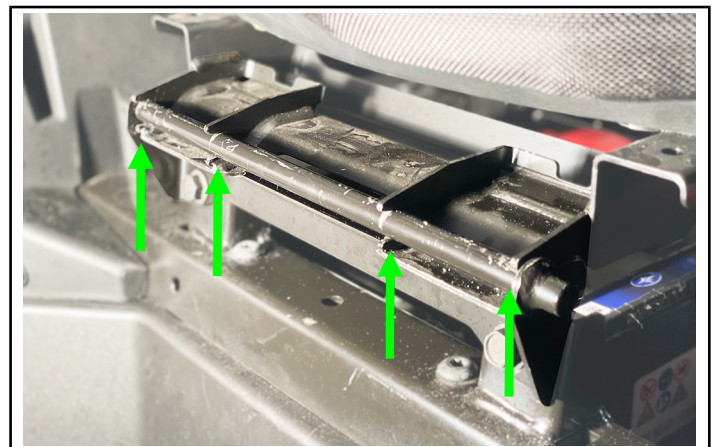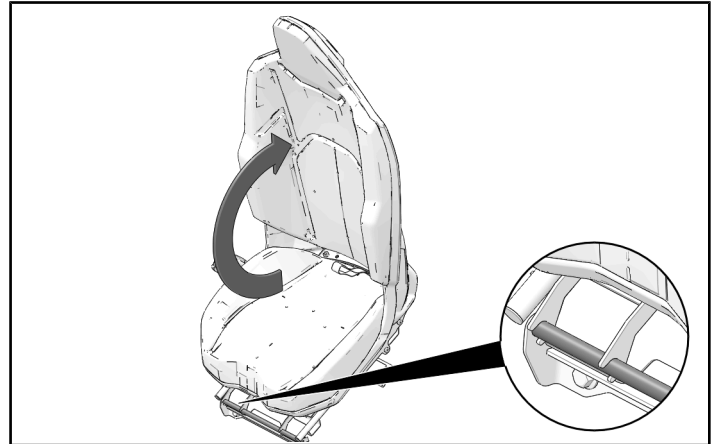

4. Confirm the seat is secure by pulling on the seat back and lifting up on the front edge of the seat. The seat should not disengage.