

# FRONT RACK EXTENDER KIT



**P/N 2882022**

## APPLICATION


Verify accessory fitment at [Polaris.com](http://Polaris.com).

## BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference and parts ordering information.

## KIT CONTENTS

This Kit includes:

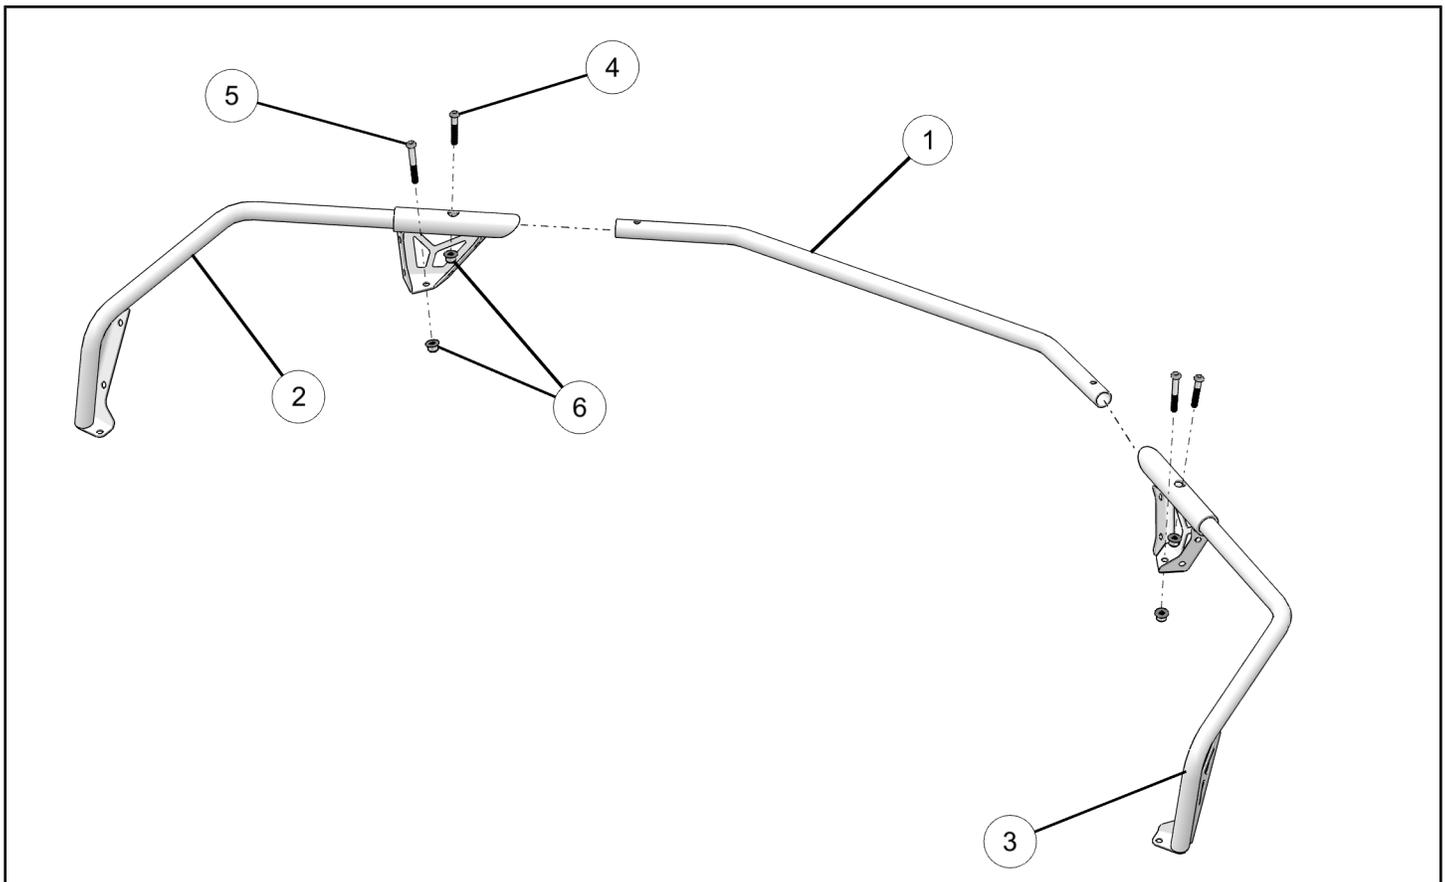

REF	QTY	PART DESCRIPTION	PART NUMBER
1	1	Front Rack Extender, Center	-
2	1	Front Rack Extender, LH	-
3	1	Front Rack Extender, RH	-
4	2	Button Head Cap Screw - M6 X 35	-
5	2	Button Head Cap Screw - M6 X 50	-
6	4	Lock Nut, M6	-
	1	Instructions	9927747

## TOOLS REQUIRED

- Safety Glasses
- Metric Socket Set
- Metric Wrench Set

- Torx Drivers
- Electric Drill and 1/4" or 6mm Drill Bit

## IMPORTANT



Your FRONT RACK EXTENDER KIT is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris. For your safety, and to ensure a satisfactory installation, perform all installation steps correctly in the sequence shown.

## ASSEMBLY TIME


Approximately 15 minutes

## INSTALLATION INSTRUCTIONS


1. Shift vehicle transmission into "PARK". Turn key to "OFF" position and remove from vehicle.
2. Insert center rack extender ① into LH rack extender ②. Align the fastener mounting holes of both extenders and install the screws ④ and nuts ⑥. Do not tighten fasteners.

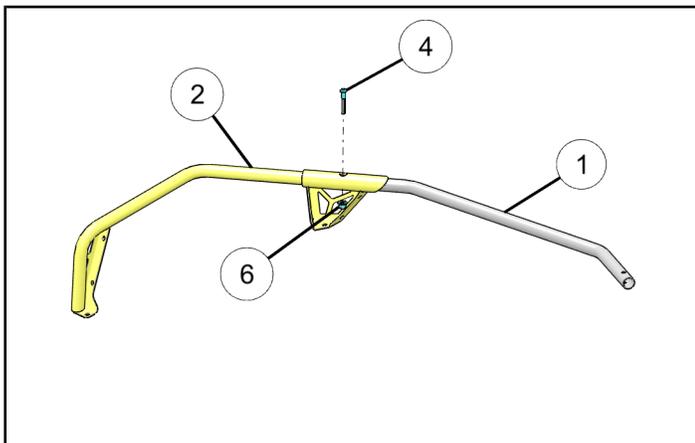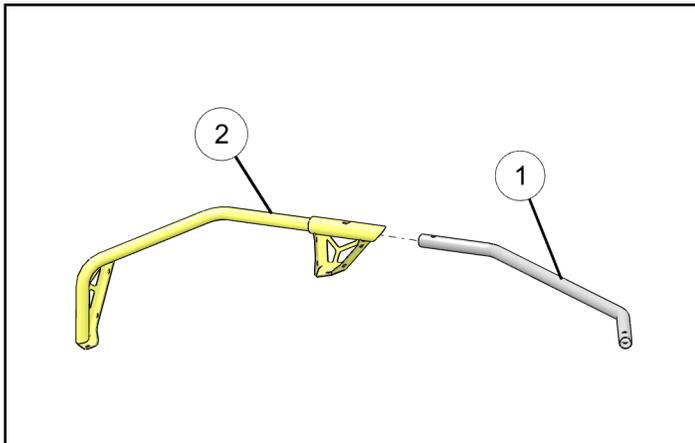


3. Repeat Step 2 for RH rack extender ③ installation.

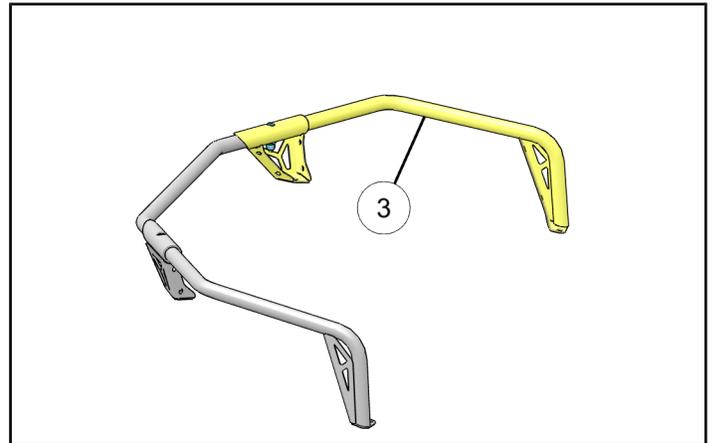


4. Remove two screws (A) from front rack (B). Retain screws for reuse.

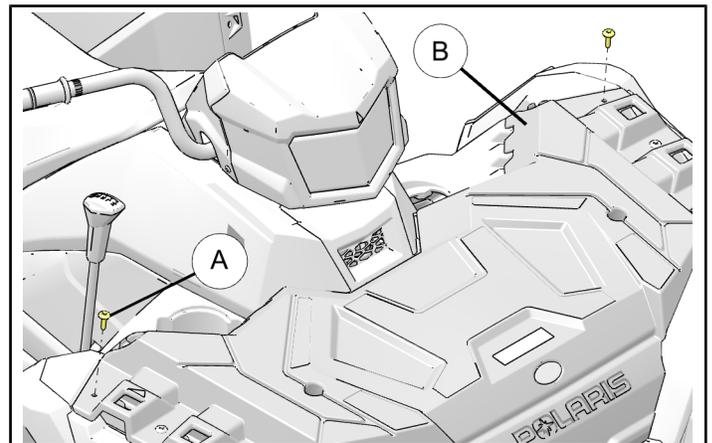


5. Detach the rubber latch (C) on both sides to open the front rack (B).

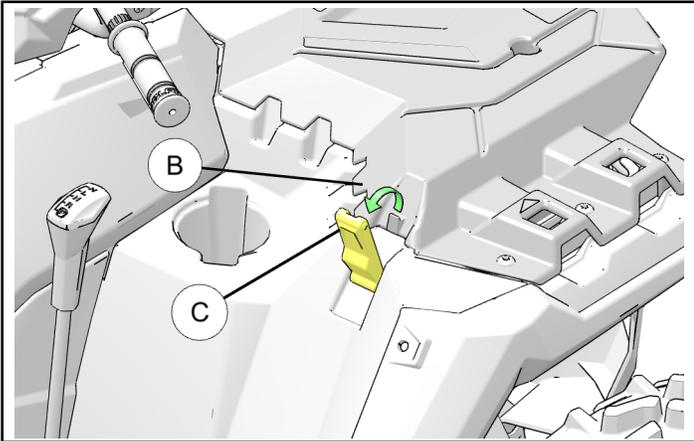


8. Using existing holes as a guide, drill through rack in locations (F) using drill bit. Ensure that the holes pass through the front rack (B).

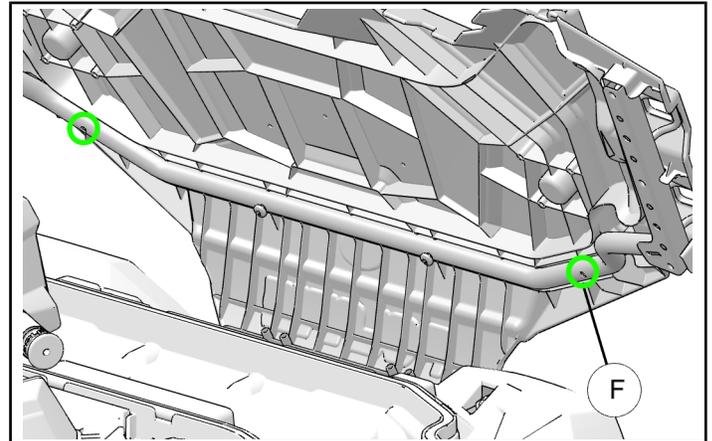



6. Open the front rack (B) as shown.

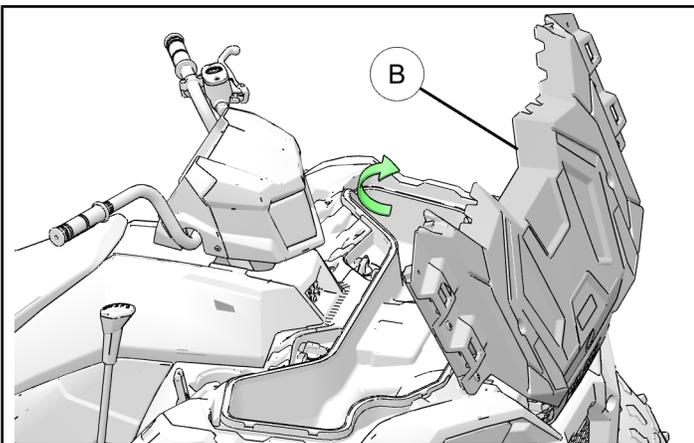


9. Place front rack extender assembly on front rack (B) and install two screws (5) and nuts (6). Do not tighten fasteners.

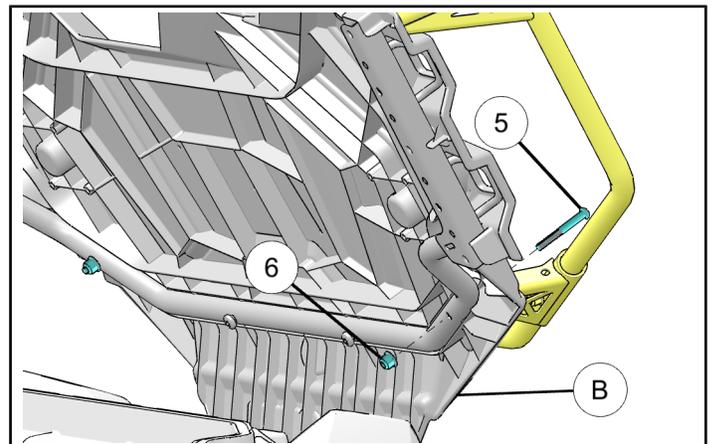

7. Remove two screws (D) from the front rack tube (E). Discard both the screws.

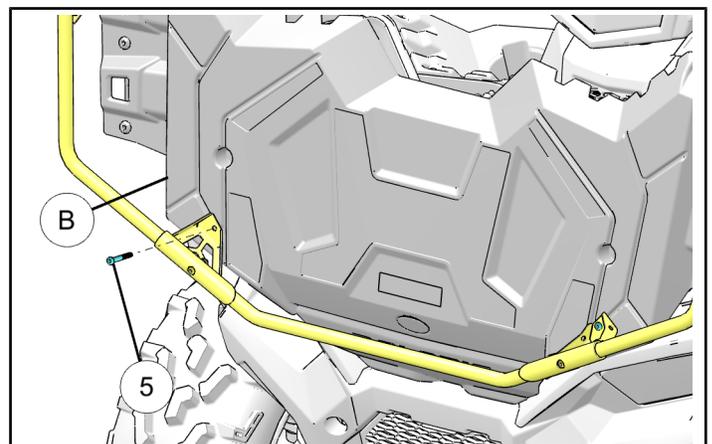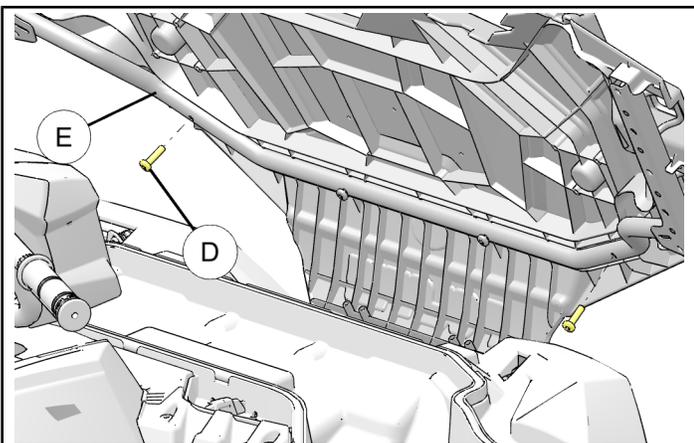

10. Close the front rack (B) along with rack extender assembly. Reinstall two screws (A) removed in Step 4 on front rack (B) through rack extender assembly as shown.

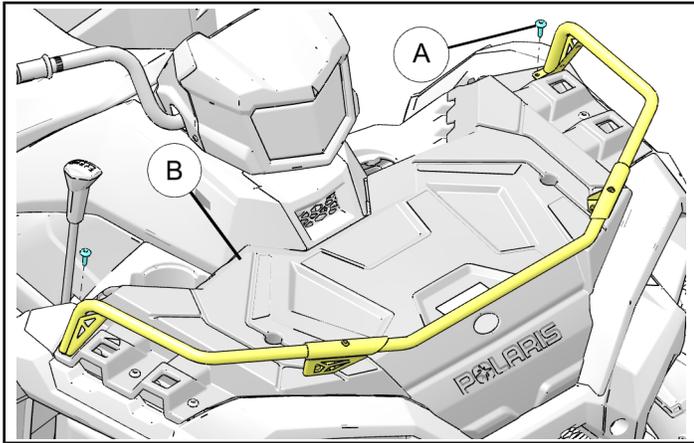

11. Tighten all fasteners to below specification. Secure front rack using rubber latches (C).

### TORQUE

6 ft. lbs. (8.1 Nm)