

4-POINT HARNESS KIT



P/N 2882709

APPLICATION


Verify accessory fitment at Polaris.com.

BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference and parts ordering information.

KIT CONTENTS

This Kit includes:

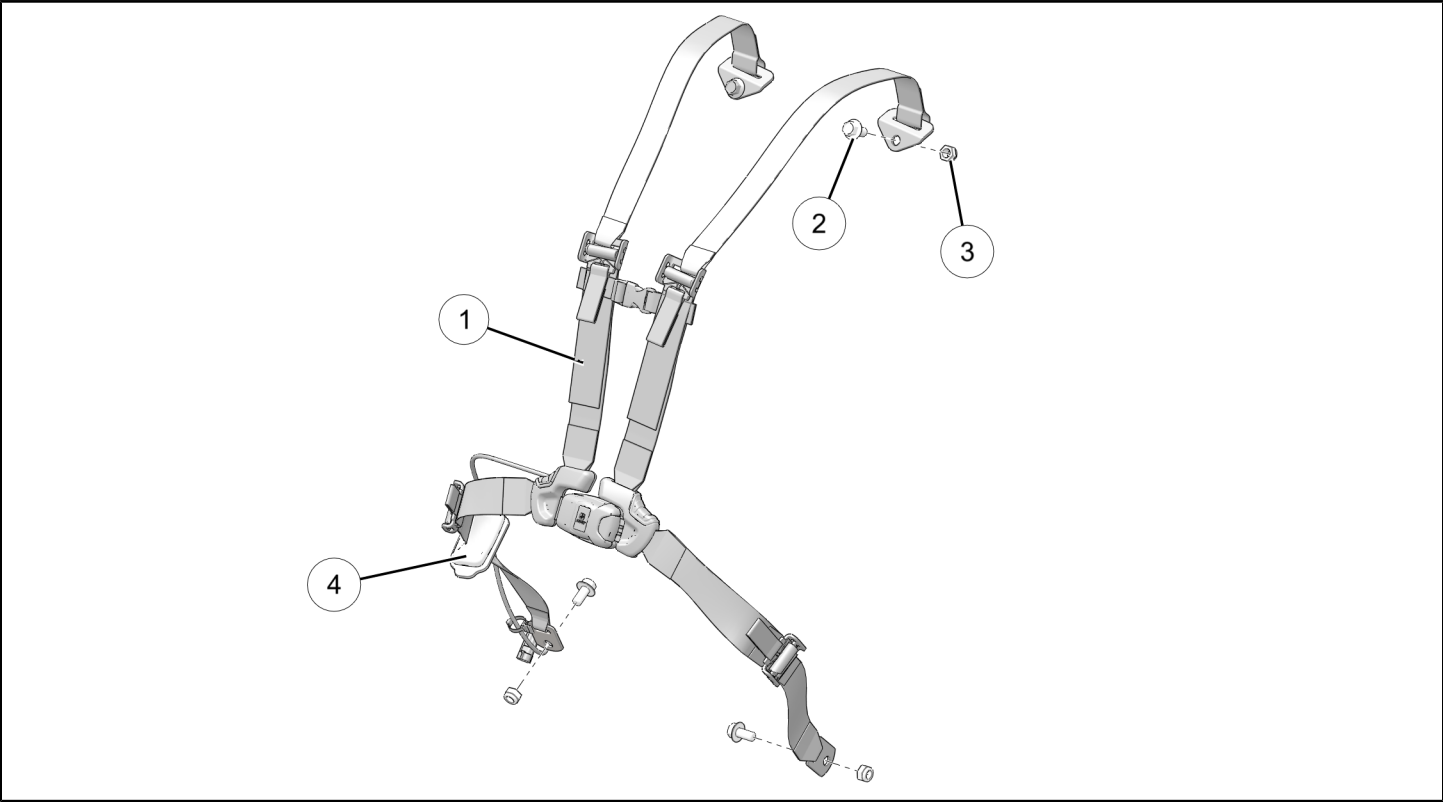

REF	QTY	PART DESCRIPTION	PART NUMBER
1	1	Harness, Four-Point	2636737
2*	4	Bolt, Hex Flange - M12 X 1.75 X 25	7519072
3*	4	Nut, Hex - M12 X 1.75	7540000
4	1	Boot	-
	1	Instructions	9927977

Items marked (*) are included in Hardware Kit PN 2207191.

TOOLS REQUIRED

- Safety Glasses
- Torque Wrench
- Socket Set, Metric
- Wrench Set, Metric

IMPORTANT


Your 4-Point Harness Kit is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris. For your safety, and to ensure a satisfactory installation, perform all installation steps correctly in the sequence shown.

ASSEMBLY TIME


Approximately 25 minutes

INSTALLATION INSTRUCTIONS


1. Shift vehicle transmission into "PARK". Turn key to "OFF" position and remove from vehicle.
2. Remove seat.
3. Remove existing seat belt.
 - a. Remove bolt (A) and nut (B) from upper LH vehicle mount bracket. Bolt and nut will not be reused.

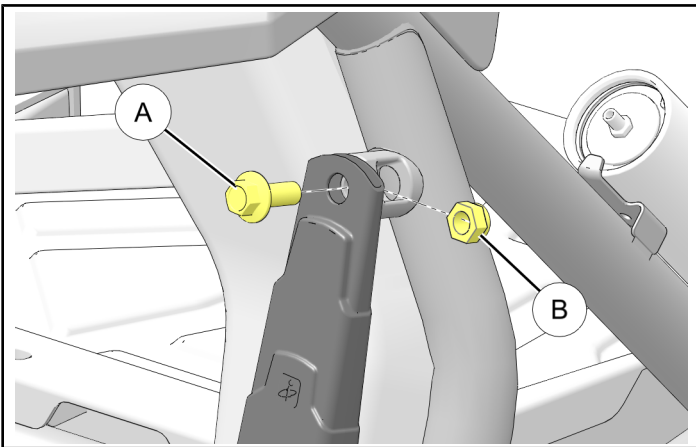



- b. Remove bolt (C) and nut (D) from lower LH vehicle mount bracket. Bolt and nut will not be reused.

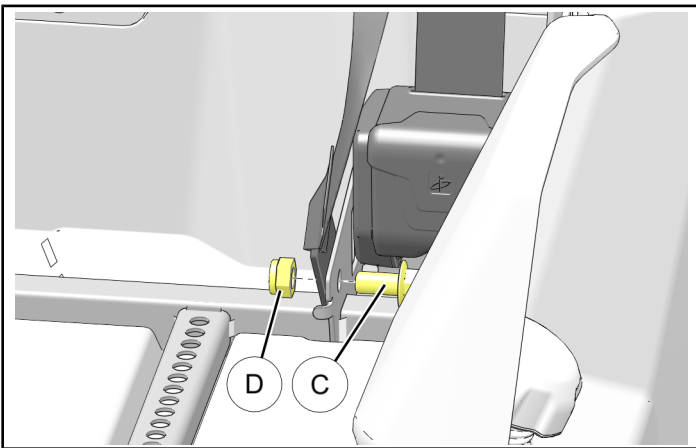

- c. Remove nut (E) from retractor unit, then remove retractor. Nut will not be reused.

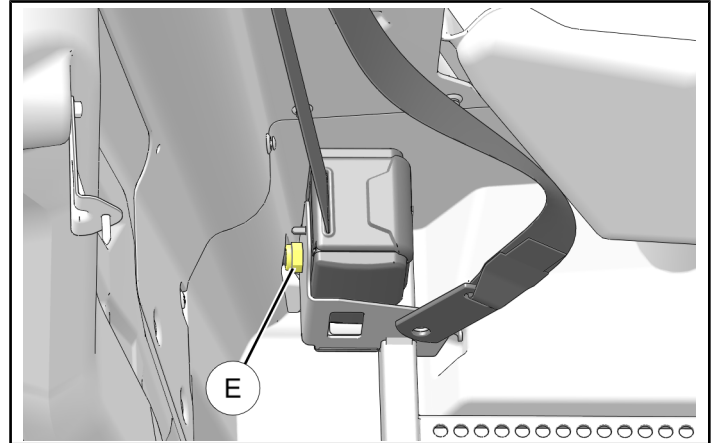


- d. Detach RH seat belt boot (F) from trim panel, then slide boot up to gain access to seat belt attach fastener.

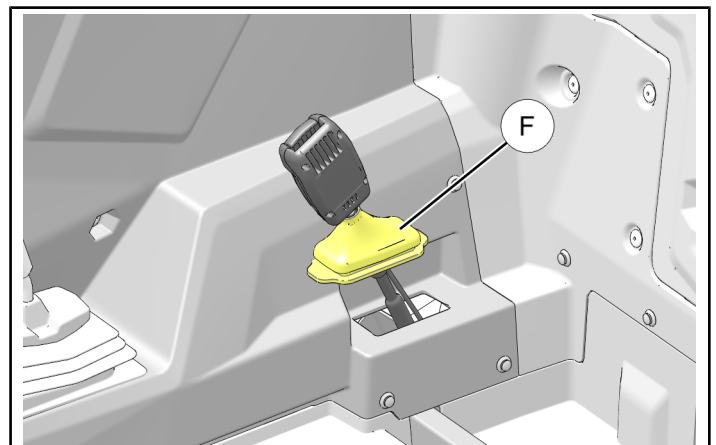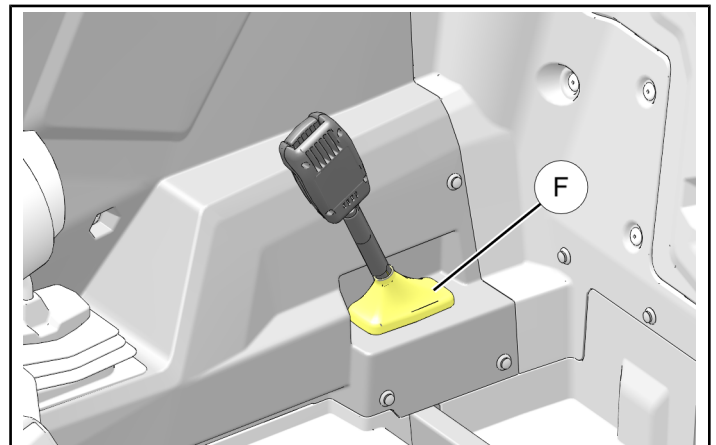

- e. Disconnect RH seat belt safety interlock harness from main vehicle harness connector ⑥. Harness connection is located in right rear wheel well.

NOTE

View looking forward and inboard from right rear wheel well.

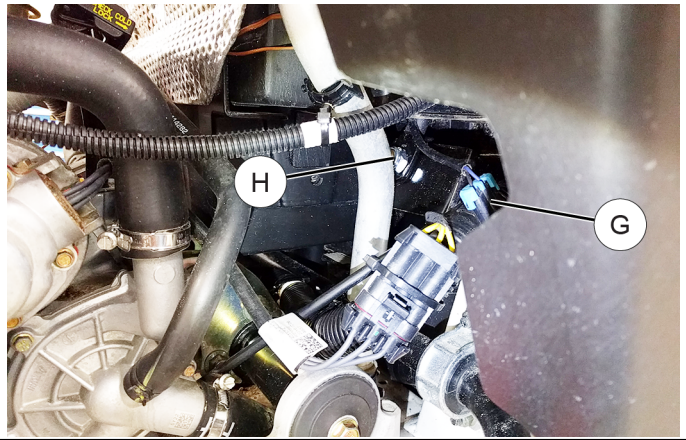


- f. Remove nut H and bolt J from lower RH vehicle mount bracket, then remove belt and safety interlock harness. Bolt and nut will not be reused.

TIP

Hold bolt head by inserting wrench through seatbelt opening in trim panel, then remove nut using socket and extension from within right rear wheel well. Polaris recommends two people for this operation.

NOTE

Boot not shown for clarity.

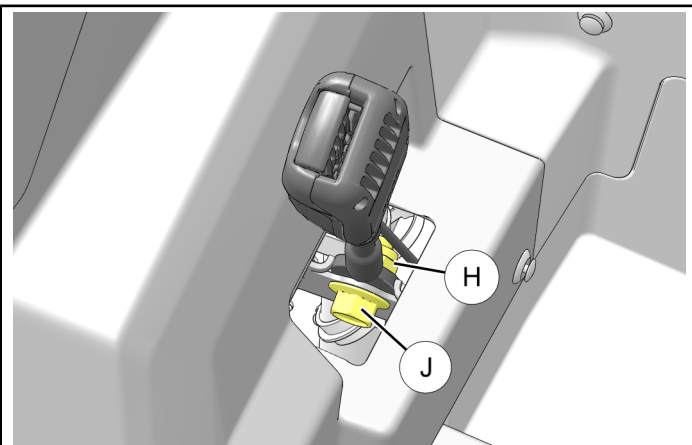

4. Install four-point harness.

- a. Route lower RH attach clip, belt, and safety interlock harness through new boot ④, then install clip to vehicle mount bracket using new bolt ② and nut ③.

Note the following differences relative to the seat belt just removed:

- Attach clip must be installed on FRONT side of mount bracket as shown
- Bolt is installed from rear, and nut is installed from front


Torque to specification.

TORQUE

40 ± 4 ft. lbs. (54 ± 5 Nm)

NOTE

Trim panel hidden for clarity.

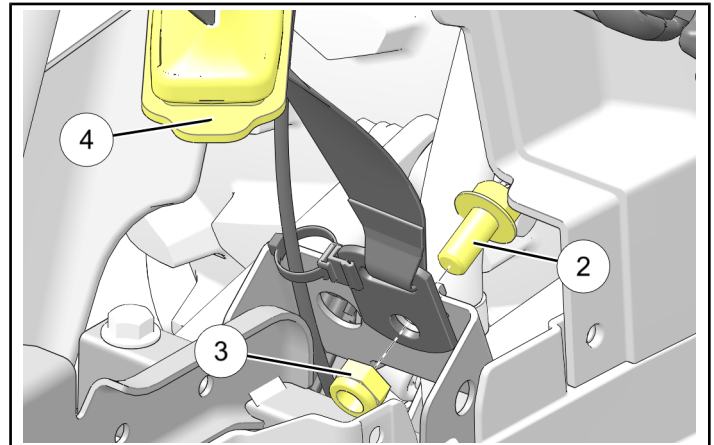


- b. Join safety interlock harness to main vehicle harness connector ⑥. See Step 3e.

- c. Install lower LH attach clip to vehicle mount bracket using new bolt ② and nut ③.

Ensure proper orientation: Attach clip is installed on INBOARD side of mount bracket. Torque to specification.

TORQUE


40 ± 4 ft. lbs. (54 ± 5 Nm)

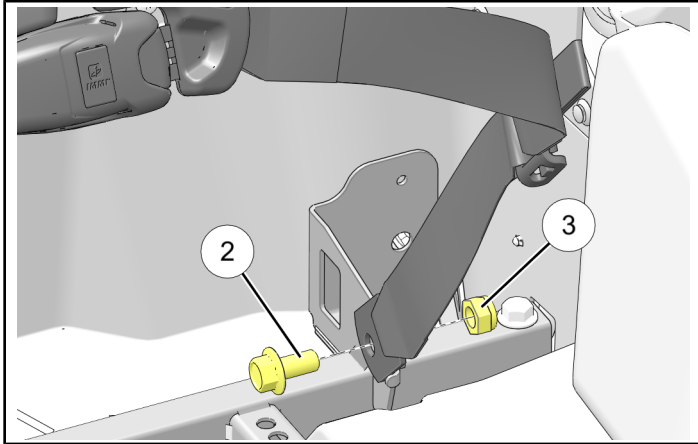

- d. Route upper LH attach clip over top of ROPs cross-member, then install to vehicle mount bracket using new bolt ② and nut ③. Repeat for upper RH attach clip. Torque to specification.

TORQUE

40 ± 4 ft. lbs. (54 ± 5 Nm)

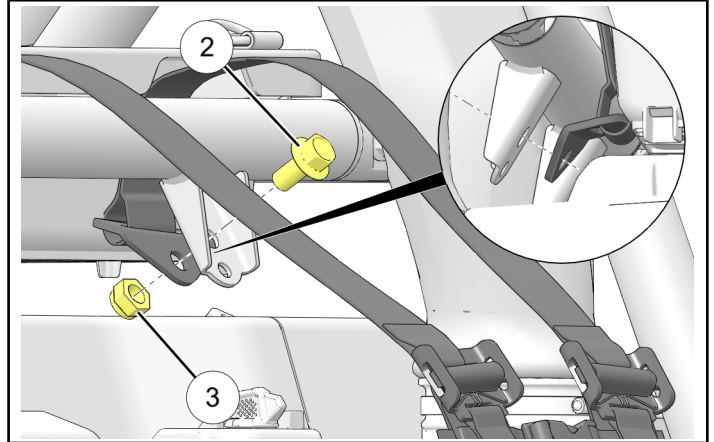

5. Reinstall seat.

FEEDBACK FORM

A feedback form has been created for the installer to provide any comments, questions or concerns about the installation instructions. The form is viewable on mobile devices by scanning the QR code or by clicking [HERE](#) if viewing on a PC.

FEEDBACK FORM

