

# CAB SEALING KIT

P/N 2879657




## Application

RANGER XP 900 CREW

Before you begin, read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference and parts ordering information.

**IMPORTANT:** Installation of this kit is most easily accomplished in the middle of the door installation process when several body parts have been removed from the vehicle. Follow the door installation instructions and make note when the steps mentions to install the foam seal kit.

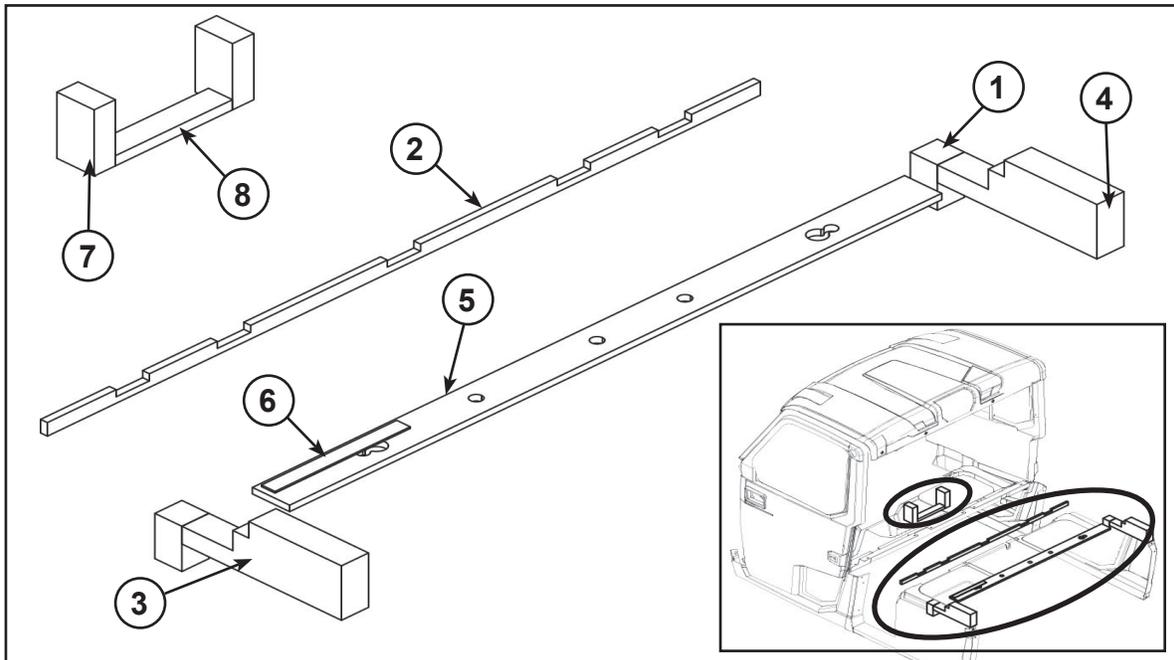

## Kit Contents:

<u>Ref</u>	<u>Qty</u>	<u>Part Description</u>	<u>Part Number</u>
1	2	B-Pillar Rear Foam Seal	5813915
2	1	Floor Back Foam Seal	5813916
3	1	B-Pillar Foam, LH	5813917
4	1	B-Pillar Foam, RH	5813918
5	1	Seat Base Foam	5813922
6	5	Top ROPS Tube Foam	5813939
7	2	Under Console Foam Seal, VERT	5814049
8	1	Under Console Foam Seal	5814050
	1	Instructions	9924912

## Tools Required:

Torx 40 (T40)


Pliers

**IMPORTANT:** Your Polaris RANGER XP 900 CREW CAB SEALING KIT is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris. For your safety, and to ensure a satisfactory installation, perform all installation steps correctly in the sequence shown. Before you begin, thoroughly review the instructions.


**APPROXIMATE ASSEMBLY TIME:** 30 minutes

**INSTALLATION INSTRUCTIONS:**

1. Place the vehicle transmission in park and remove the ignition key.
2. Remove the B-pillar covers (next to the front seat as shown) by removing two dart clips and three screws. Retain fasteners for reinstallation. Figure 1.

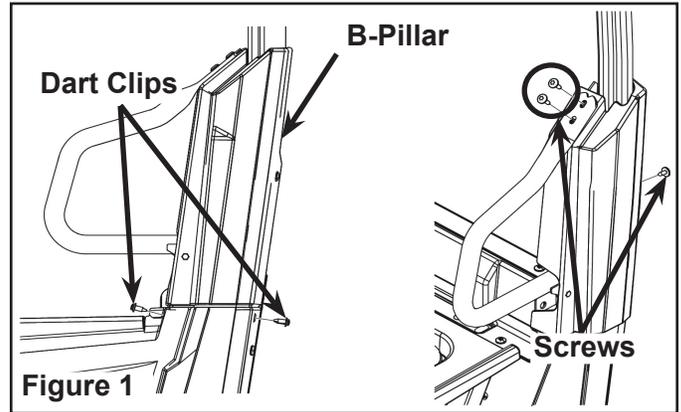


3. Remove the seats and the center console. Figure 2.

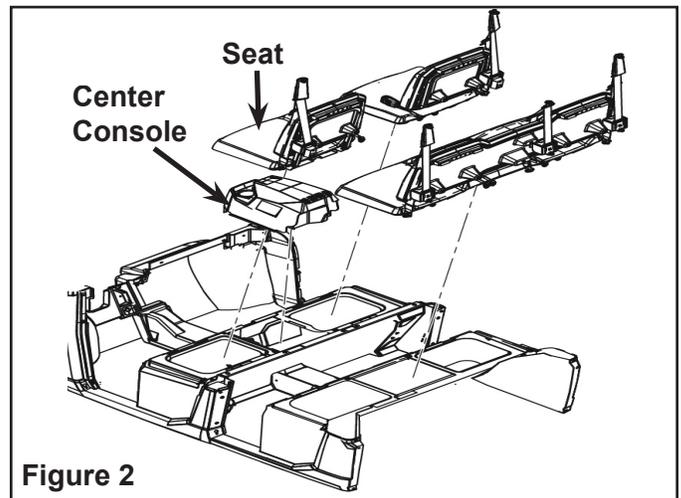


4. Install the B-pillar foam seals (PN 5813917 and PN 5813918) by removing the film backing and sliding into position. Figure 3.

**NOTE:** B-pillar foam (LH) (PN 5813917) is installed on the driver's side and B-pillar foam (RH) (PN 5813918) is installed on the passenger's side.



**NOTE:** Ensure that the gaps are filled.

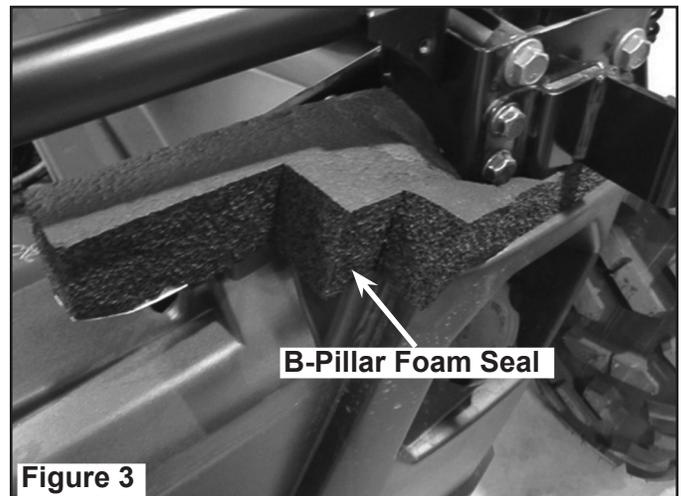

5. Push down on foam piece until it fits properly in space, forming around all plastic bends. Figure 4.

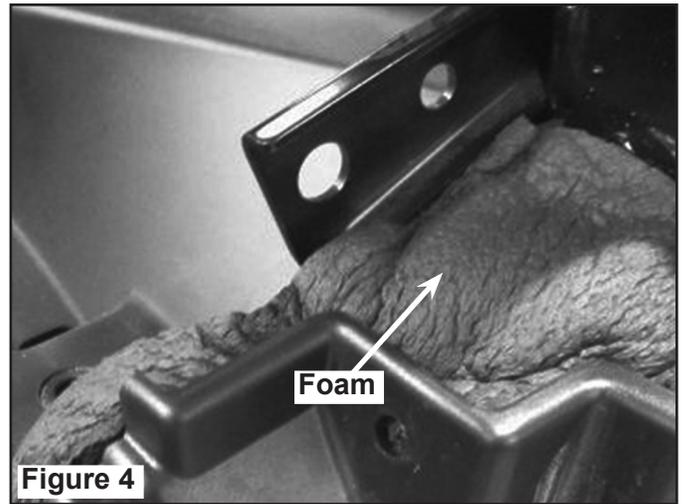


6. Install foam seals around the front seat. Figure 5.
7. Peel back the plastic of seat and install floor back foam seal (PN 5813916) along the hinge and seat support, making sure features line up. Figure 6.
8. While bins are removed install the seat base foam seal (PN 5813922) along rear of bins on metal surface lining up holes.

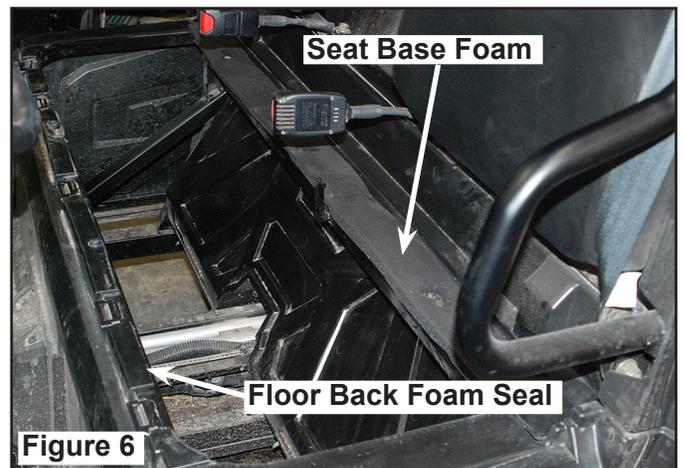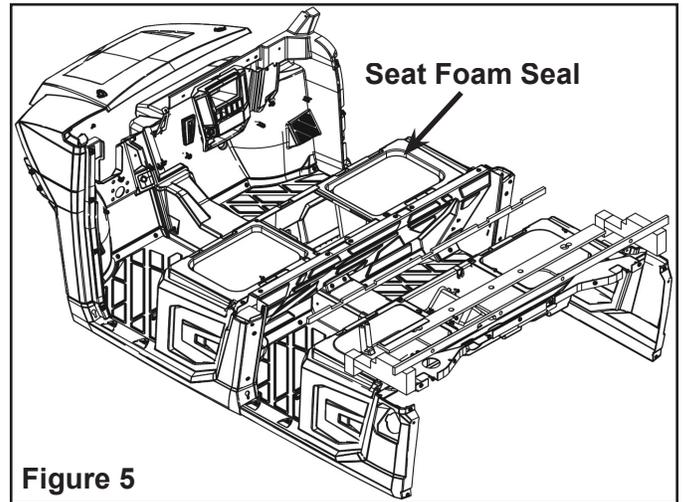


9. Install foam seals on bottom side of console.  
Figure 7.



10. Cut two small pieces of foam from the top ROPS tube foam and use it to cover the drain holes located at rear corners of the front seat. Figure 8.

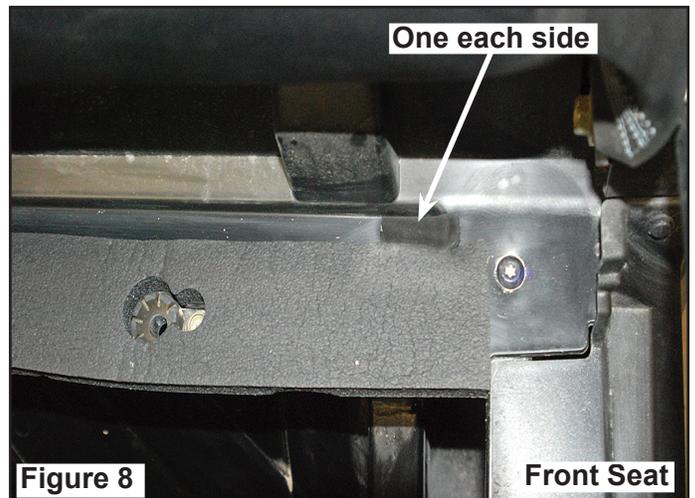

11. Reinstall console and seats. Figure 9.

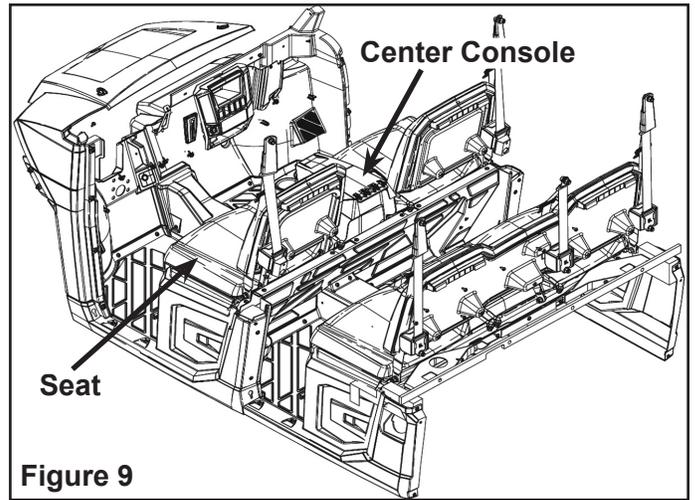

12. After installation of the B-pillar sills, cut a piece of foam seal (PN 5813939) about 3" long and place it on the backside of the top curve of the plastic B-pillar sill to seal the gap between the sill and the ROPS casting. Use other pieces of foam seal (PN 5813939) to seal off small gaps between the ROPS frame and other door components. Figure 10.

