

# HANDLE BAR BAG KIT




P/N 2880443

## APPLICATION

PRO FIT

## BEFORE YOU BEGIN

Read these instructions thoroughly and make sure all parts and tools are accounted for. Please retain these installation instructions for future reference and parts ordering information.

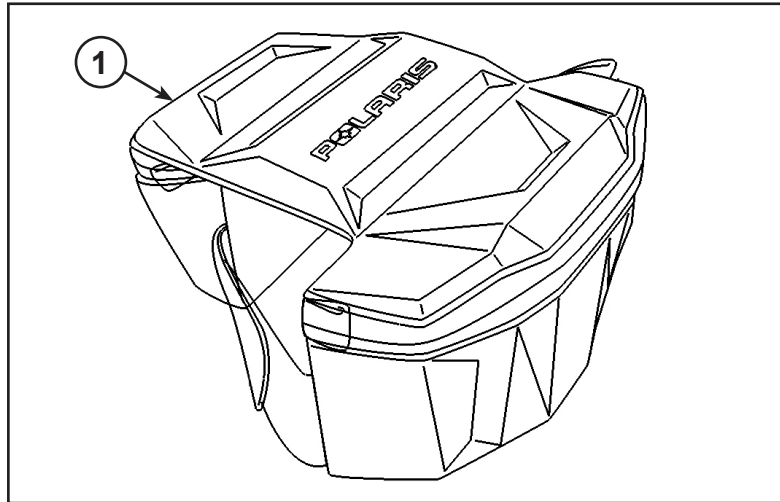

## KIT CONTENTS

Ref	Qty	Part Description	Part Number
1	1	Handle Bar Bag	2880443
	1	Instructions	9925593

## TOOLS NEEDED

No Tools Required

## APPROXIMATE ASSEMBLY TIME

2 mins

## IMPORTANT

Your Polaris HANDLE BAR BAG KIT is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris. For your safety, and to ensure a satisfactory installation, perform all installation steps correctly in the sequence shown.


**NOTE:** Do not carry sharp or pointed objects. Maximum carrying capacity 2 lbs (8.9 N).

## INSTALLATION INSTRUCTIONS

1. Place bag around plastic riser cover in center of handlebars, secure side Velcro straps (A) as shown in figure.



2. Secure Velcro strap (B) at bottom of bag around base of handlebars as shown in figure.

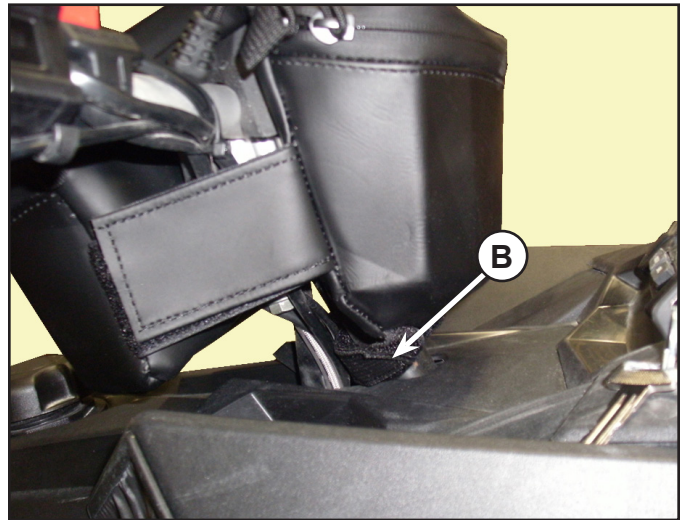

**NOTE:** Leave zippers open when bag is not in use to allow moisture inside to escape.