

SCOUT GRIP KIT



P/N 2881964

APPLICATION


All Indian Scout Motorcycles

BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference and parts ordering information.

KIT CONTENTS

This Kit includes:

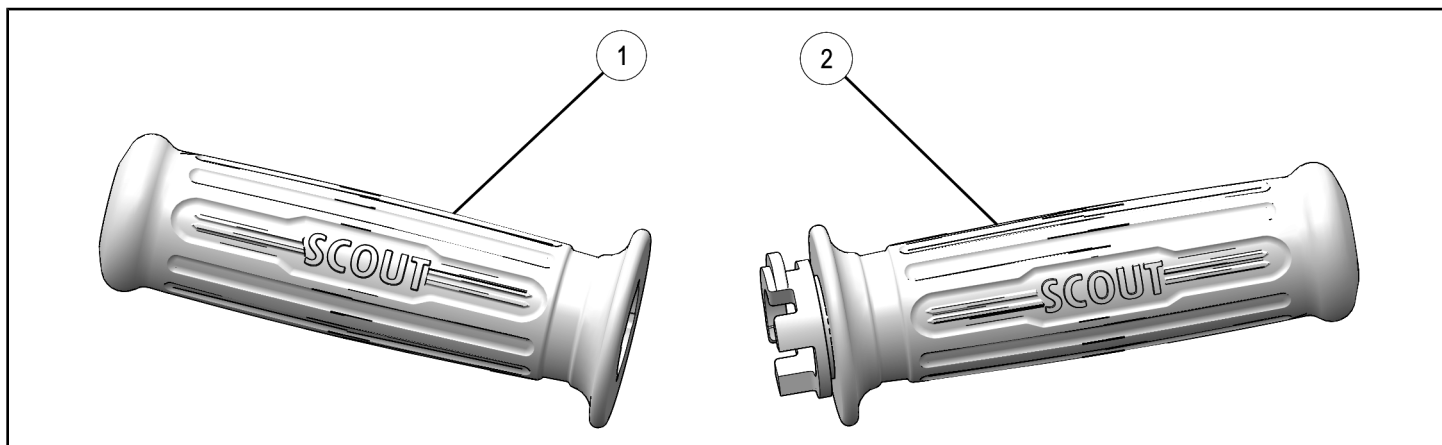

REF	QTY	PART DESCRIPTION	PART NUMBER
1	1	Grip, LH	5415910
2	1	Grip, RH	5415911
3	1	Adhesive, Grip (Not shown)	2882308
	1	Instructions	9927071

TOOLS REQUIRED

- Safety Glasses
- Screwdriver, Slotted
- Wrench, Strap
- Socket Set, Torx® Bit
- Torque Wrench

CONSUMABLES REQUIRED

- Adhesive Solvent

IMPORTANT


Your Indian SCOUT GRIP KIT is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris. For your safety, and to ensure a satisfactory installation, perform all installation steps correctly in the sequence shown.

ASSEMBLY TIME


Approximately 24 minutes

INSTALLATION INSTRUCTIONS


1. Ensure motorcycle is parked on a flat surface and vehicle is stable prior to installation.
2. Remove four Torx® bolts (A) from RH switch cube.

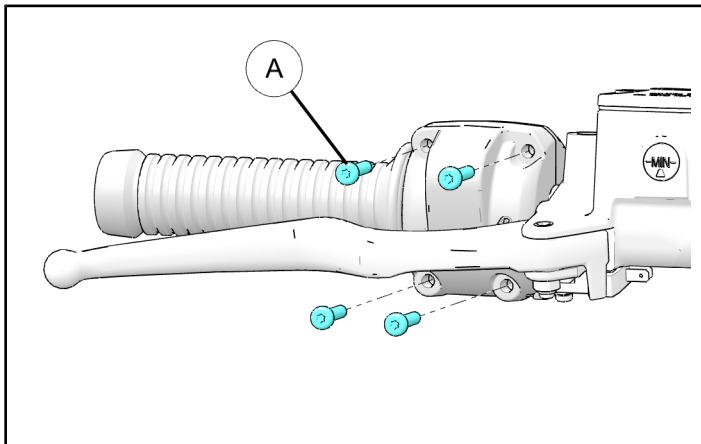

3. Separate right hand switch cube halves and slide RH throttle tube/grip (B) off handlebar.

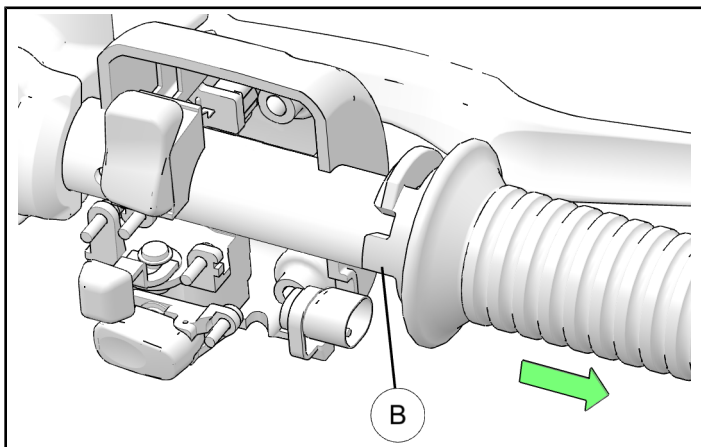


4. Install new RH throttle tube/grip (2) on handlebar. Ensure to line up slots in throttle tube (C) to throttle housing.

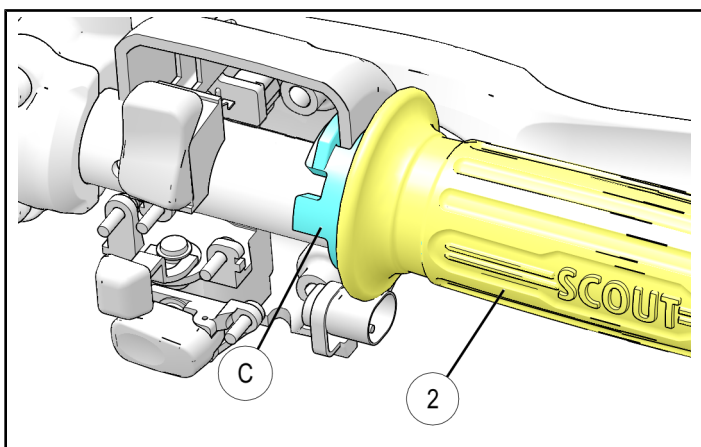


5. Reinstall four Torx® bolts (A) and tighten to specification.

TORQUE

36 in. lbs. (4 Nm)

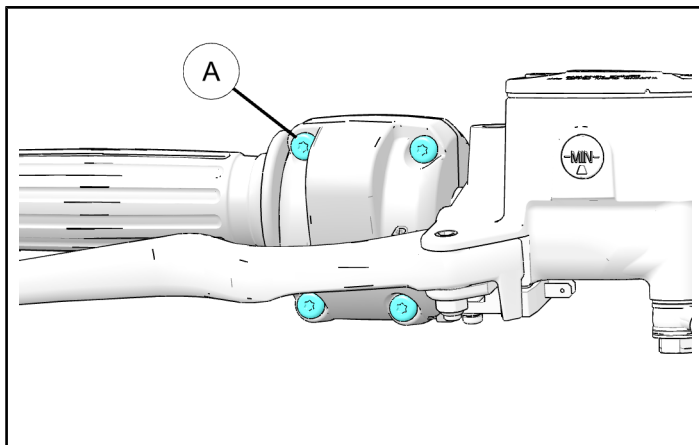

6. Remove two Torx® bolts (A) from LH switch cube and remove switch housing.

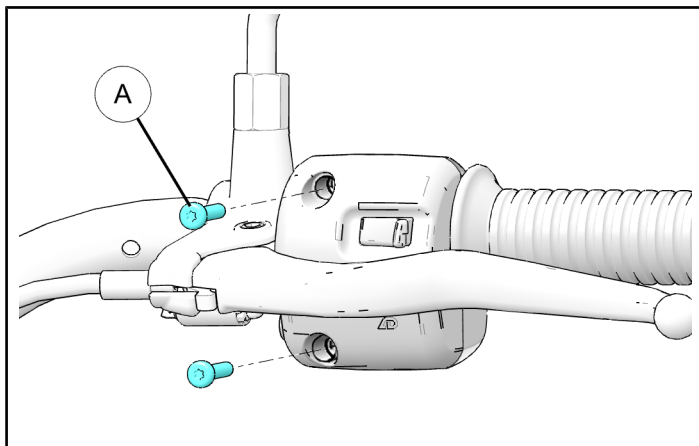


⚠ WARNING

Follow all chemical manufacturer instructions and safety precautions. Failure to follow all manufacturer instructions and precautions may result in severe injury or death.

7. Remove LH grip ① by gently inserting a straight blade screwdriver between grip and handlebar to release adhesive. Adding a small amount of adhesive solvent will help loosen adhesive.

NOTE


Be careful not to get solvent on any painted surfaces.

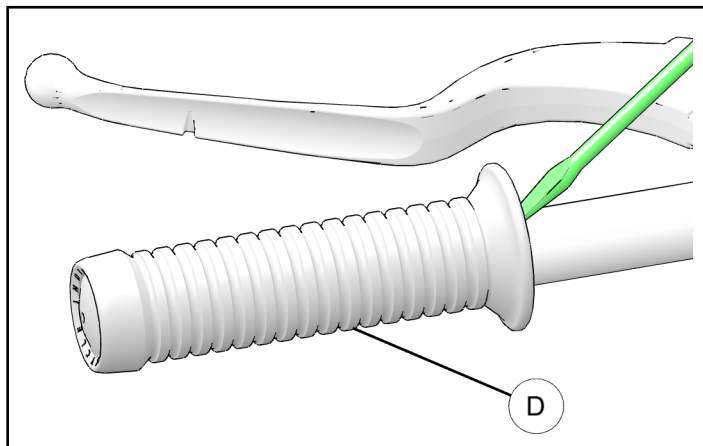

8. Firmly grasp LH grip ① and remove from handlebar.

NOTE


A strap wrench or compressed air can be used to assist in removal.

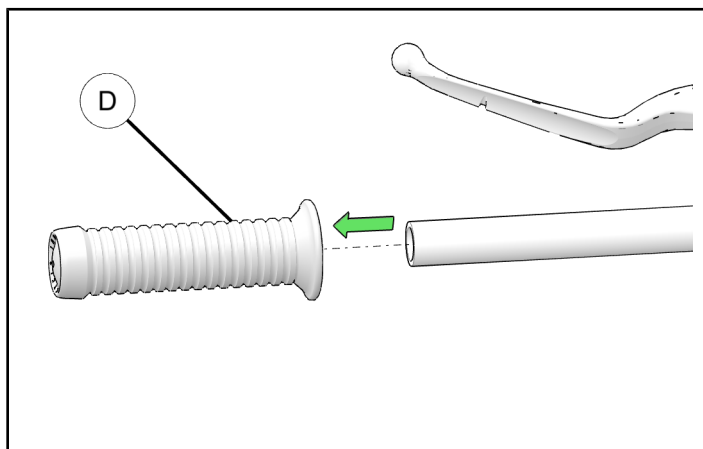


9. Remove any adhesive residue or grip material from handlebar.
10. Reinstall switch cube and tighten bolts ② to specification.

TORQUE

36 in. lbs. (4 Nm)

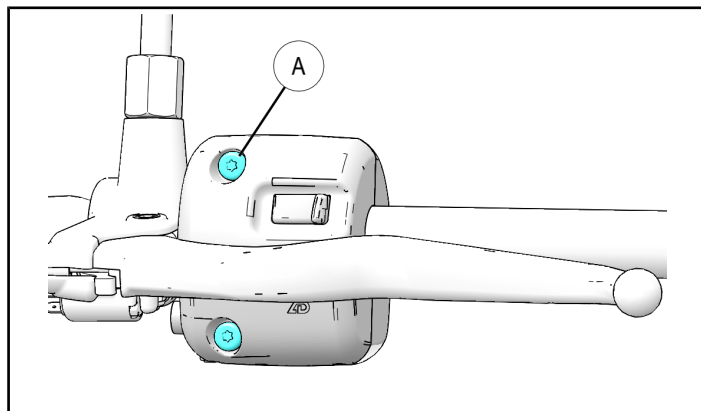

11. Apply supplied adhesive ③ to handlebar end covering as much area as possible to get adhesive distributed evenly. Quickly force LH grip ① onto handlebar until grip bottoms out against handlebar end. Quickly rotate grip to desired rotation before adhesive sets.

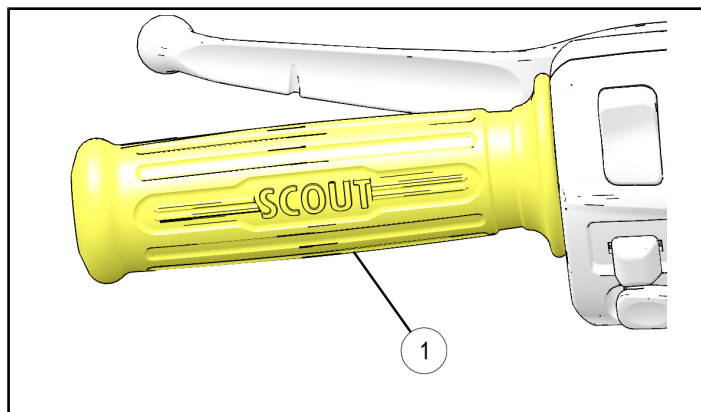

IMPORTANT

Allow motorcycle to sit for a period of 24 hours to allow glue to dry and set properly.