

TRACKER SEAT KIT



P/N 2884144-XXX, 2884145-XXX

INTERNATIONAL INSTRUCTIONS

DE DEUTSCH

Laden Sie die neuesten PDF-Anweisungen von www.indianmotorcycle.de herunter.

FR FRANÇAIS

Télécharger les dernières instructions en format PDF sur www.indianmotorcycle.fr.

IT ITALIANO

Scarica l'ultima versione delle istruzioni in formato PDF da www.indianmoto.it.

EN ENGLISH

Download the latest PDF instructions from www.indianmotorcycle.com.

ES ESPAÑOL

Descargue las instrucciones más recientes en formato PDF de www.indianmotorcycle.mx / www.indianmotorcycle.es.

ZH 中文

从www.indianmotorcycle.cn 下载最新的PDF说明。

1



2



3



4



APPLICATION

Verify accessory fitment at www.indianmotorcycle.com.

IMPORTANT

The *Tracker Seat Kit* P/N 2884144-VBA and *Seat Cowl Kit* P/N 2884145-XXX are a unique package and are not compatible with any other seat or seat cowl.

BEFORE YOU BEGIN


Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference and parts ordering information.

REQUIRED SOLD SEPARATELY

Tracker Seat Base Cowl Kit requires simultaneous installation of *Tracker Seat*, P/N 2884144-VBA (sold separately)

KIT CONTENTS

TRACKER SEAT BASE COWL P/N 2884145-XXX

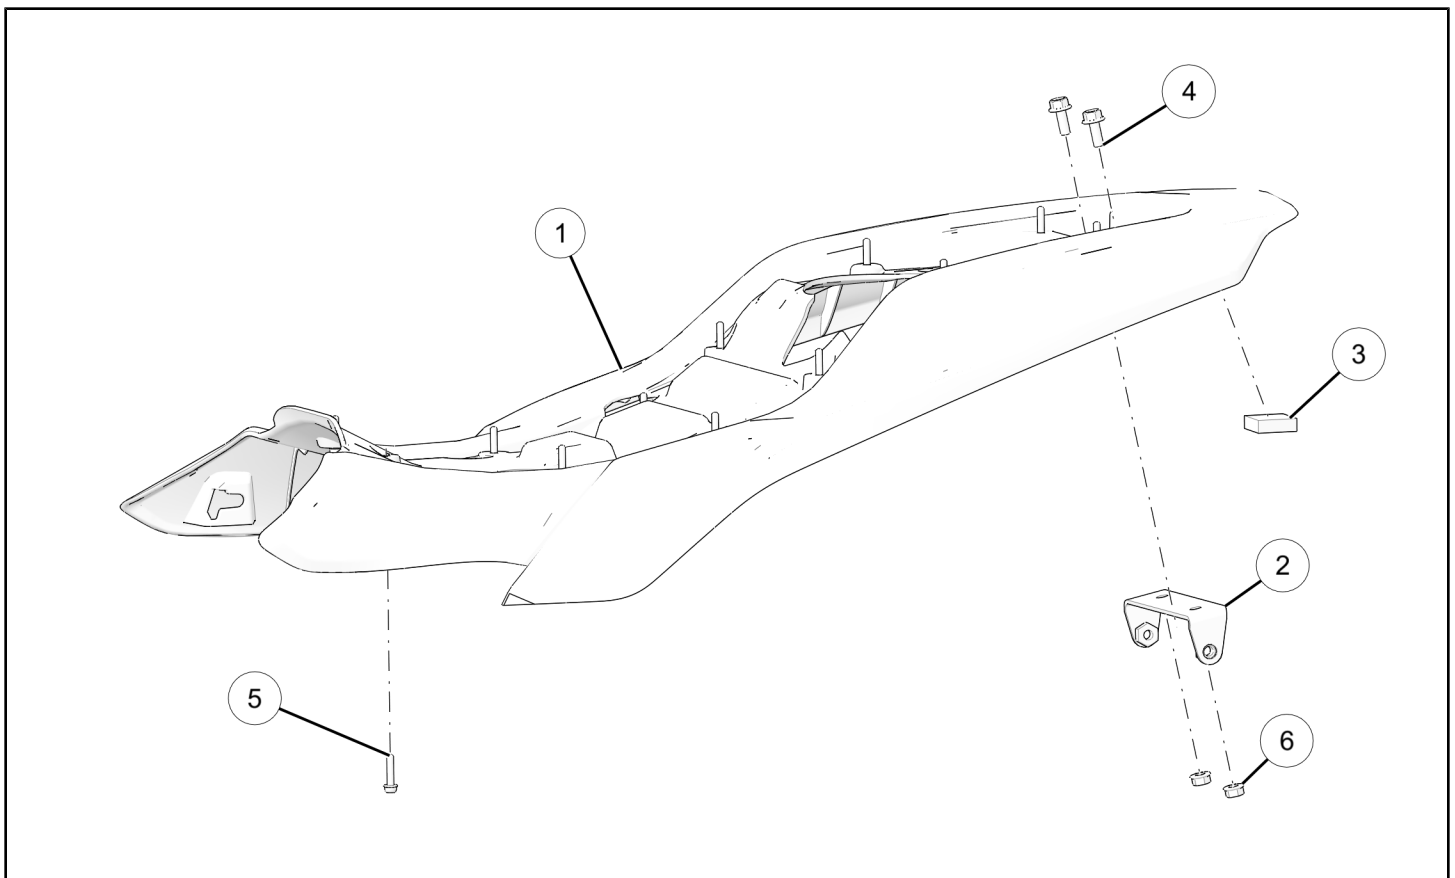


NOTE

XXX = Indian® color code (For example: 266 = Black)

REF	QTY	PART DESCRIPTION	P/N AVAILABLE SEPARATELY
1	1	Cowl–Seat, Tracker	N/A
2	1	Bracket–Mounting, Rear	5266050
3	6	Pad–8mm, Cowl, Tracker	5814859
4	2	Screw–Hex Flange, M6 1.0 x 16	7518591
5	12	Screw– Socket Washer Pan Head, #8 x 19	7520960
6	2	Nut–Hex Flange, M6 x 1.0	7710495
	1	Instructions	9929568

TRACKER SEAT P/N 2884144-VBA

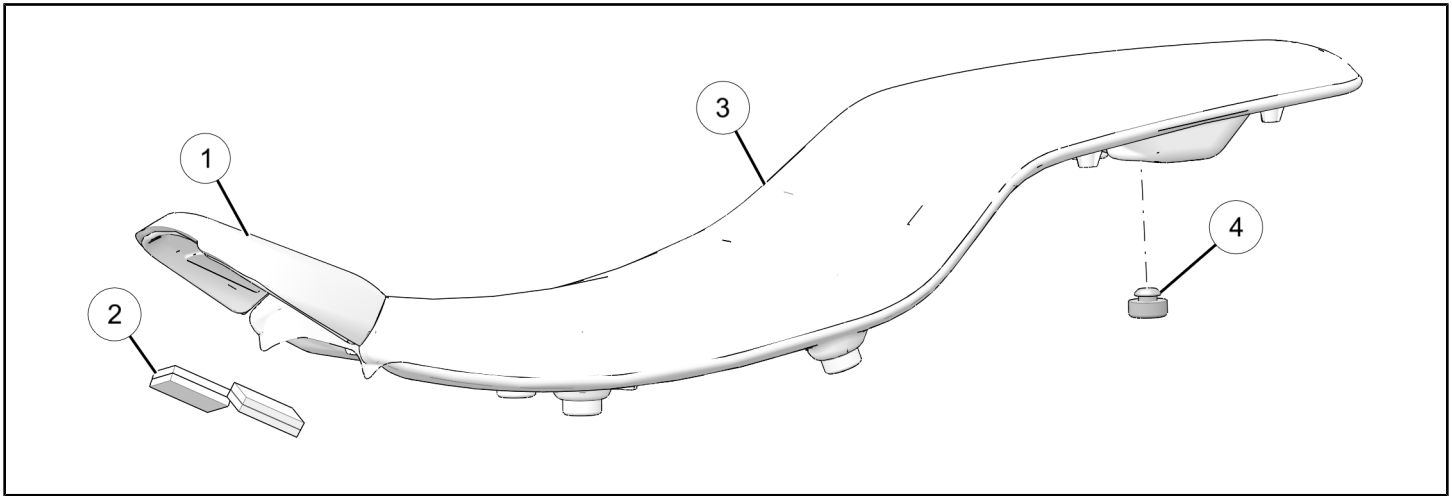

REF	QTY	PART DESCRIPTION	P/N AVAILABLE SEPARATELY
1	1	Assembly–Seat Pad, Tracker	2689448-VBA
2	4	Dual Lock–35 x 25	5814861
3	1	Assembly–Seat, Tracker	2689451-VBA
4	6	Bumper–8mm	5416653
	1	Instructions	9929568

TOOLS REQUIRED

- Safety Glasses
- Hex Key Set, Metric
- Screwdriver Set, Torx®
- Socket Set, Hex Bit, Metric
- Socket Set, Metric
- Socket Set, Torx® Bit
- Torque Wrench

CONSUMABLES REQUIRED

- Tape, Two Sided
- Isopropyl Alcohol (IPA)

IMPORTANT

Your accessory kit is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris. For your safety, and to ensure a satisfactory installation, perform all installation steps correctly in the sequence shown.

INSTALLATION INSTRUCTIONS


VEHICLE PREPARATION

GENERAL


1. Turn key or ignition switch to OFF position and remove key.
2. Ensure motorcycle is parked on a flat surface, kickstand is fully extended, and vehicle is stable prior to installation.

SEAT REMOVAL


1. Remove and retain two handle fasteners (A) to remove passenger handle from each side of motorcycle frame.

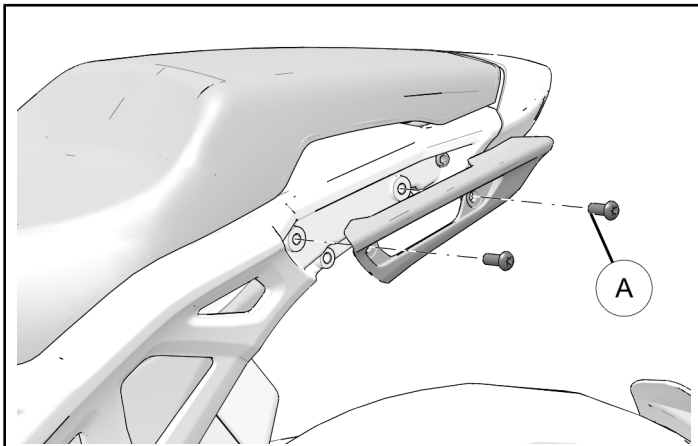

2. Remove and retain one seat fastener (B) from each side of motorcycle frame.

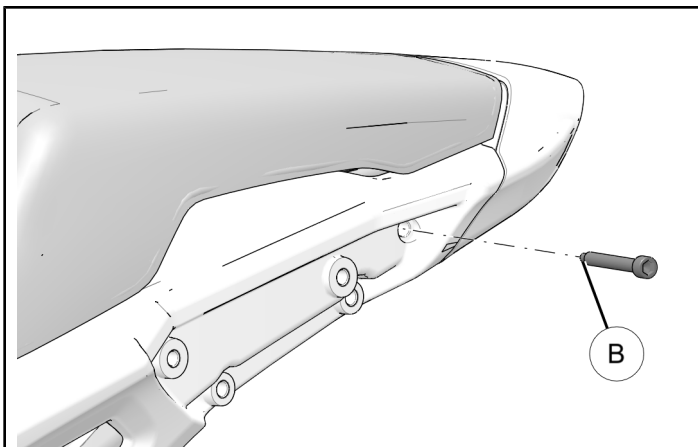

3. Slide seat back-and-up, to ensure seat slides out of mounts, to remove from motorcycle.

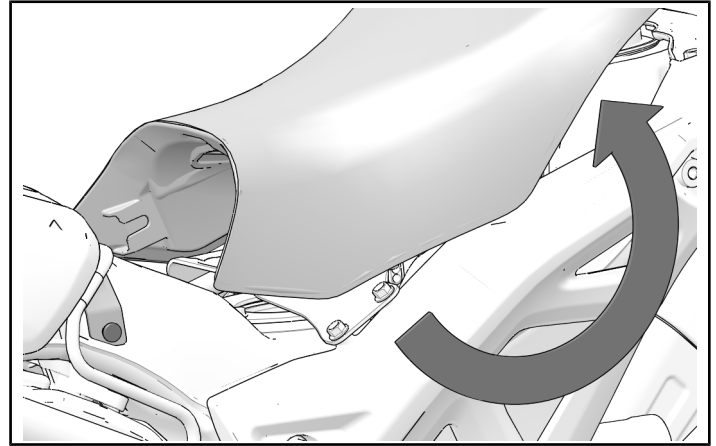

ACCESSORY INSTALLATION

SEAT AND COWL ASSEMBLY


1. Install mounting bracket (2) to seat cowl (1) with two bracket fasteners (4) and two nuts (6)

TORQUE


Bracket Fasteners (4):
36 in-lbs (4 N·m)

NOTE

Note orientation of mounting bracket in graphic. Tabs of bracket should be angled forward.

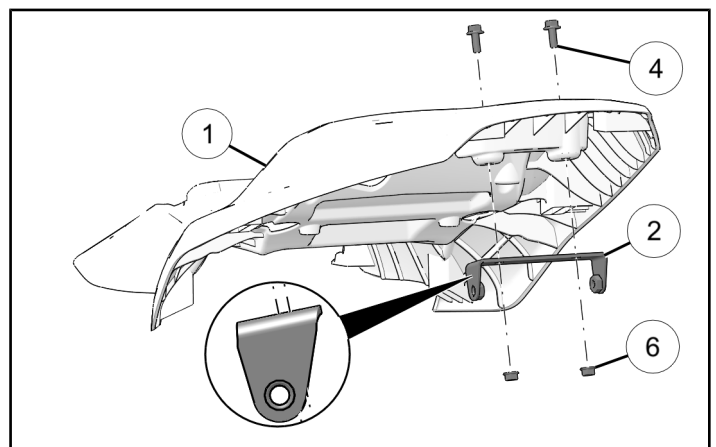


2. Place tracker seat ③ atop seat cowl ①.

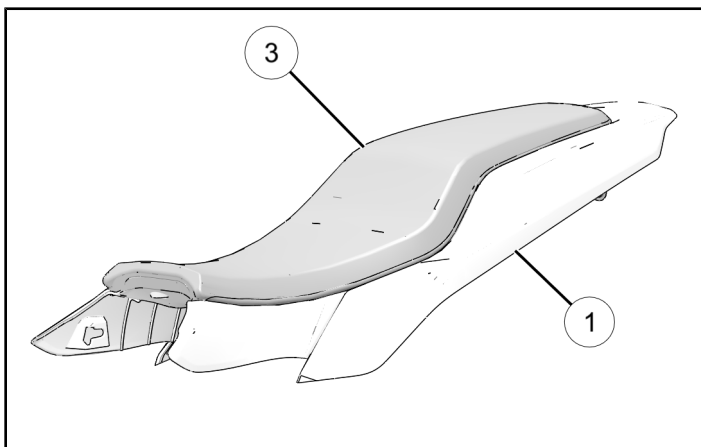

3. Flip seat and cowl upside down on clean surface. Loosely install seat to cowl with twelve seat fasteners ⑤ before torquing fasteners.

TORQUE

Seat Fasteners ⑤:
8 ft-lbs (11 N·m)

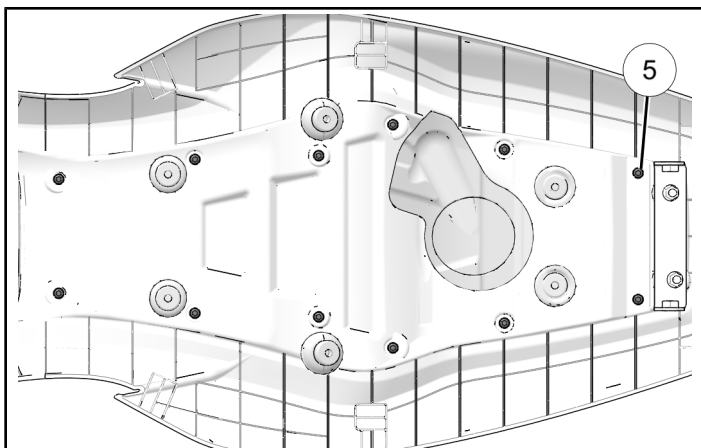


SEAT AND COWL ASSEMBLY


1. Use isopropyl alcohol to clean application surface of any dirt or debris. Allow surface to dry completely before installing seat.

⚠ WARNING


Isopropyl alcohol is hazardous to your health. See isopropyl alcohol packing for proper handling instructions, including recommended personal protective equipment such as goggles and chemical resistant gloves.

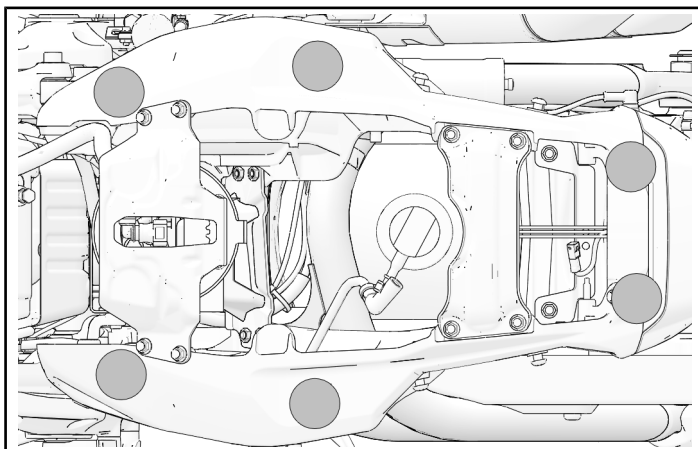


2. Place double-sided tape on six pads ③ and attach to ridges of seat cowl. Peel backing in preparation to apply to sub-frame. Ensure adhesive faces upward prior to installation.

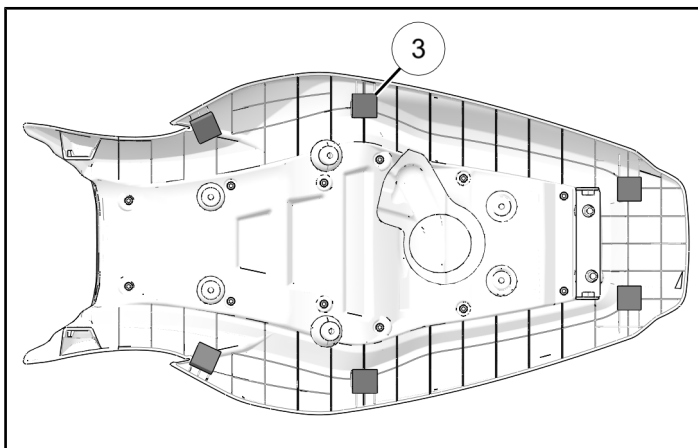


- Slide front of seat cowl into position and engage with front seat bracket. Lower adhesive pads down onto sub-frame.

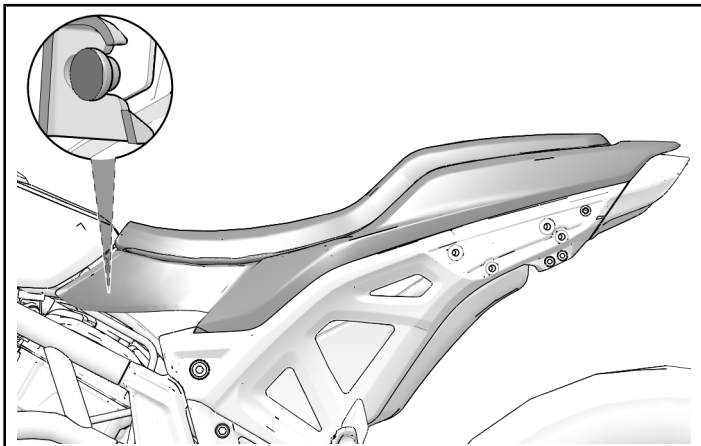

- Apply pressure at six pad locations to ensure a secure fit onto sub-frame.

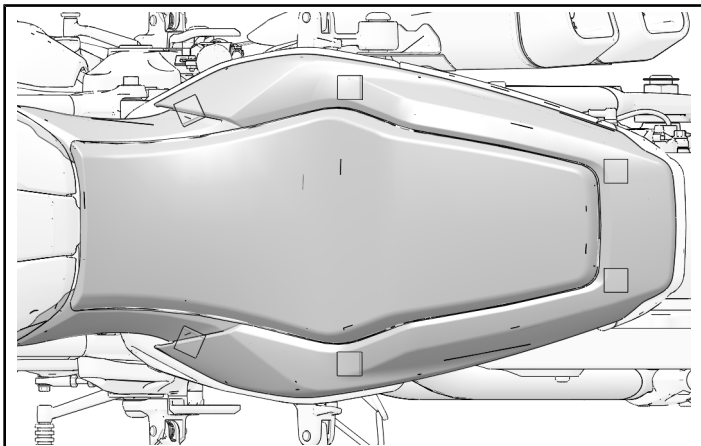


- Remove seat and apply pressure to each pad for at least 10 seconds. Remove double-sided tape.

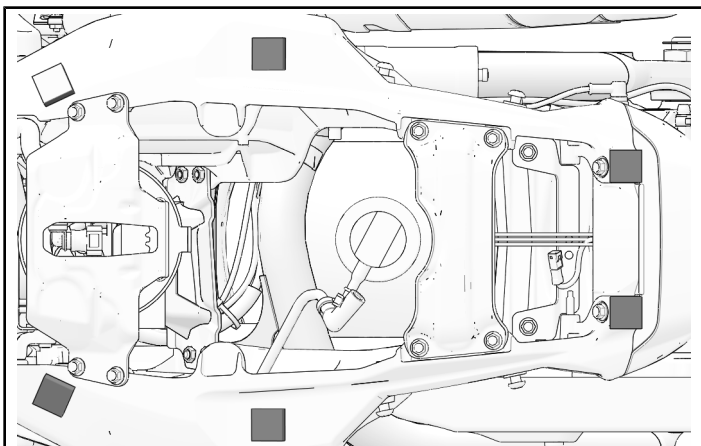

- Reinstall seat and secure seat-rear to sub-frame with two retained seat fasteners (A).

TORQUE

Seat Fasteners (Sub-Frame to Seat Brackets) (A):
84 in-lbs (9.5 N·m)

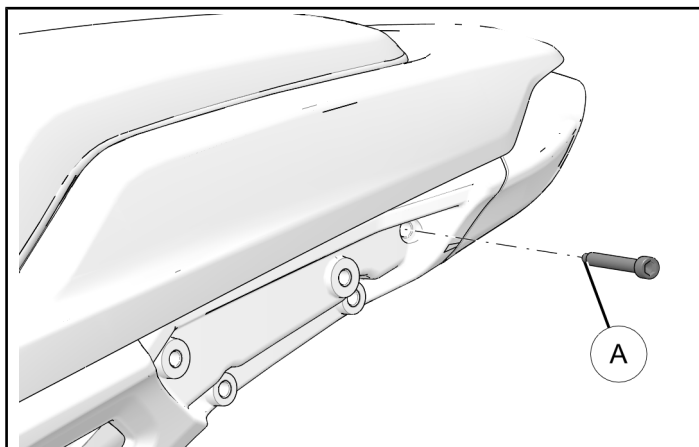


PASSENGER HANDLE INSTALLATION

- Install passenger handle with two retained fasteners (A).

TORQUE

Passenger Handle Fasteners (A):
19 ft-lbs (26 N·m)

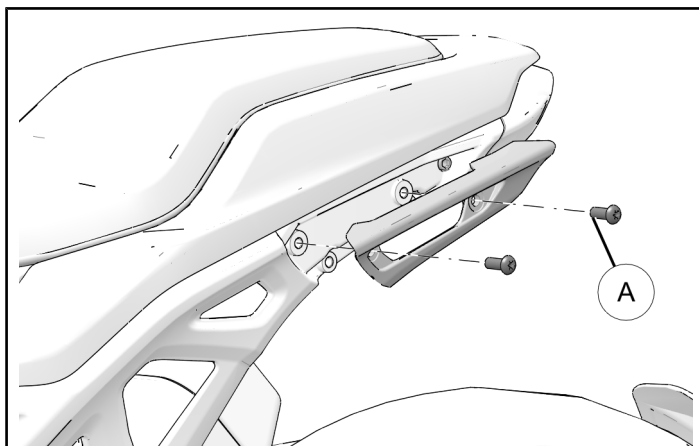

- Repeat this section for opposite side.


SEAT PAD INSTALL

1. Use isopropyl alcohol to clean application surface of any dirt or debris. Allow surface to dry completely before applying hook-and-loop fasteners ② to seat pad and tank covers.


⚠ WARNING

Isopropyl alcohol is hazardous to your health. See isopropyl alcohol packing for proper handling instructions, including recommended personal protective equipment such as goggles and chemical resistant gloves.

2. Peel backing from hook-and-loop fasteners ② and apply each one within marked indices on seat pad. Press each pad firmly for at least 10 seconds to adhere to seat pad.

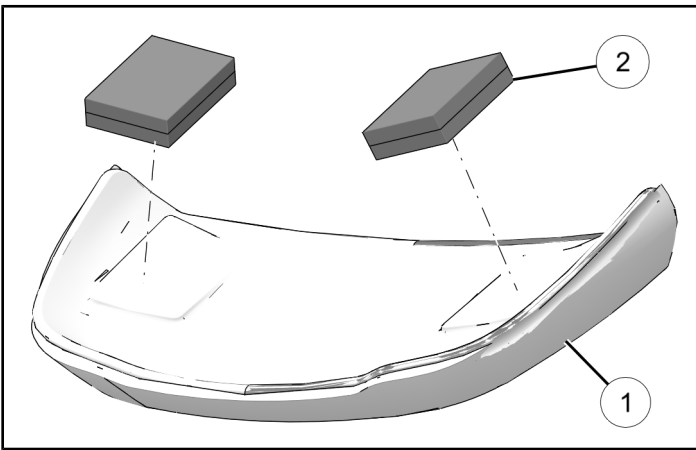

3. Peel backing from other side of hook-and-loop fasteners ②. Line seat pad ① with tracker seat and firmly press seat pad on tank cover to install. Remove seat pad and apply pressure to hook-and-loop fastener to completely adhere to tank cover.

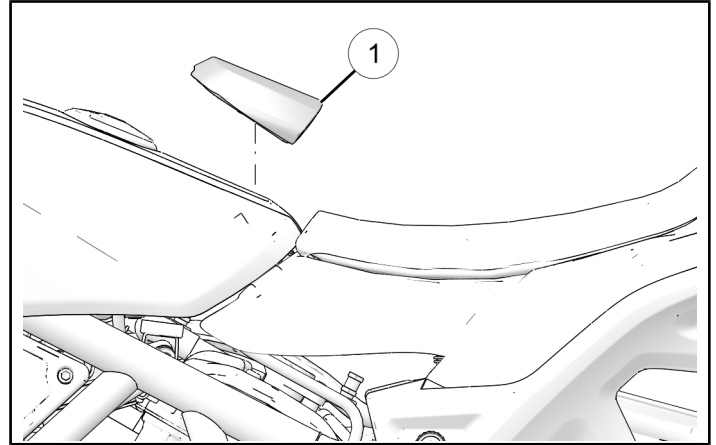

FEEDBACK FORM

A feedback form has been created for the installer to provide any comments, questions or concerns about the installation instructions. The form is viewable on mobile devices by scanning the QR code or by clicking [HERE](#) if viewing on a PC.

