

FRONT MUDGUARD KIT



P/N 2883501-XXX

INTERNATIONAL INSTRUCTIONS

DE DEUTSCH

Laden Sie die neuesten PDF-Anweisungen von www.indianmotorcycle.de herunter.

FR FRANÇAIS

Télécharger les dernières instructions en format PDF sur www.indianmotorcycle.fr.

IT ITALIANO

Scarica l'ultima versione delle istruzioni in formato PDF da www.indianmoto.it.

EN ENGLISH

Download the latest PDF instructions from www.indianmotorcycle.com.

ES ESPAÑOL

Descargue las instrucciones más recientes en formato PDF de www.indianmotorcycle.mx / www.indianmotorcycle.es.

ZH 中文

从www.indianmotorcycle.cn 下载最新的PDF说明。

1



2



3



4



APPLICATION

Verify accessory fitment at www.indianmotorcycle.com.


IMPORTANT

The Indian Motorcycle® FTR™ 1200 *Front Mudguard Kit* P/N 2883501 is not compatible with *Fork Guards Kit* P/N 2884103.

BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference and parts ordering information.

KIT CONTENTS

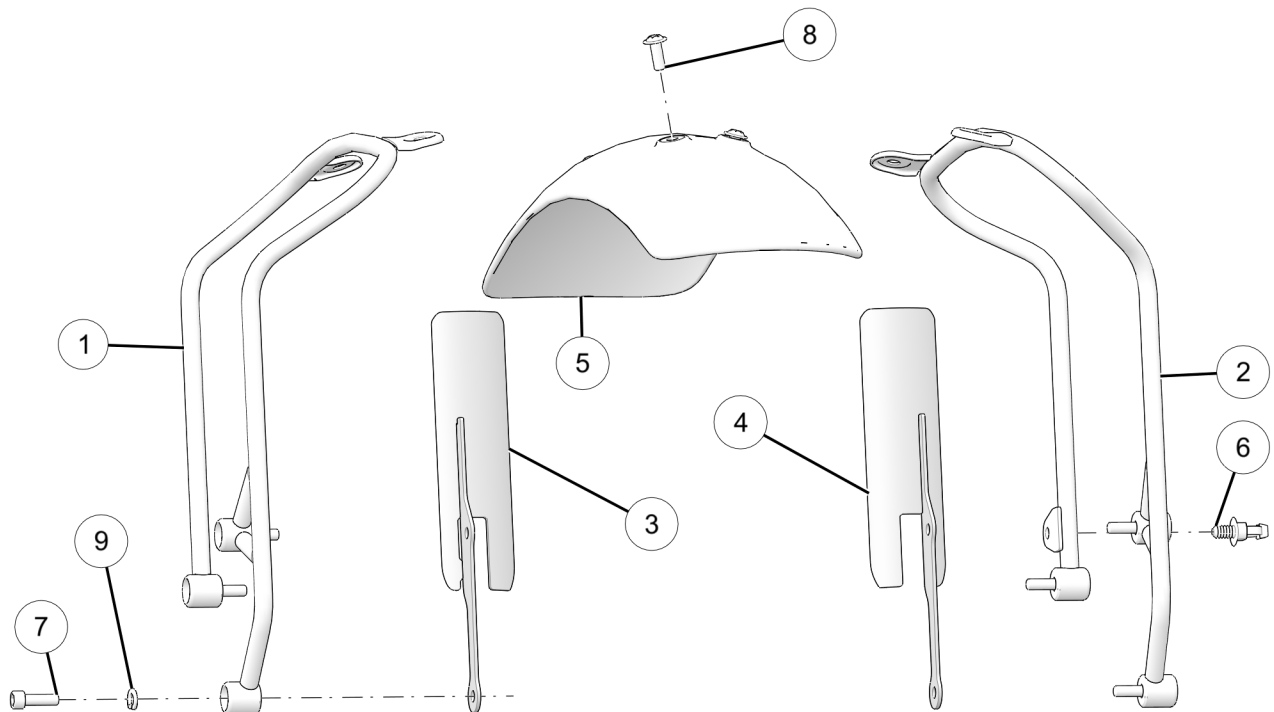

REF	QTY	PART DESCRIPTION	P/N AVAILABLE SEPARATELY
1	1	Weld-Mudguard Mount, RH	N/A
2	1	Weld-Mudguard Mount, LH	N/A
3	1	Weld-Fork Guard, RH	N/A
4	1	Weld-Fork Guard, LH	N/A
5	1	Mudguard-Front	N/A
6	1	Clip-Routing	7081496
7	6	Screw-Socket Head, M6 x 1.0 x 20	7517384
8	4	Screw-Flat Head, M6 x 1.0 x 16	7520560

REF	QTY	PART DESCRIPTION	P/N AVAILABLE SEPARATELY
9	6	Washer-Lock, 6 mm	7552616
	1	Instructions	9929483

TOOLS REQUIRED

- Safety Glasses
- Hex Key Set, Metric
- Hex Key Set, Ball End, Metric
- Screwdriver Set, Torx®
- Socket Set, Hex Bit, Metric
- Socket Set, Torx® Bit
- Torque Wrench

IMPORTANT

Your accessory kit is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris. For your safety, and to ensure a satisfactory installation, perform all installation steps correctly in the sequence shown.

INSTALLATION INSTRUCTIONS


VEHICLE PREPARATION

GENERAL

1. Turn key or ignition switch to OFF position and remove key.
2. Ensure motorcycle is parked on a flat surface, kickstand is fully extended, and vehicle is stable prior to installation.


FRONT MUDGUARD REMOVAL

1. Remove two screws **A** from each side of front mudguard. Remove mudguard from motorcycle.

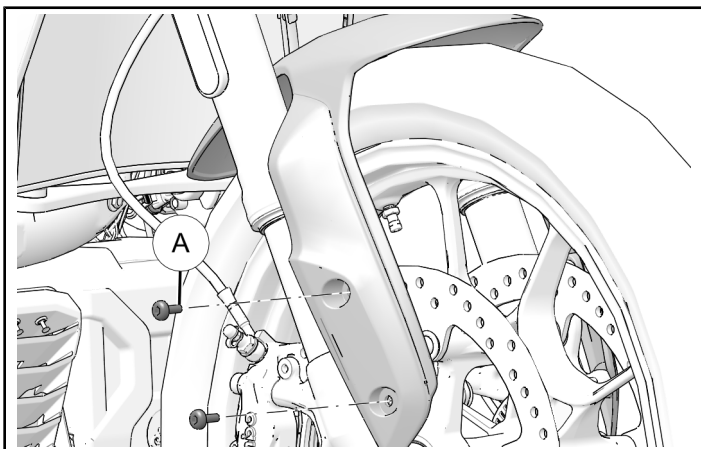


ACCESSORY INSTALLATION


1. Remove and discard screw and clip, holding brake line.

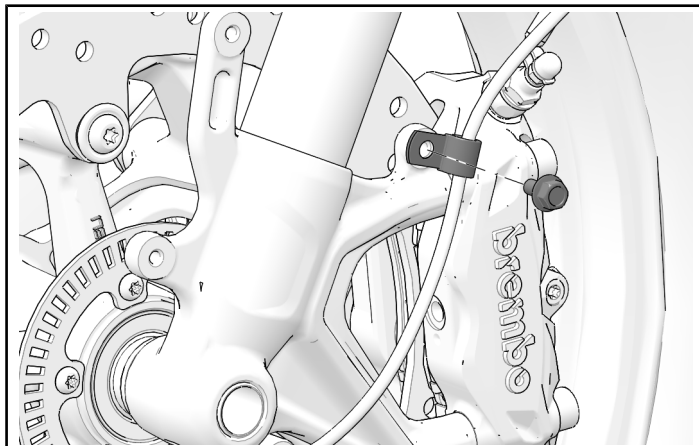

2. Loosely install LH mudguard mount **2** and LH fork guard **4** with three washers **9** and three screws **7**.

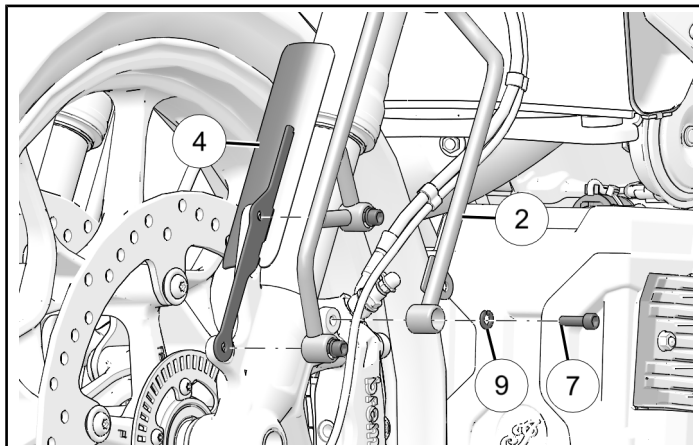

3. Loosely install RH mudguard mount ① and RH fork guard ③ with three washers ⑨ and three screws ⑦.

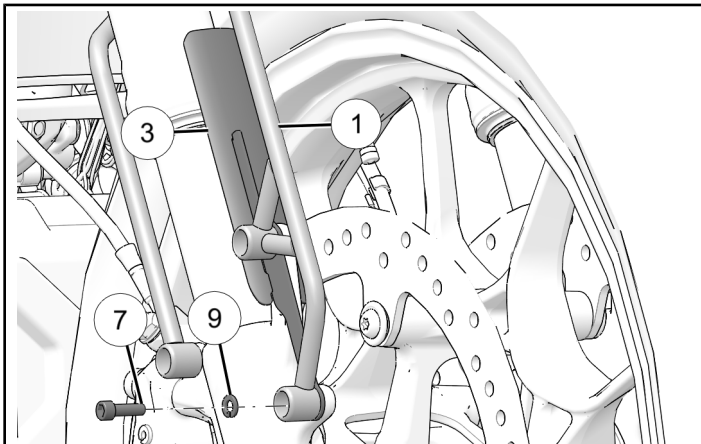


4. Place mudguard ⑤ beneath mudguard mounts and loosely install with four mud guard fasteners ⑧ prior to torquing.

CAUTION

Ensure mudguard finish is not damaged or scratched during installation.

TORQUE

Mud Guard Fasteners ⑧:
96 in-lbs (11 N·m)

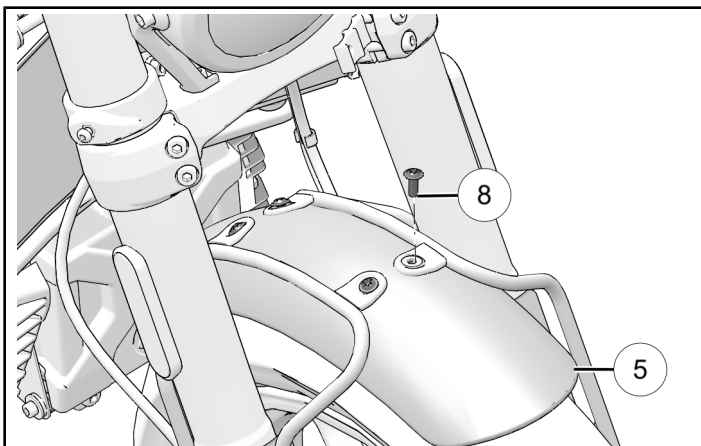

FEEDBACK FORM

A feedback form has been created for the installer to provide any comments, questions or concerns about the installation instructions. The form is viewable on mobile devices by scanning the QR code or by clicking [HERE](#) if viewing on a PC.

5. Torque mudguard mount hardware, loosely installed in steps 2 and 3 of this section.

TORQUE

Mud Guard Bracket Fasteners ⑦:
96 in-lbs (11 N·m)

6. Install routing clip ⑥ into LH mudguard mount ② and attach cable tie portion to brake line.

