

GLACIER PRO BLADE (72") KIT


P/N 2879874

Application

PLOW FRAME (PN 2879103)



Before you begin, read these instructions twice and check to be sure all parts and tools are accounted for. The following instructions contain details required to install the contents of this kit.

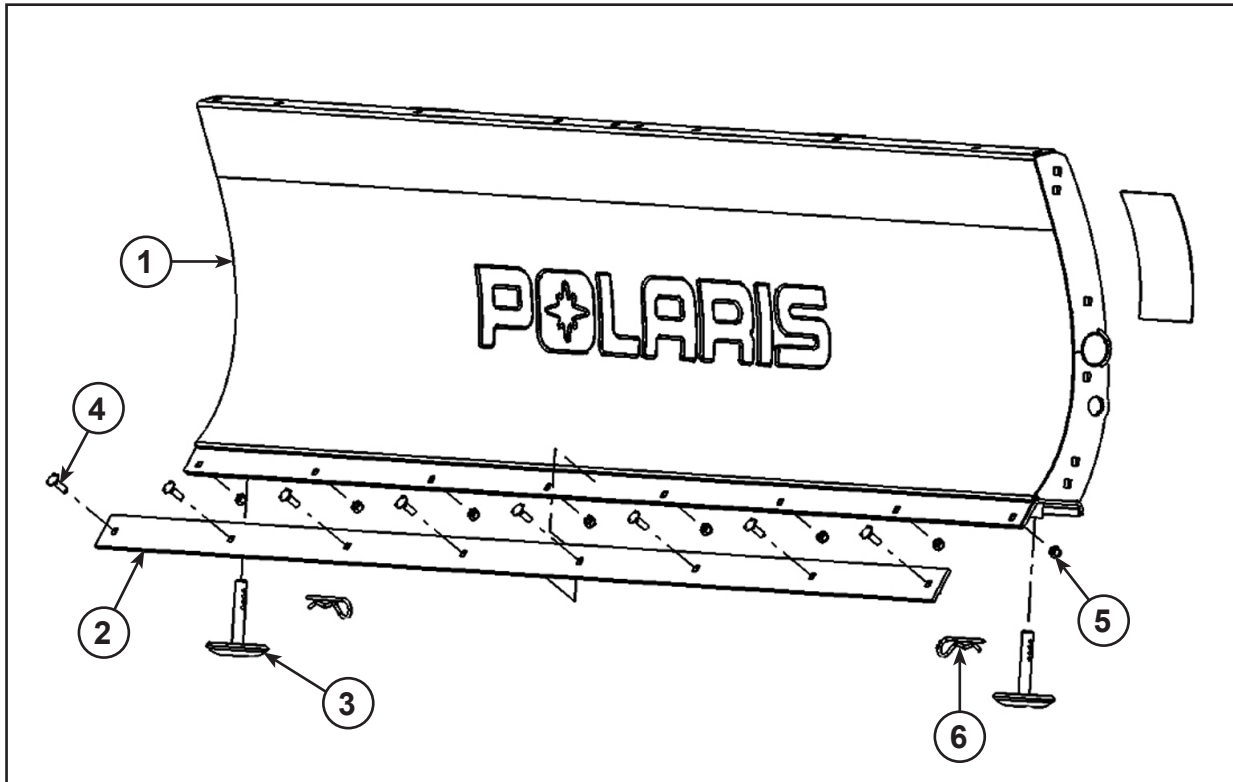

Kit Contents:

<u>Ref</u>	<u>Qty</u>	<u>Part Description</u>	<u>Part Number</u>
1	1	Blade (72")	-
2	1	Wear Bar	2204976
3	2	Skid Shoe	2205223
4	8	M8-1.25 x 25 mm Carriage Bolt	-
5	8	M8-1.25 Nylon Nut	-
6	2	R-pin	2205494
	1	Instructions	9924907

Tools Required:

13 mm Wrench and Socket

APPROXIMATE ASSEMBLY TIME: 30 minutes

IMPORTANT: Your Polaris GLACIER PRO BLADE (72") KIT is exclusively designed for your vehicle. Before beginning, please read these instructions and make sure that all parts and tools are at your disposal. Keep these instructions for future reference or for any information requests. To facilitate installation, make sure that your vehicle is clean and free of debris.

SPARE KITS		Wear Bar Kit (PN 2204976)	Skid Shoe Kit (PN 2205223)	R-Pin Kit (PN 2205494)
REF.	DESCRIPTION			
1	Blade (72 “)			
2	Wear bar	1x		
3	Skid shoe		2x	
4	M8-1.25 x 25 mm carriage bolt	8x		
5	M8-1.25 Nylon nut	8x		
6	R-pin		2x	2x

Other Accessory Kits Available For Purchase Separately:

1. Plow Markers Kit (PN 2872726)
2. Curb Finder Kit (PN 2879872)
3. Hardened Wear Bar Kit (PN 2879875)
4. Rubber Snow Deflector Flap Kit (PN 2858541)