

Contents

Select Language

Powered by Google Translate

Rear Bumper Kit

P/N 2884356, 2884357, 2884358; 2891874

Before You Begin

Before beginning assembly, inspect the kit and its component(s) to be sure all parts and tools are accounted for and not damaged. If missing parts or parts are damaged, please contact your Selling Dealer for assistance.

If your accessory was purchased online, please contact POLARIS customer service at **1-800-POLARIS** (US & Canada only).

Application


Verify accessory fitment at www.polaris.com.

Kit Contents

NOTICE

XXX = RZR® color code (For example: 458 = Black)


Rear Bumper Kit, P/N 2884356-XXX; 2891874-XXX

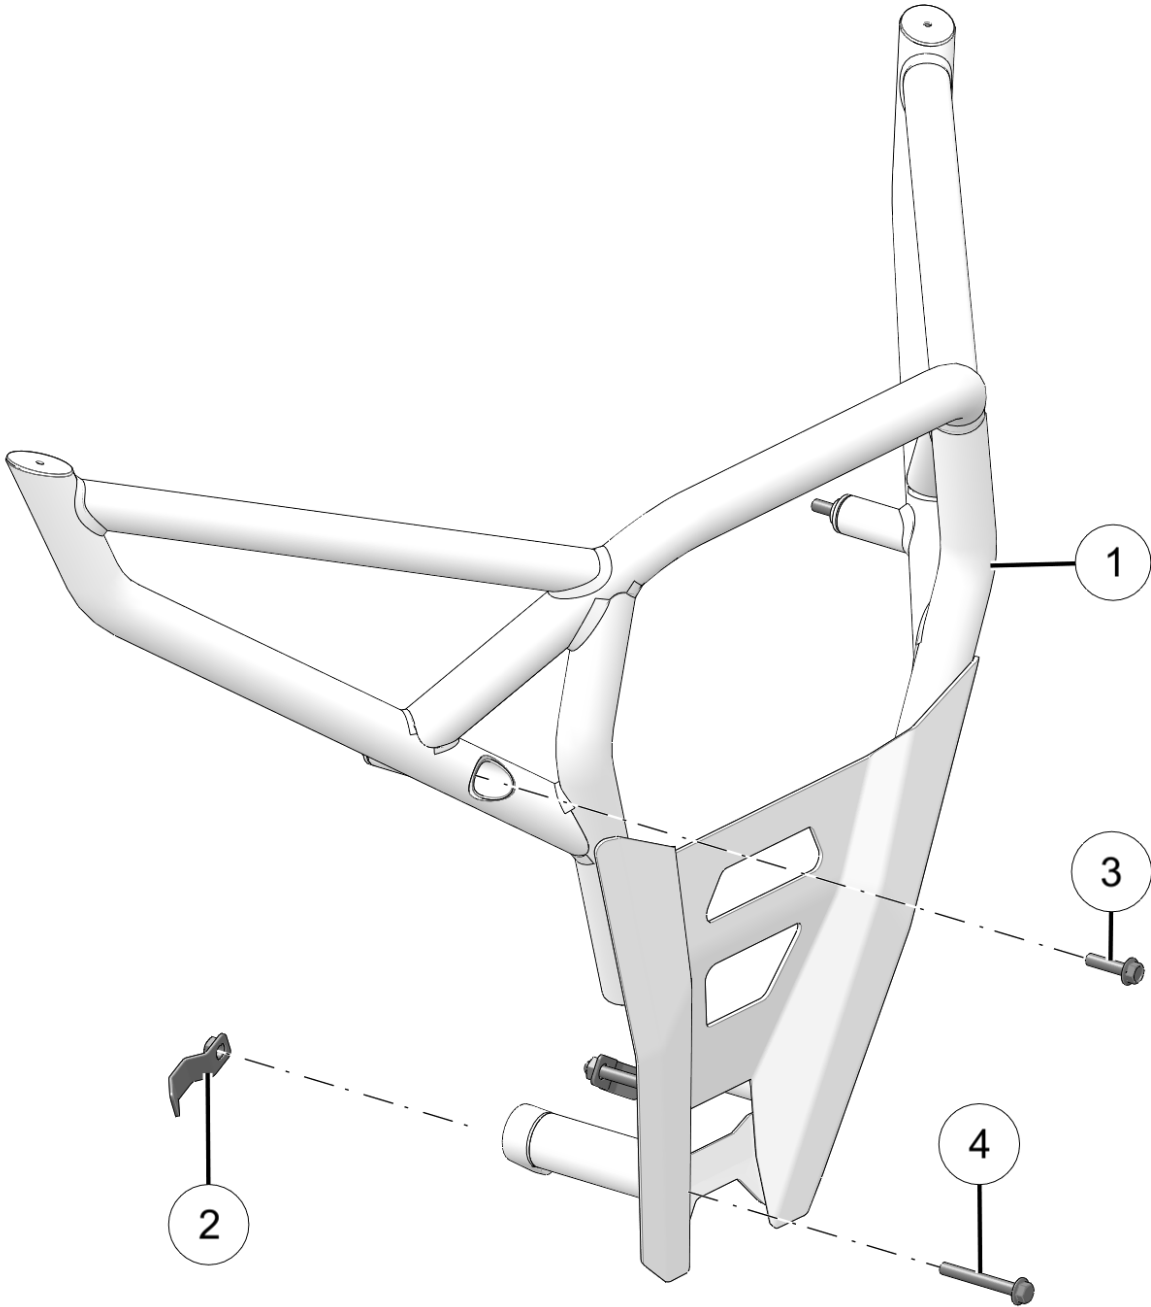


Ref	Qty	Part Description	P/N Available Separately	Available Service Kit
1	1	Bumper, Rear, Premium	n/a	n/a
2	2	Plate, Lower, Nut	5268918-458	n/a

Ref	Qty	Part Description	P/N Available Separately	Available Service Kit
3	2	Screw, Hex Flange, M10 x 1.5 mm x 40 mm	n/a	2208310
4	2	Screw, Hex Flange, M10 x 1.5 mm x 75 mm	n/a	2208310

Rear Bumper Kit, P/N 2884357-XXX

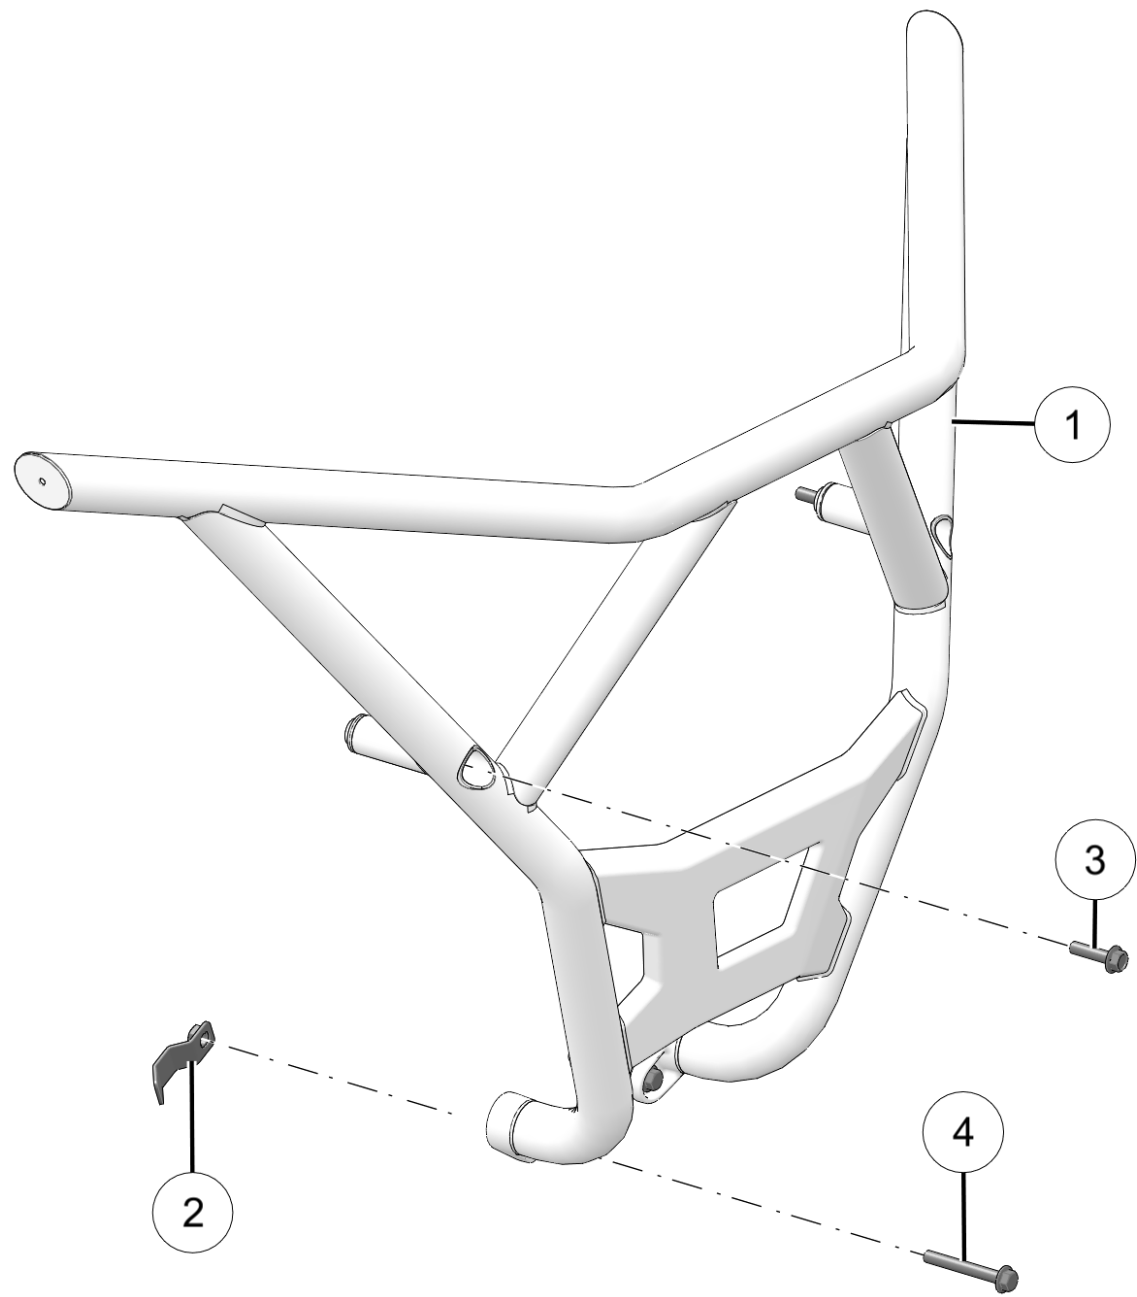

Ref	Qty	Part Description	P/N Available Separately	Available Service Kit
1	1	Bumper, Rear, Basic	n/a	n/a
2	2	Plate, Lower, Nut	5268918-458	n/a
3	2	Screw, Hex Flange, (M10 x 1.5 x 40 mm)	n/a	2208310
4	2	Screw-Hex Flange, (M10 x 1.5 x 75 mm)	n/a	2208310

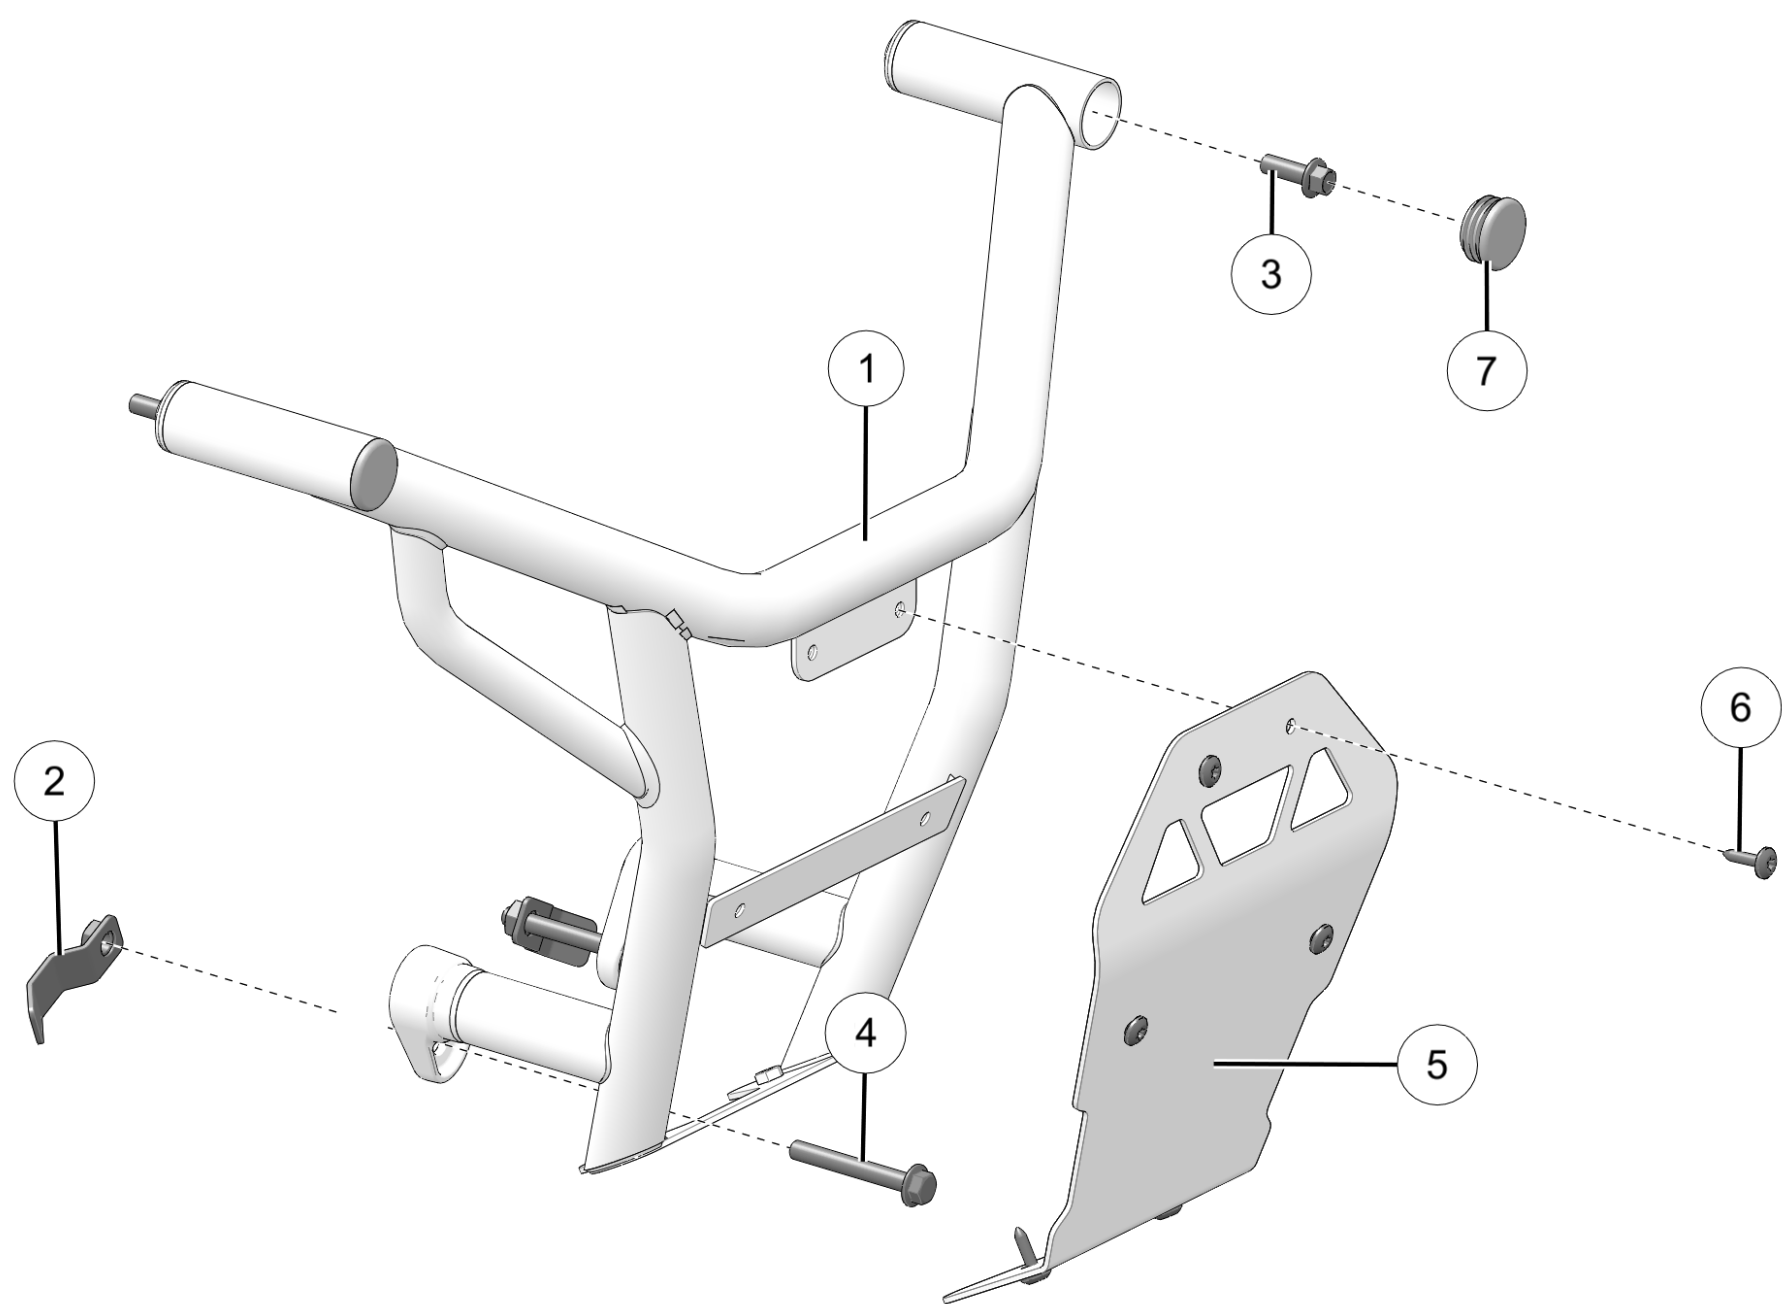

Ref	Qty	Part Description	P/N Available Separately	Available Service Kit
1	1	Bumper, Rear, PreRun	n/a	n/a
2	2	Plate, Lower, Nut	5268918-458	n/a
3	2	Screw, Hex Flange, (M10 x 1.5 x 40 mm)	n/a	2208338
4	2	Screw, Hex Flange, (M10 x 1.5 x 75 mm)	n/a	2208338
5	1	Plate, Bumper, Rear, PreRun	5269083	n/a
6	6	Screw, Torx® Truss Head, (M6 x 1.0 x 20 mm)	n/a	2208338
7	2	Cap, Tube	5459670	n/a

Tools Required

- Safety Glasses
- Pliers, Push Pin Rivet
- Screwdriver Set, Torx®
- Socket Set, Metric
- Socket Set, Torx® Bit
- Torque Wrench
- Rubber Mallet

Important

Your Rear Bumper Kit is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris. For your safety, and to ensure a satisfactory installation, perform all installation steps correctly in the sequence shown.

Installation Instructions

Vehicle Preparation

General

1. Shift vehicle transmission into PARK. Turn key to OFF position and remove from vehicle.

Accessory Installation


NOTICE

Basic Rear Bumper Kit, P/N 2884357-XXX shown; other bumpers similar, except where noted.


1. Remove and discard two rear fascia fasteners.

TIP

Rear fascia panel should remain connected via clips.

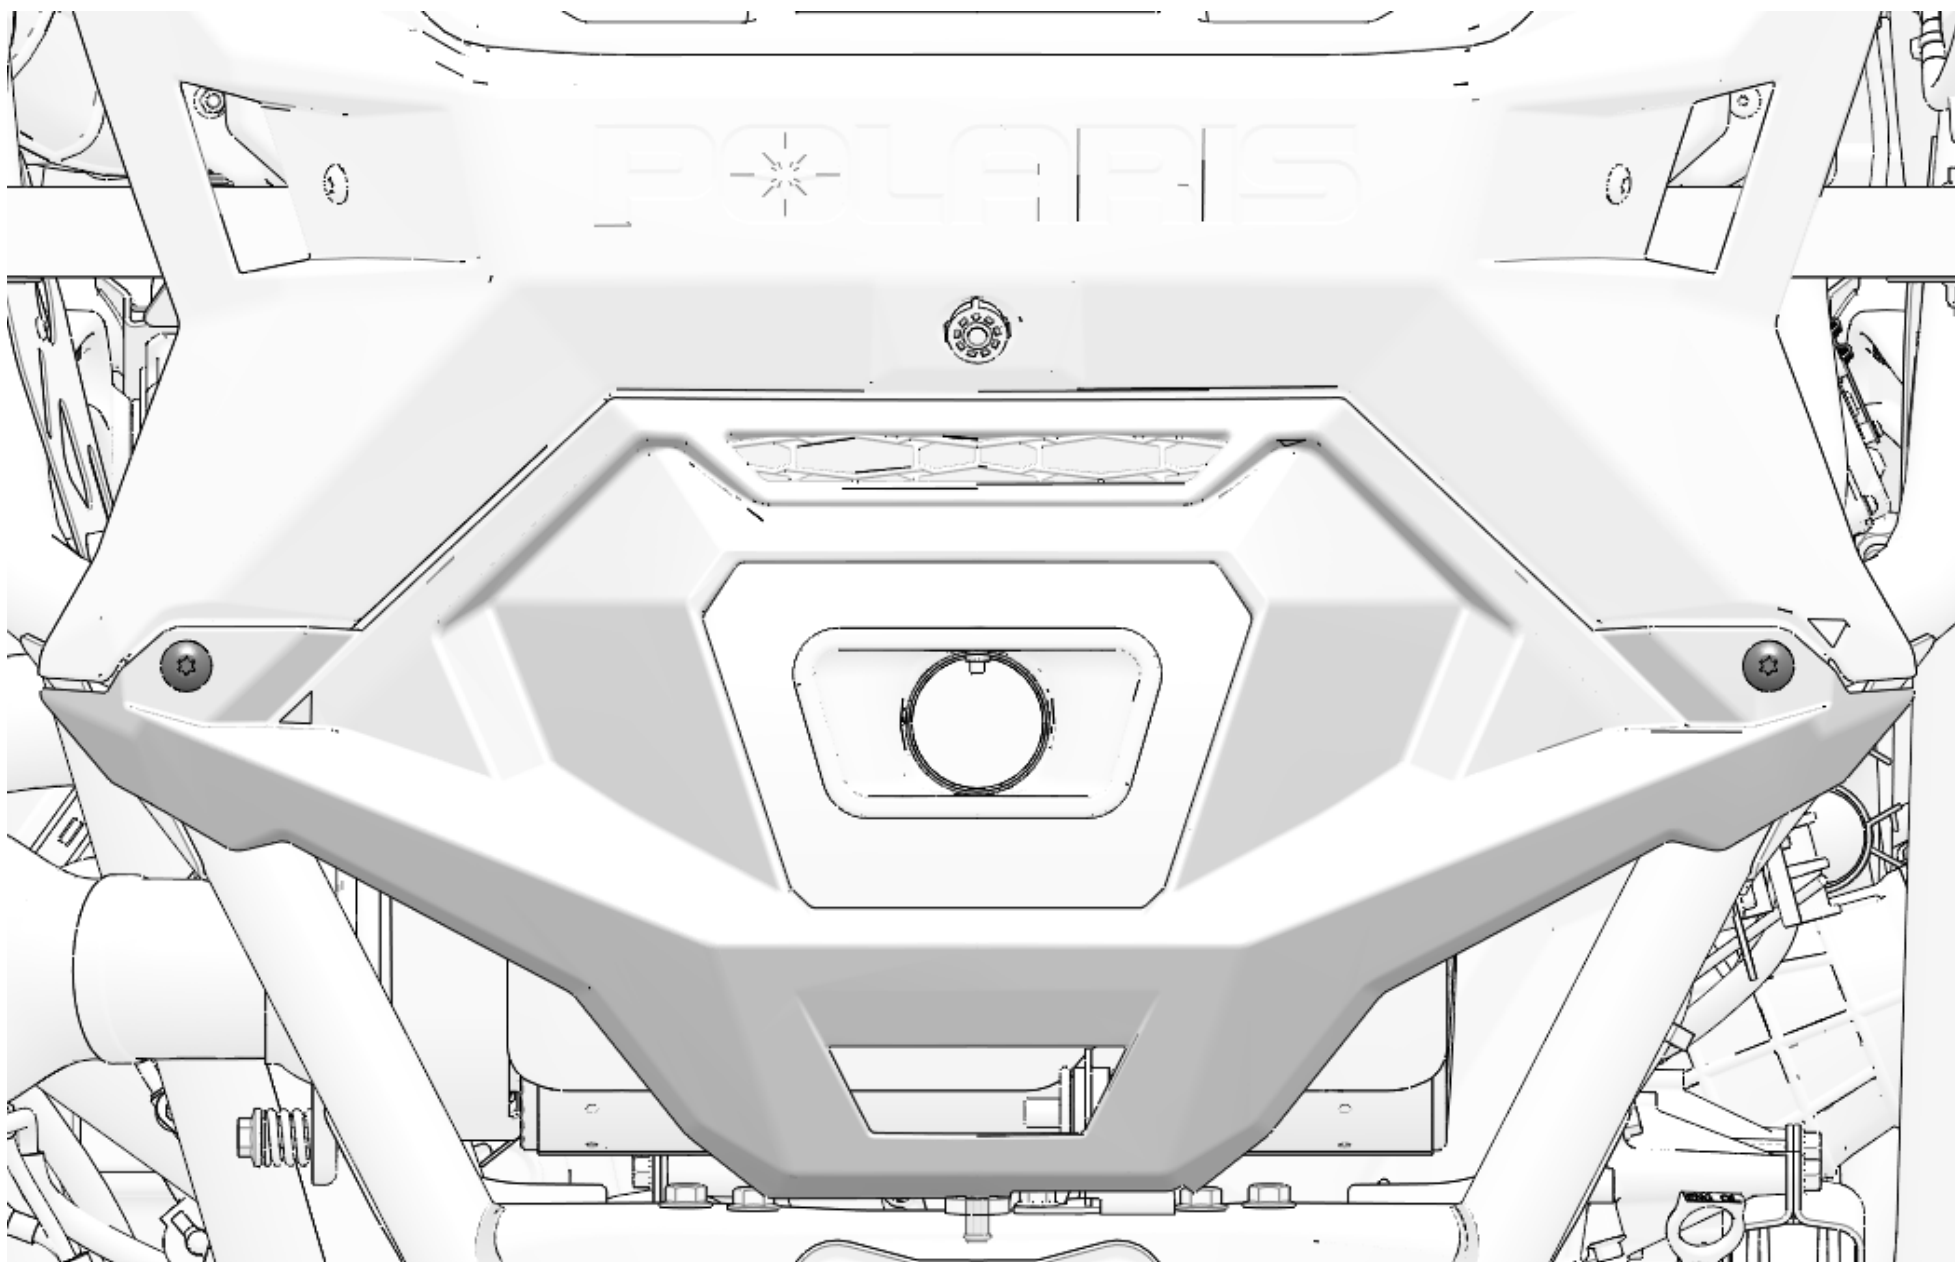


2. With an assistant, align bumper with vehicle rear. Align top mounting arms with top-rear fascia and lower mounting arms with transmission mount.

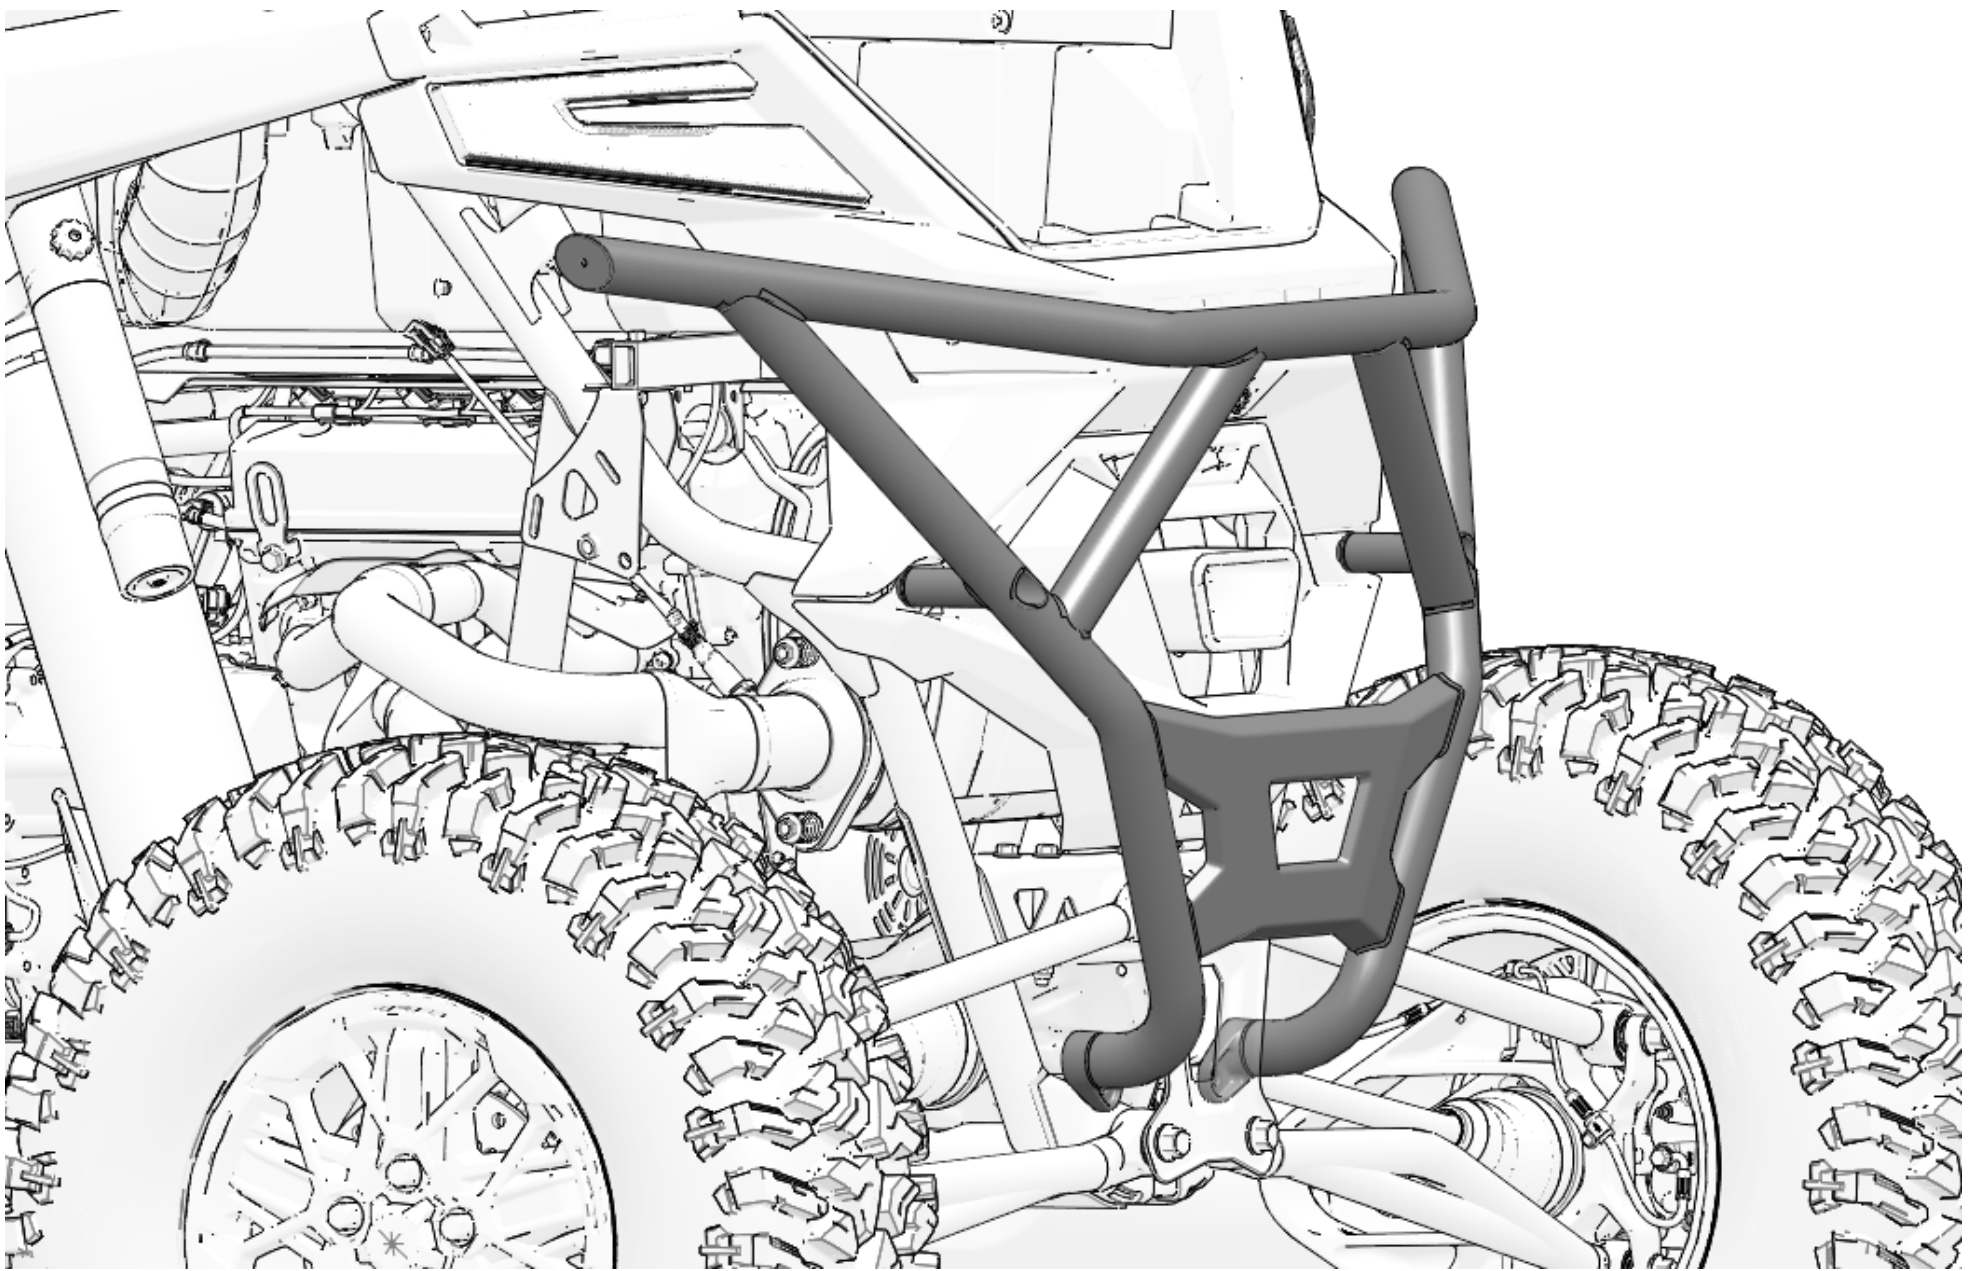


3. Attach bumper to top-rear fascia and chassis with two top mounting fasteners ③.

Do not torque fasteners at this time.


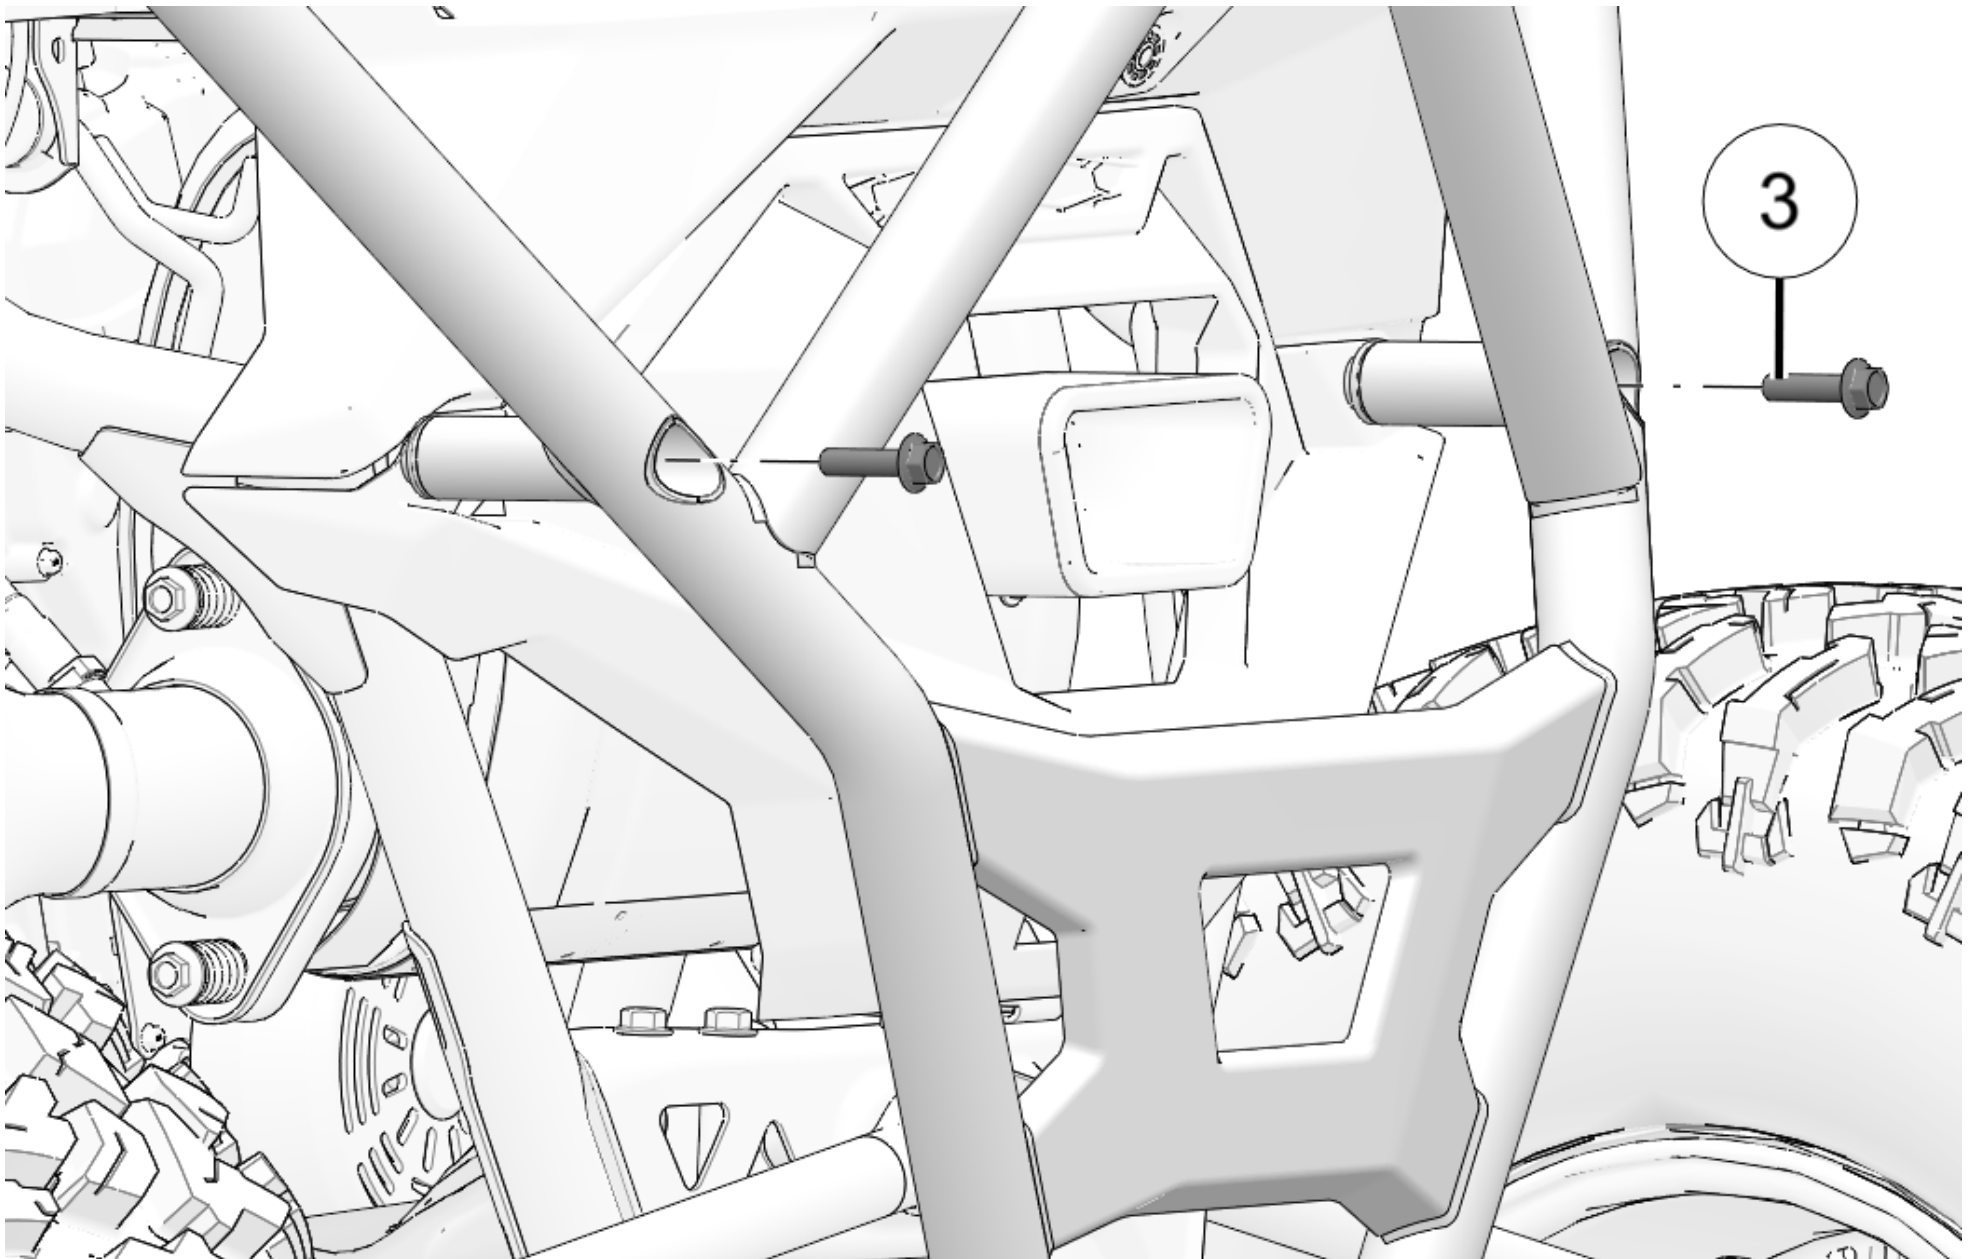


4. Install two bottom mounting fasteners ④ through bumper mounts and transmission mount for proper alignment.

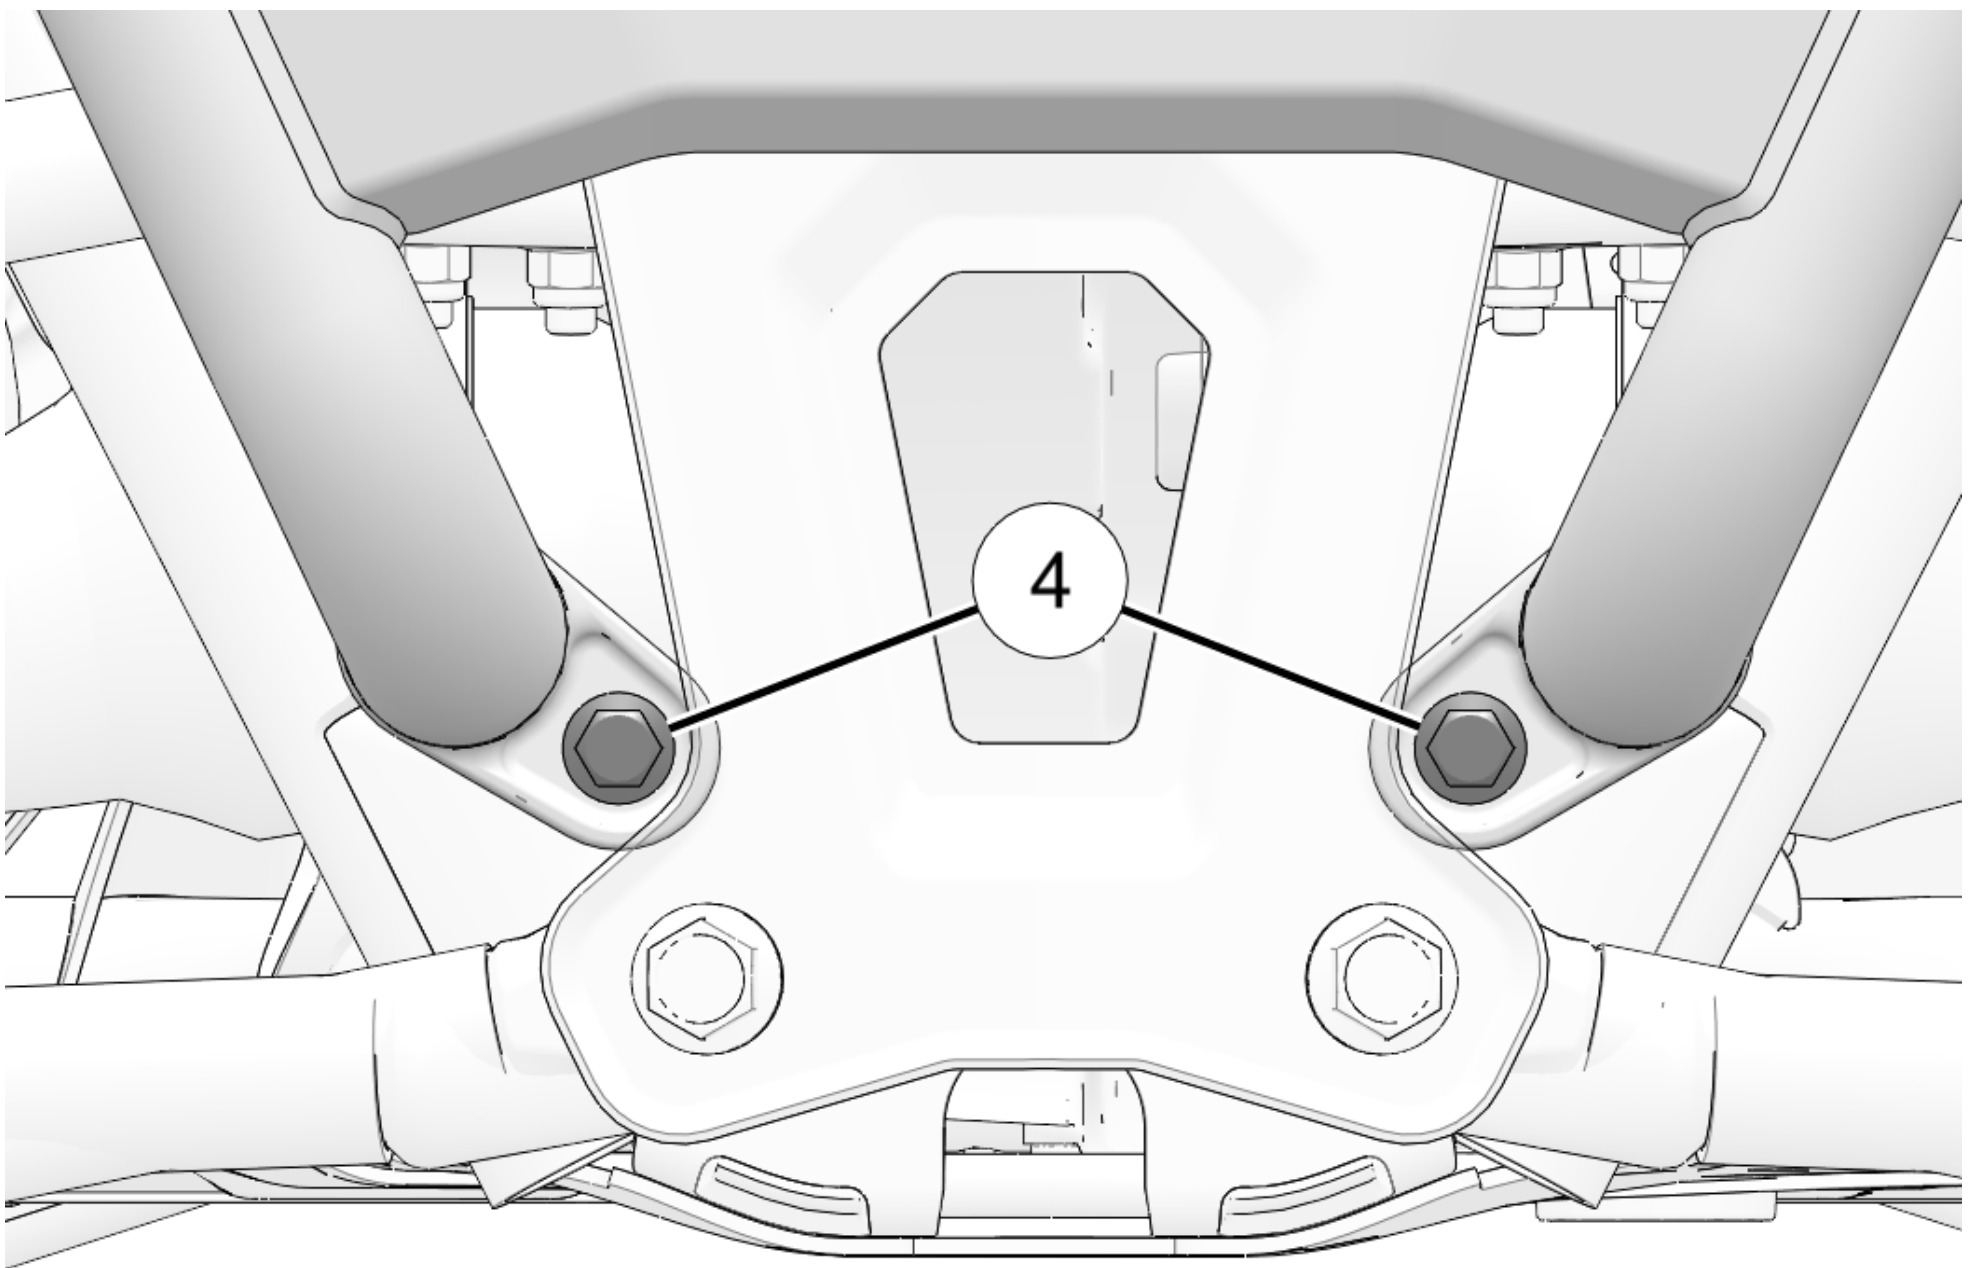

5. Wrap one plate nut ② around each vertical tubes. Install each fastener into plate nut.

Do not torque fasteners at this time.

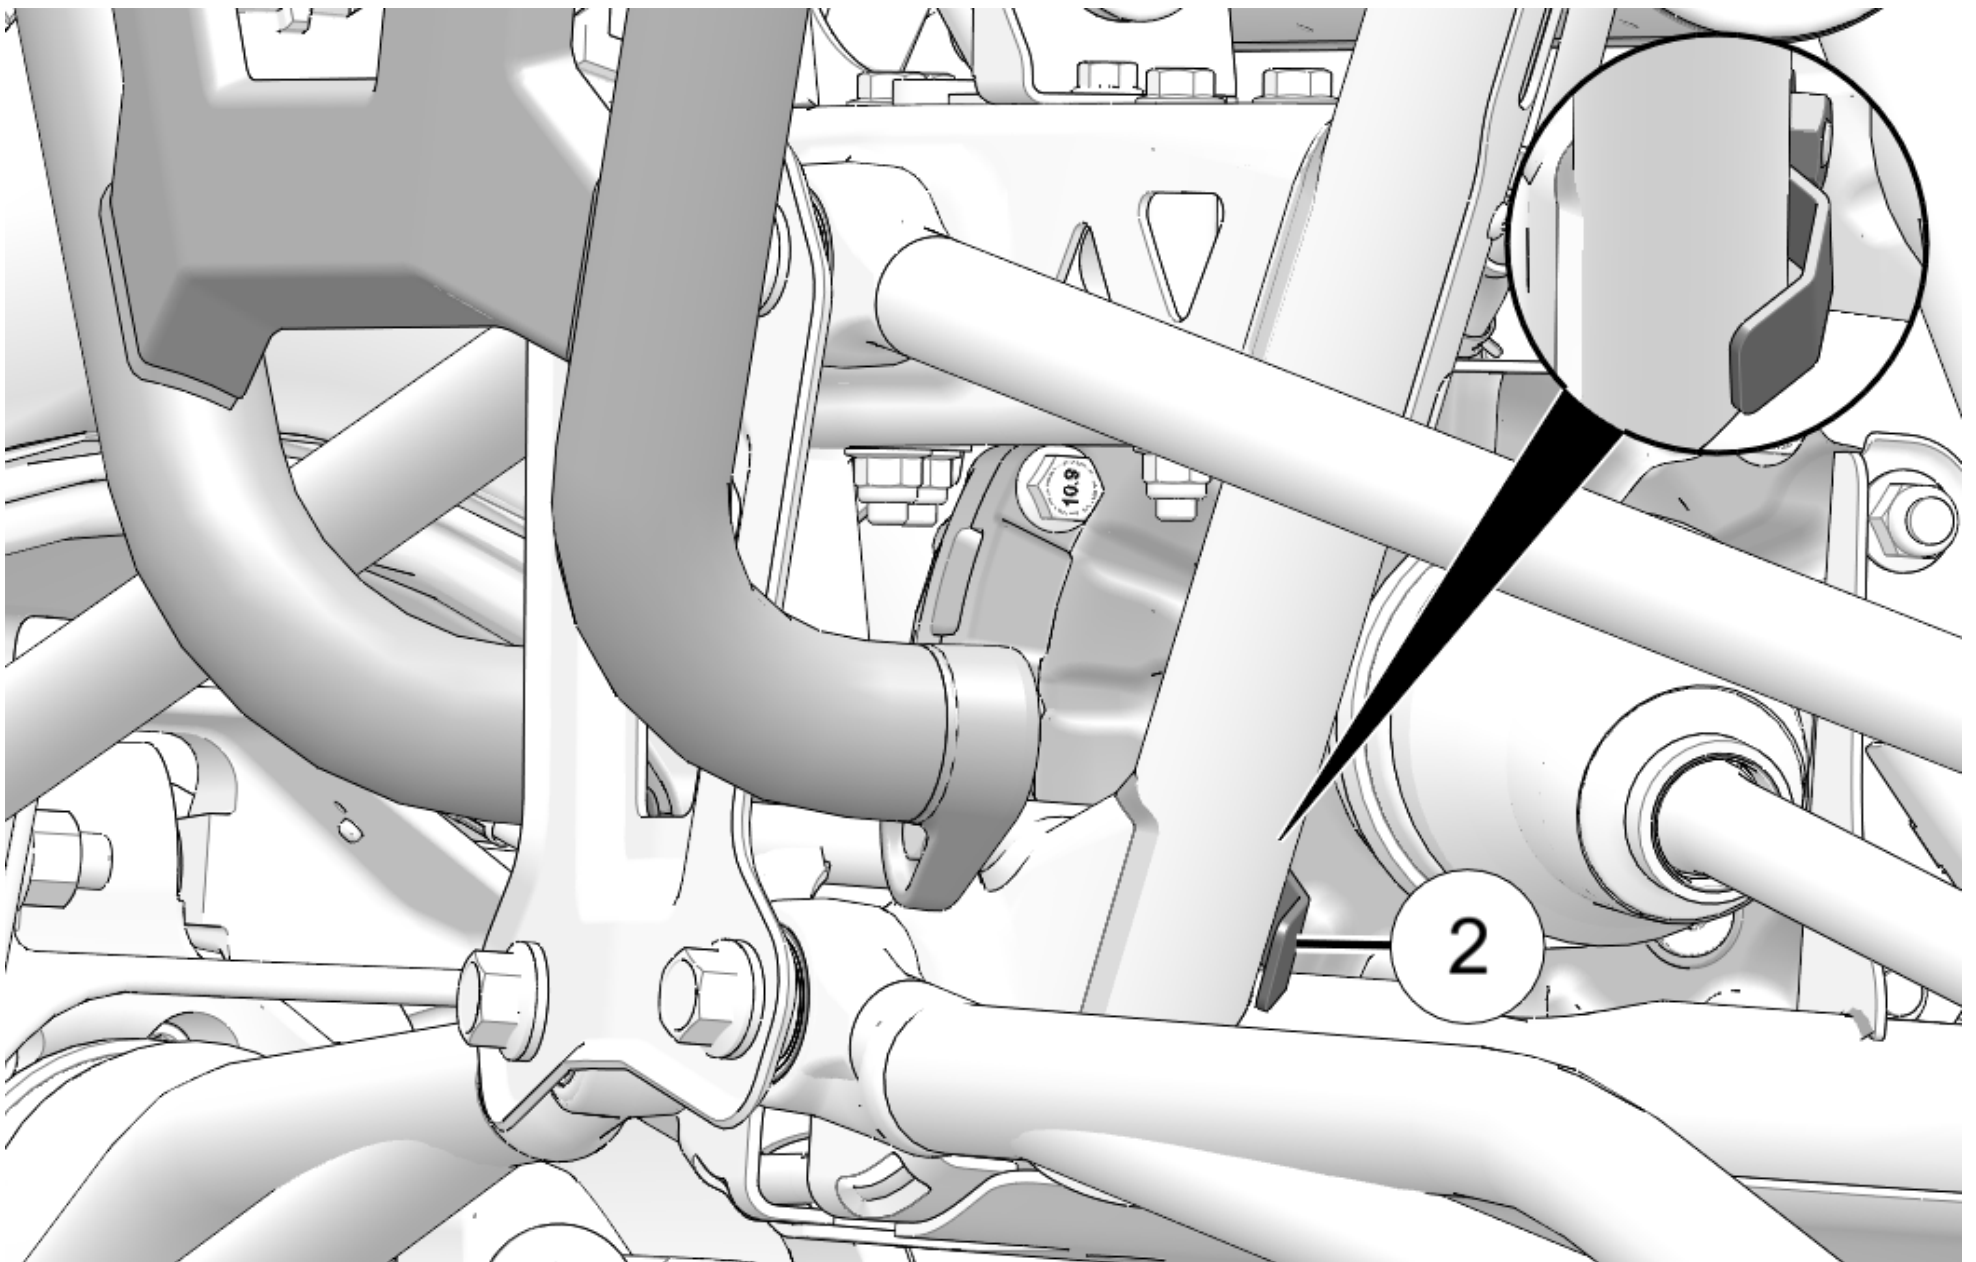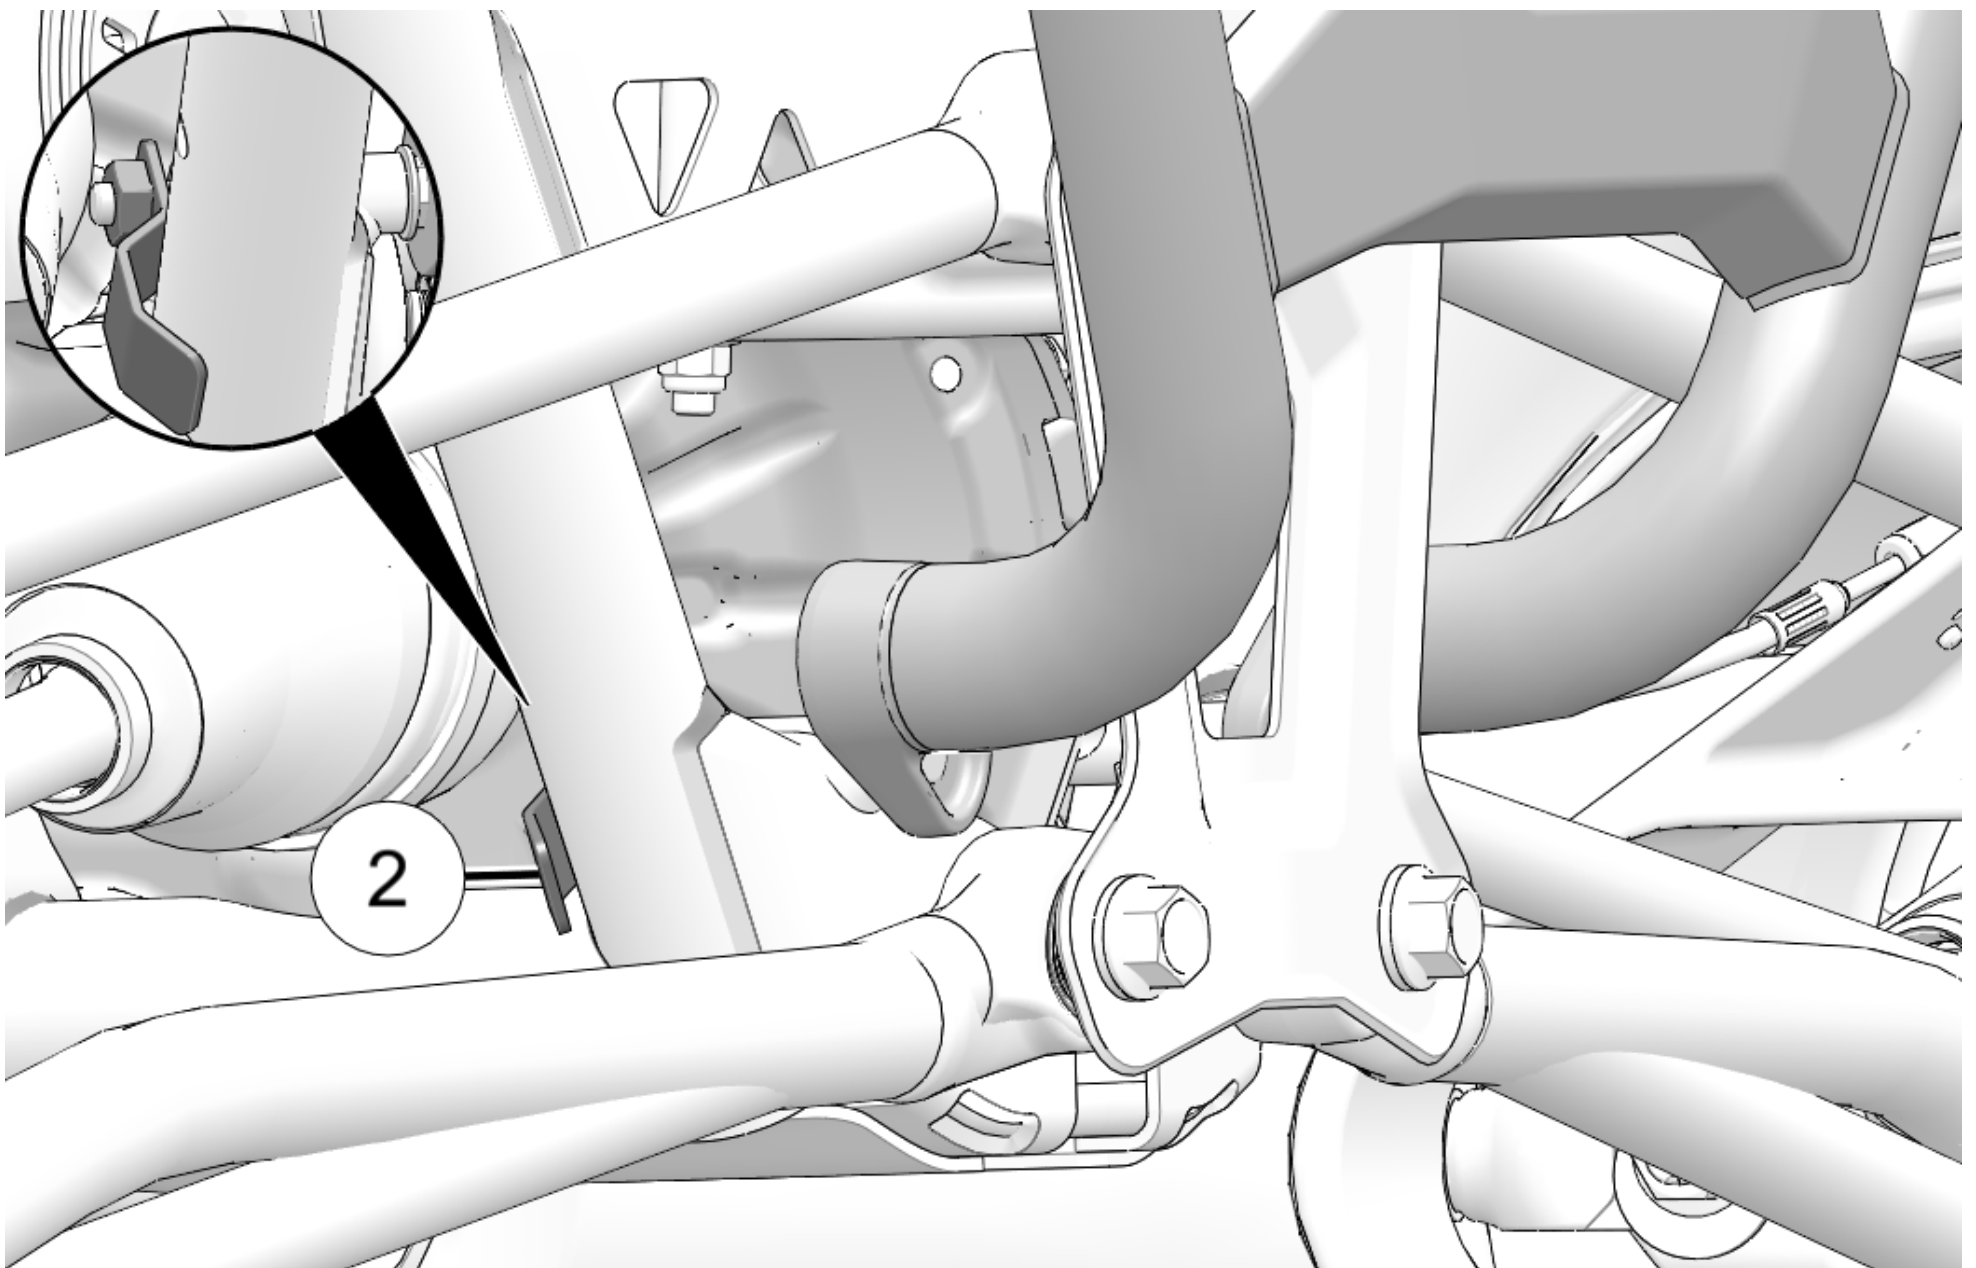

6. With bumper properly aligned, torque four fasteners to specification.

TORQUE	
Top Mounting Fasteners ④:	
37 ft-lbs (50 N·m)	
TORQUE	

Bottom Mounting Fasteners ③:

37 ft-lbs (50 N·m)


Rear Bumper, P/N 2884358-XXX Only

1. Install bumper plate ⑤ with six fasteners ⑥.


TORQUE

Bumper Plate Fasteners ⑥:

7 ft-lbs (10 N·m)

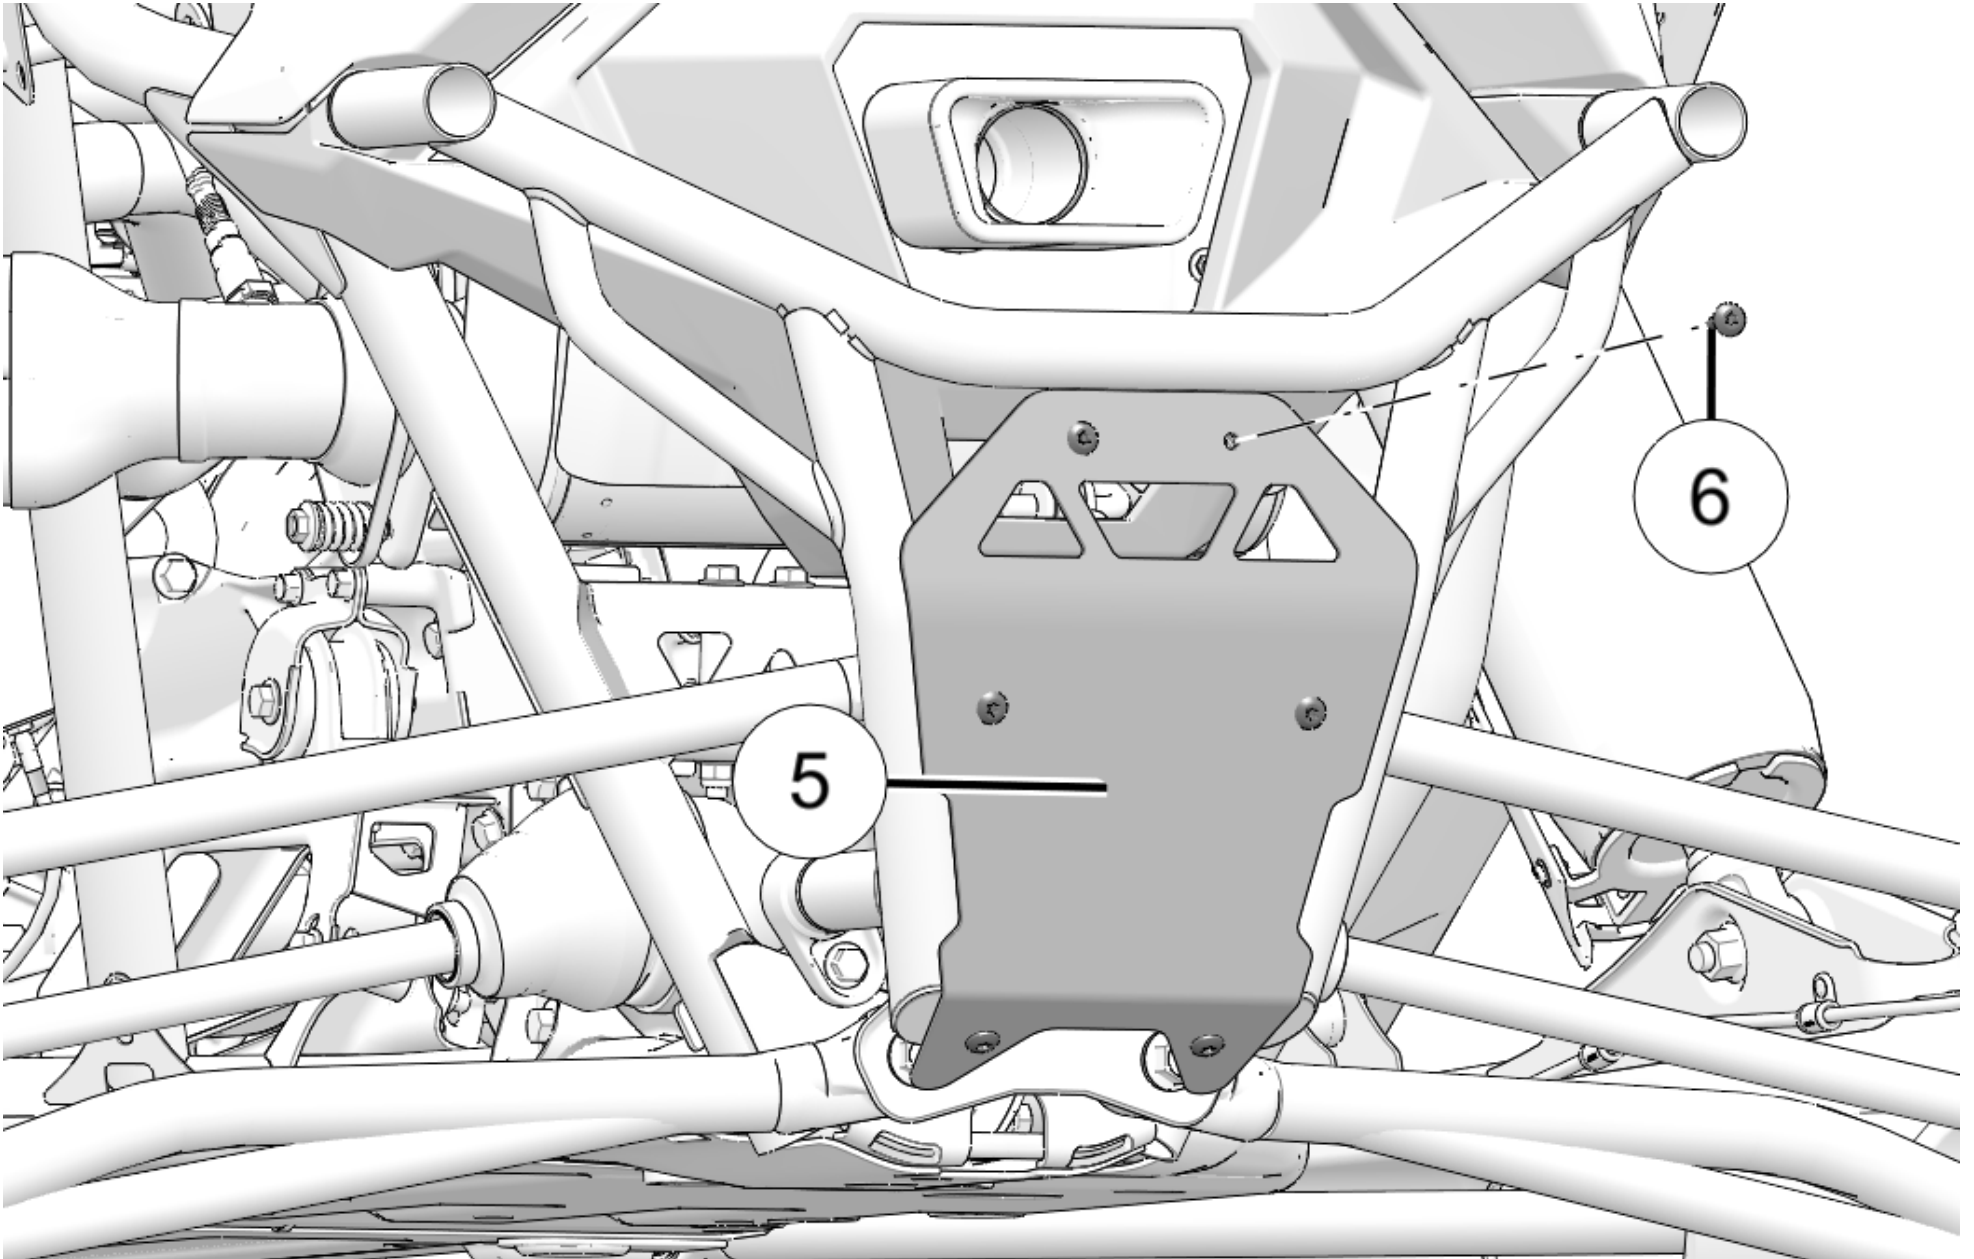

2. Using a rubber mallet, install one cap ⑦ to each side of the bumper.

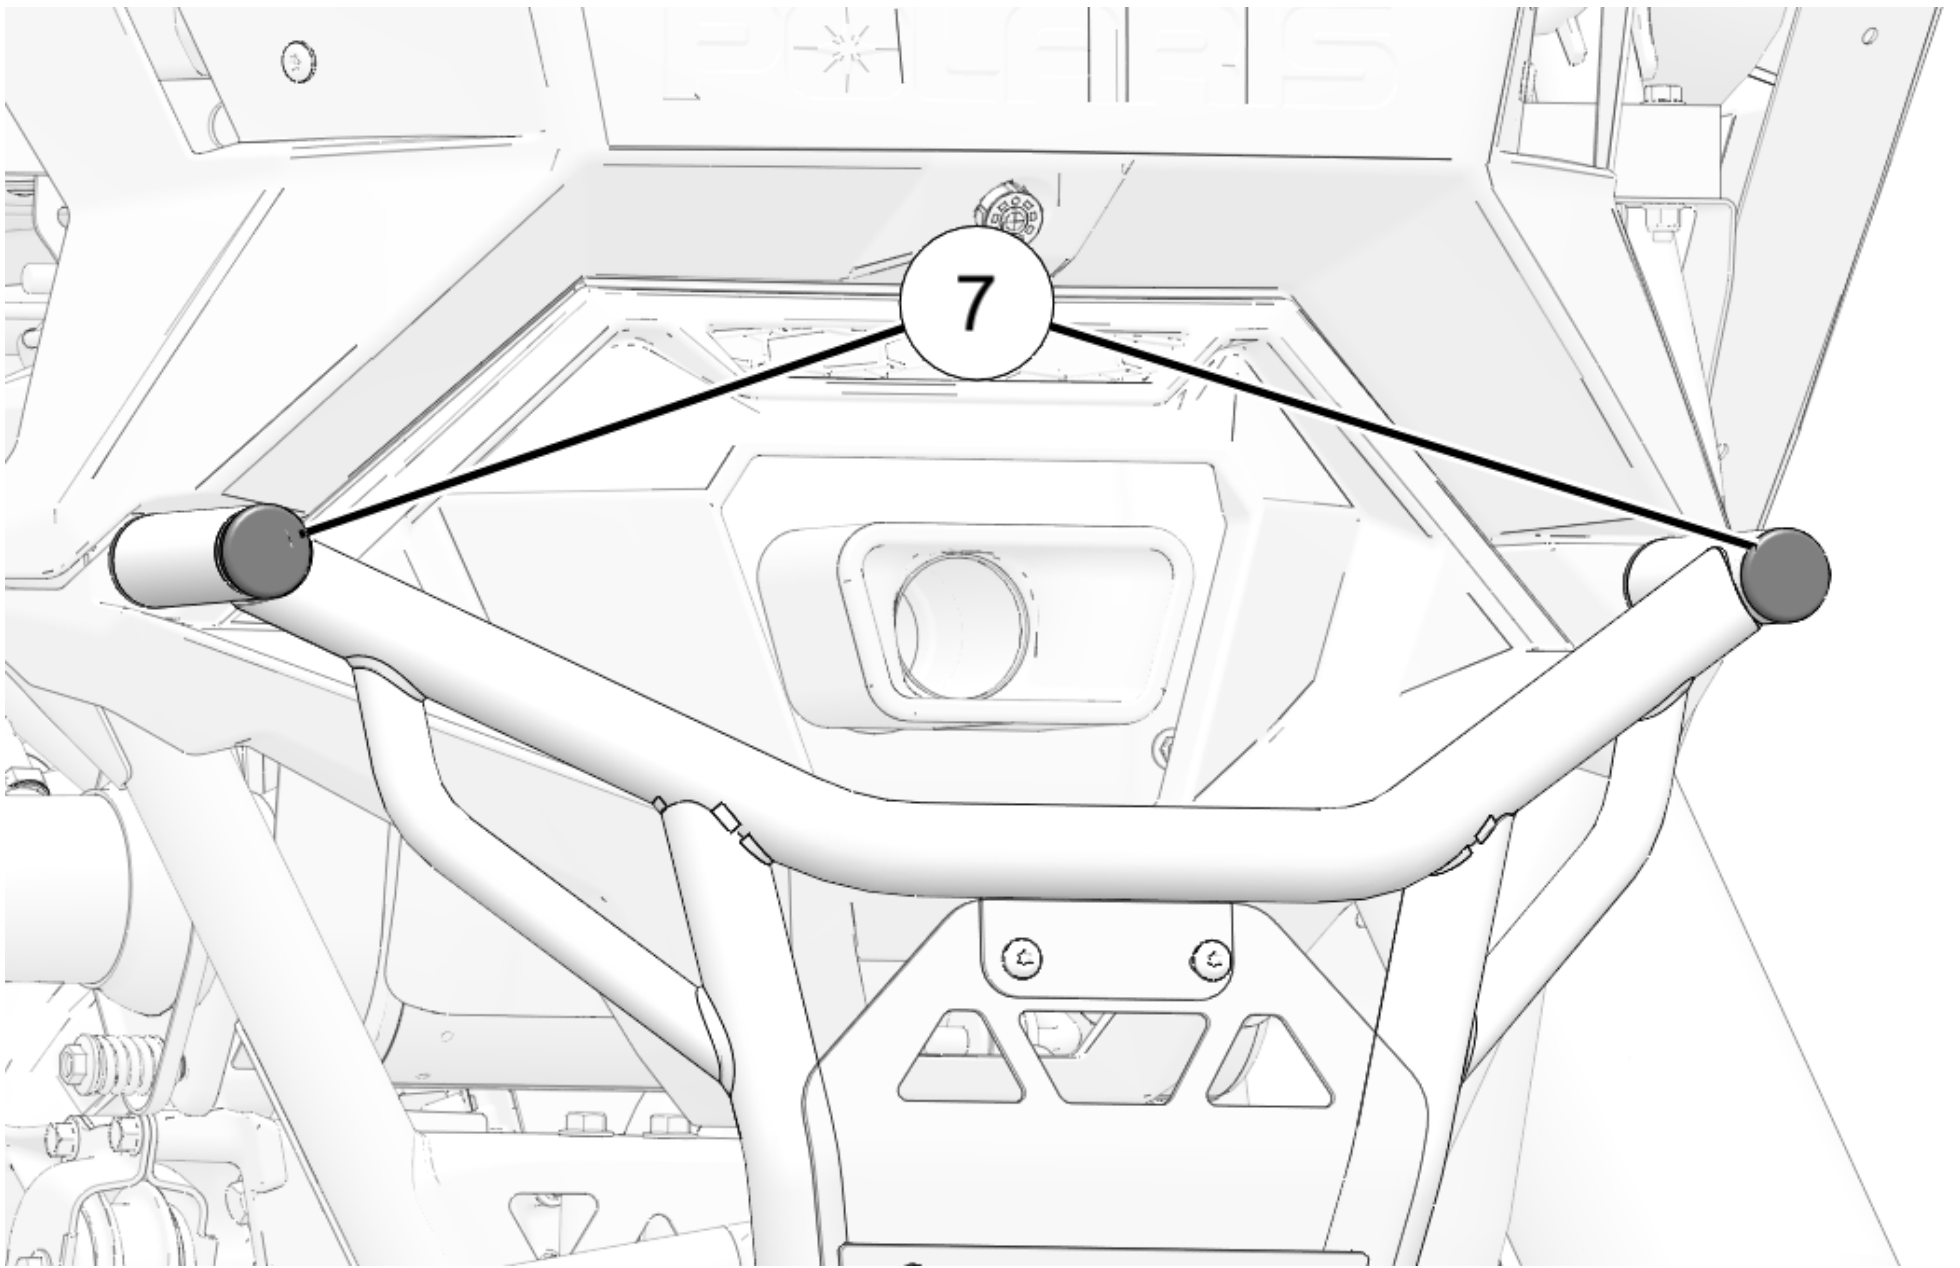

[Site Map](#)

[Privacy Policy](#)

[Accessibility](#)

© 2026 Polaris Inc.