

HALF WINDSHIELD KIT



P/N 2883754; 2884746; 2884966

BEFORE YOU BEGIN


Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference and parts ordering information.

APPLICATION

Verify accessory fitment at www.polaris.com.


KIT CONTENTS

HALF WINDSHIELD KIT P/N 2883754; 2884966

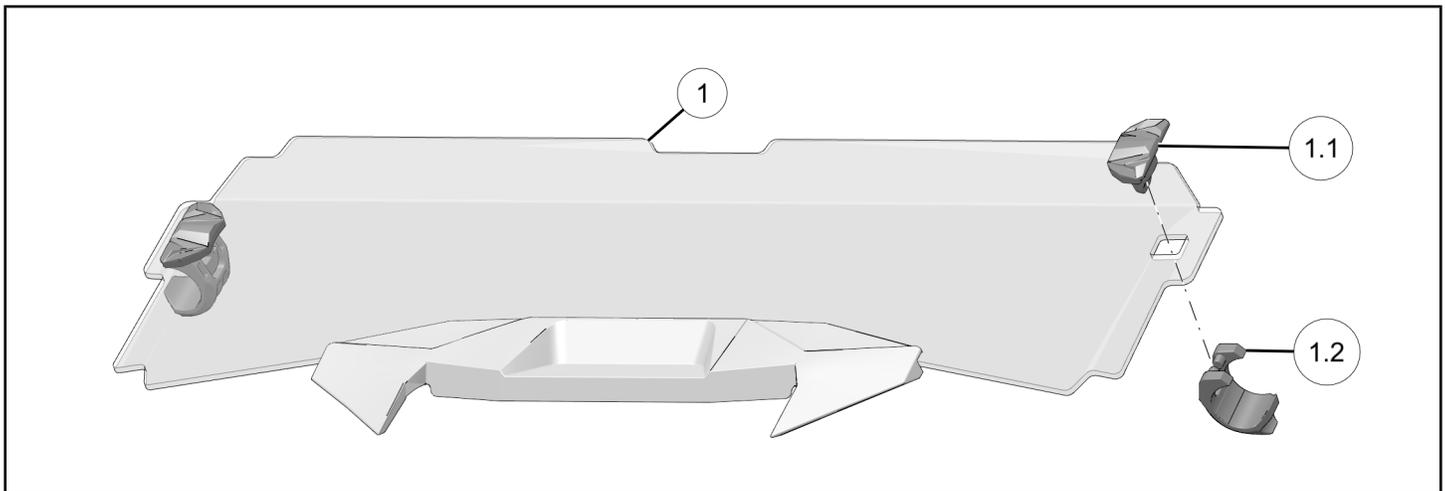

REF	QTY	PART DESCRIPTION	P/N AVAILABLE SEPARATELY	AVAILABLE SERVICE KIT
1	1	Assembly–Windshield, Half, Poly	n/a	n/a
1.1	1	- Clamp–Lock & Ride®, Base, 2 in	n/a	2207767
1.2	1	- Clamp–Lock & Ride®, Lever, 2 in	n/a	2207767

HALF WINDSHIELD KIT P/N 2884746

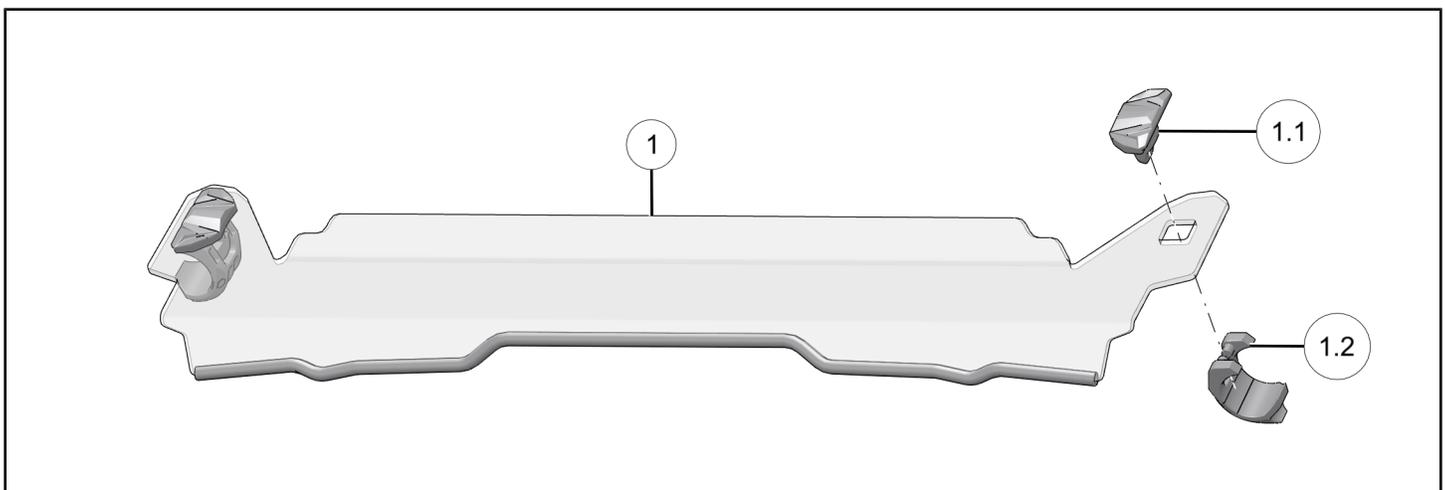

REF	QTY	PART DESCRIPTION	P/N AVAILABLE SEPARATELY	AVAILABLE SERVICE KIT
1	1	Assembly–Windshield, Half, Poly	n/a	n/a
1.1	1	- Clamp–Lock & Ride®, Base, 2 in	n/a	2207767
1.2	1	- Clamp–Lock & Ride®, Lever, 2 in	n/a	2207767

TOOLS REQUIRED

- Socket Set, Torx® Bit
- Torque Wrench

IMPORTANT

Your Half Windshield Kit is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris. For your safety, and to ensure a satisfactory installation, perform all installation steps correctly in the sequence shown.

INSTALLATION INSTRUCTIONS

⚠ WARNING

If transporting vehicle in non-enclosed trailer then vehicle must **FACE FORWARD**, or windshield must be removed.

Failure to comply may allow airflow, vibration, or other factors to separate windshield from vehicle and cause an accident, resulting in serious personal injury or death.

NOTICE

Half Windshield Kit, P/N 2883754 shown; other windshields similar.

VEHICLE PREPARATION


GENERAL

1. Shift vehicle transmission into PARK.
2. Turn key to OFF position and remove from vehicle.

HALF WINDSHIELD KIT P/N 2883754; 2884966 ONLY


CENTER HOOD PANEL REMOVAL

1. Remove and keep two hood fasteners. Move hood towards rear of vehicle to remove.

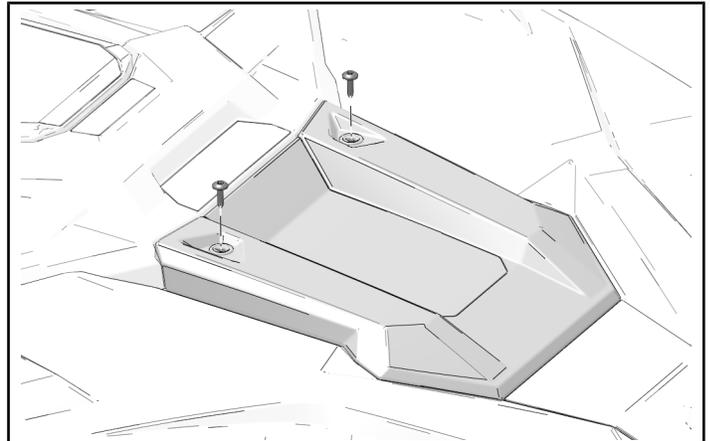


ACCESSORY INSTALLATION


1. Put windshield on top hood and lean against roll-cage.

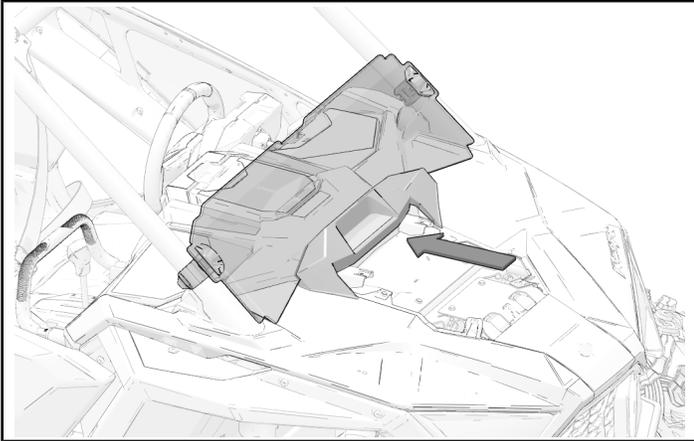


2. Make sure bottom of windshield aligns with upper fenders.

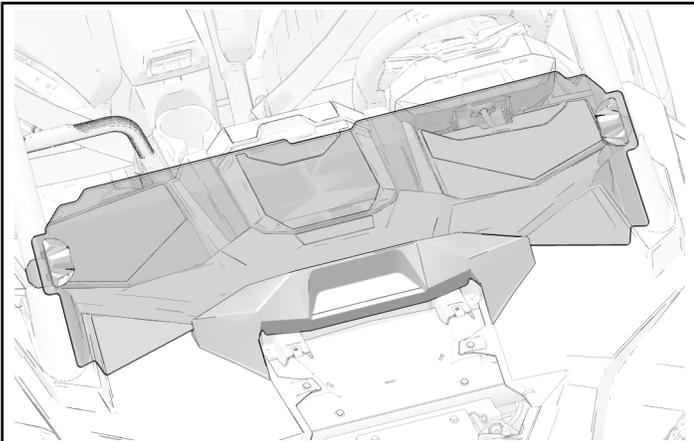

3. With windshield in correct position, secure to ROPS with two Lock & Ride® clamps.

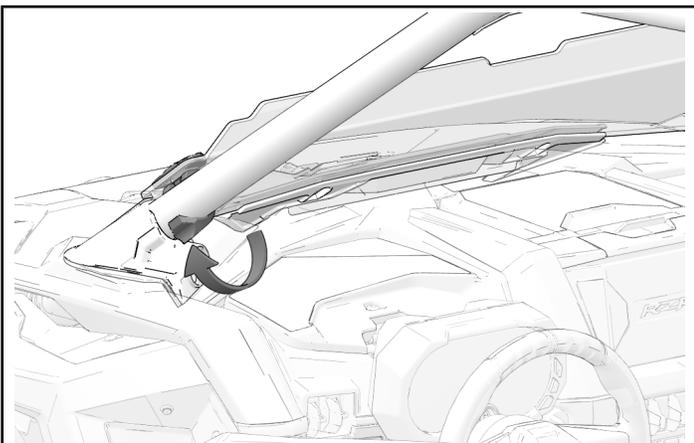

4. Windshield may need repositioning. If needed, release clamps and move windshield upwards along roll-cage.

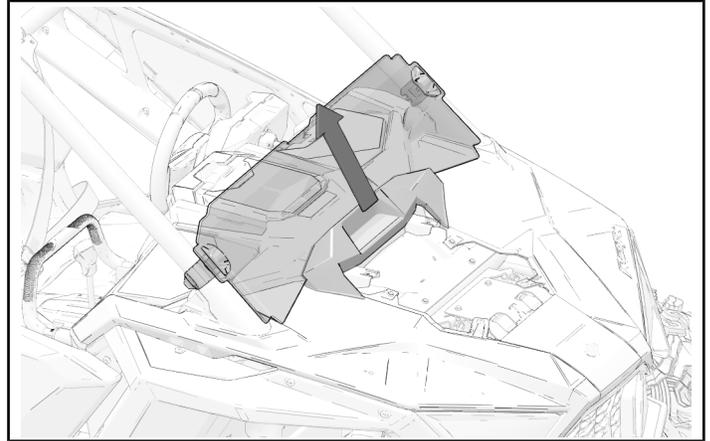

VEHICLE REASSEMBLY


HALF WINDSHIELD KIT P/N 2883754; 2884966 ONLY

GENERAL

1. Move panel forward until tabs slide into front hood panel and install with two hood fasteners.

TORQUE

Hood Fasteners:
88 in-lbs (10 N·m)

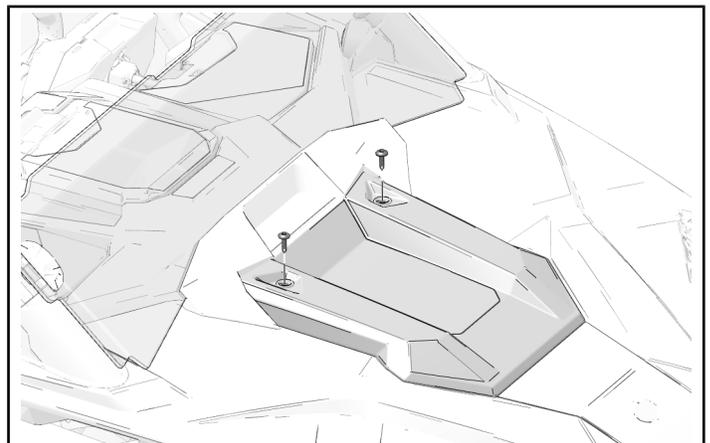

FEEDBACK FORM

A feedback form has been created for the installer to provide any comments, questions or concerns about the installation instructions. The form is viewable on mobile devices by scanning the QR code or by clicking [HERE](#) if viewing on a PC.

