

# SOFT TOP KIT



**P/N 2880610**

## APPLICATION


Verify accessory fitment at [Polaris.com](http://Polaris.com).

## BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference and parts ordering information.

## KIT CONTENTS

This Kit includes:

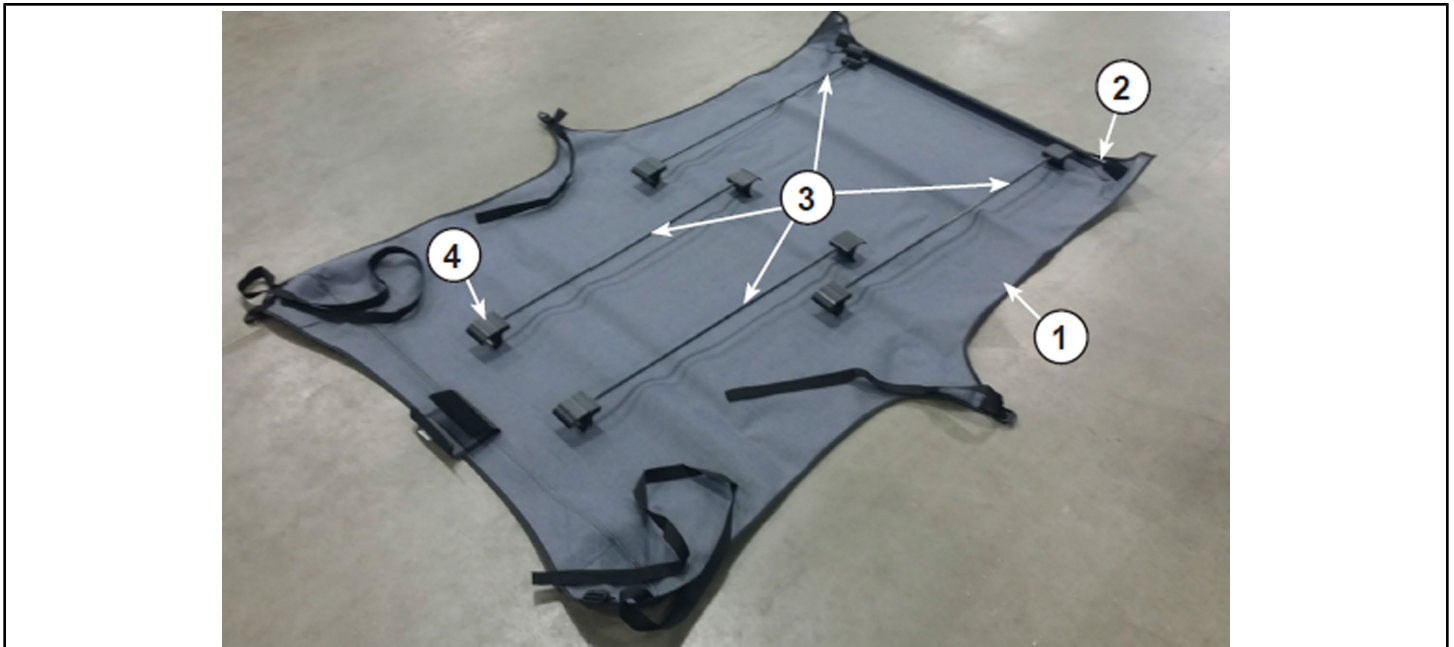

REF	QTY	PART DESCRIPTION	PART NUMBER
1	1	Soft Top	2635596
2	1	Front Rod	-
3	4	Support Rod	-
4	8	Clamp	-
	1	Instructions	9925505

## TOOLS REQUIRED

- Safety Glasses

## IMPORTANT

Your SOFT TOP KIT is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris. For your safety, and to ensure a satisfactory installation, perform all installation steps correctly in the sequence shown.

## ASSEMBLY TIME

Approximately 15 minutes

## INSTALLATION INSTRUCTION


1. Shift vehicle transmission into "PARK". Turn key to "OFF" position and remove from vehicle.
2. Slide front rod ② into front pocket of soft top ① as shown.
3. Insert end of front rod ② into *fixed* webbing pocket as shown.
4. Open *hook and loop* webbing pocket on opposite end, insert rod, then close hook and loop pocket as shown.




3. Insert end of front rod ② into *fixed* webbing pocket as shown.



5. Install two clamps ④ to front ROPS cross-member, then insert support rods ③ into clamp holes as shown.

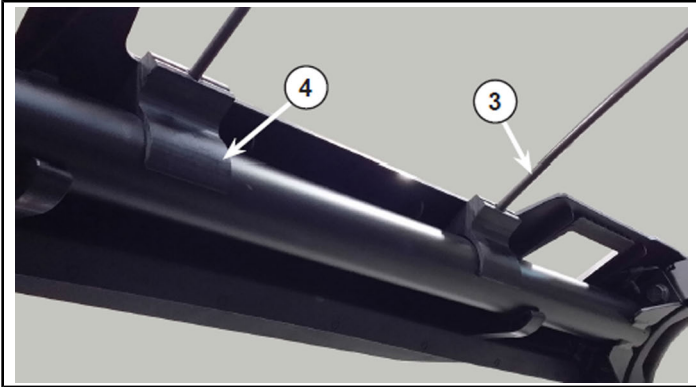


6. Install two clamps ④ to FRONT side (F) of middle ROPS cross-member. Slightly bend previously installed support rods ③, then insert rod ends into clamp holes as shown.

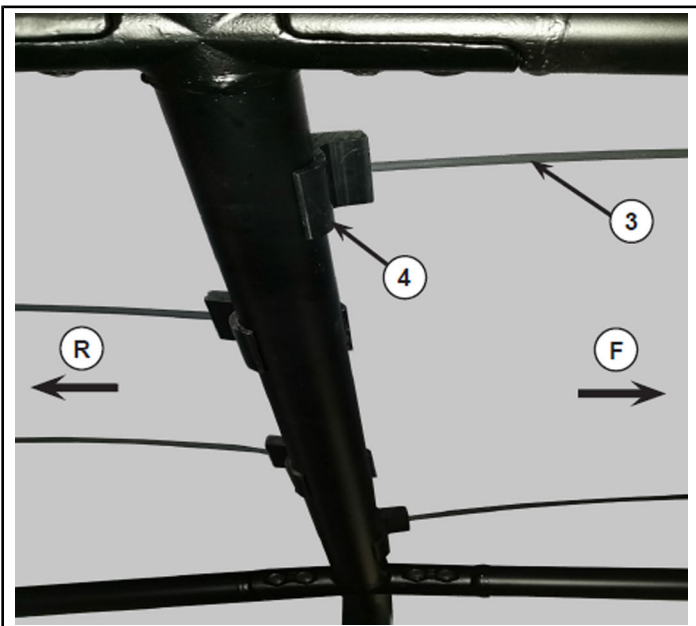


7. Install two clamps ④ to REAR side (R) of middle ROPS cross-member, then insert support rods ③ into clamp holes as previously shown.


8. Install two clamps ④ to front side (F) of rear ROPS cross-member. Slightly bend previously installed support rods ③, then insert rod ends into clamp holes as shown.

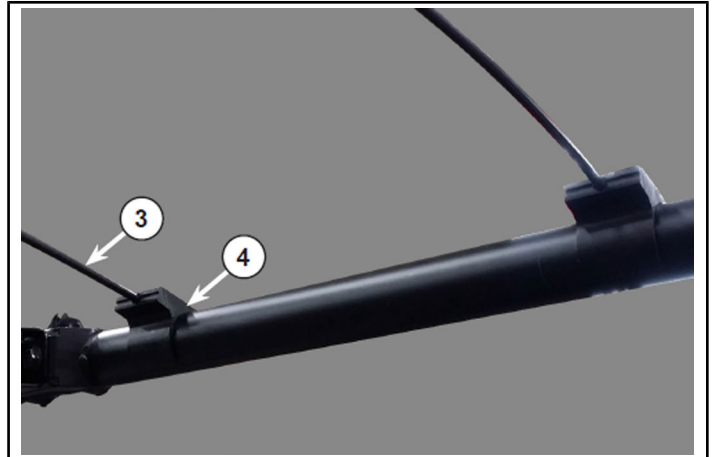

9. Lay soft top ① on support rods, then hook LH and RH corner pockets (C) to visor panel (B) as shown.

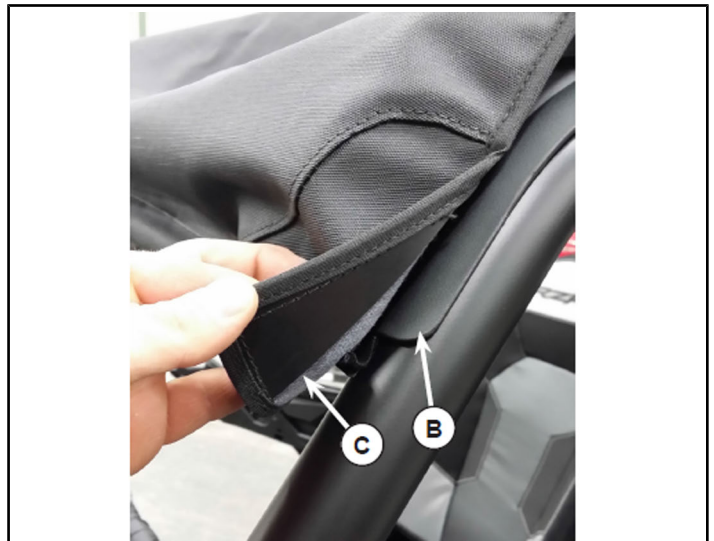


10. Carefully stretch soft top ① rearward, then secure with hook and loop straps (E) as shown. Wrap and secure both rear corner straps.

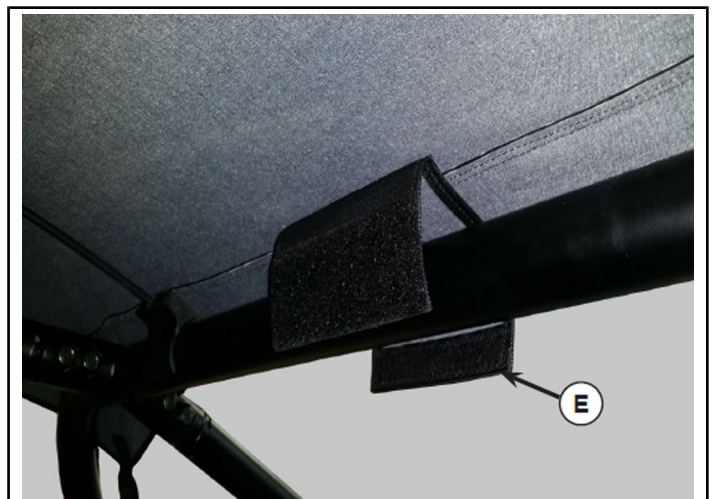



11. Wrap and tie both middle straps (D) as shown.

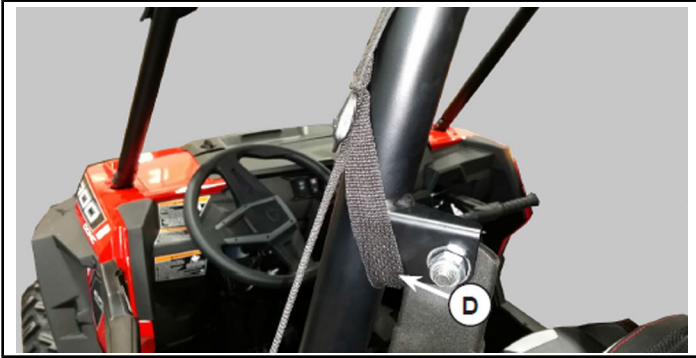

12. Adjust straps as required to ensure soft top is taut and secure. Pull strap ends downward to tighten.

