


RANGER 900 XP REAR BRUSHGUARD KIT P/N 2878840



Application

RANGER 900 XP

Before you begin, read these instructions twice and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference and parts ordering information.

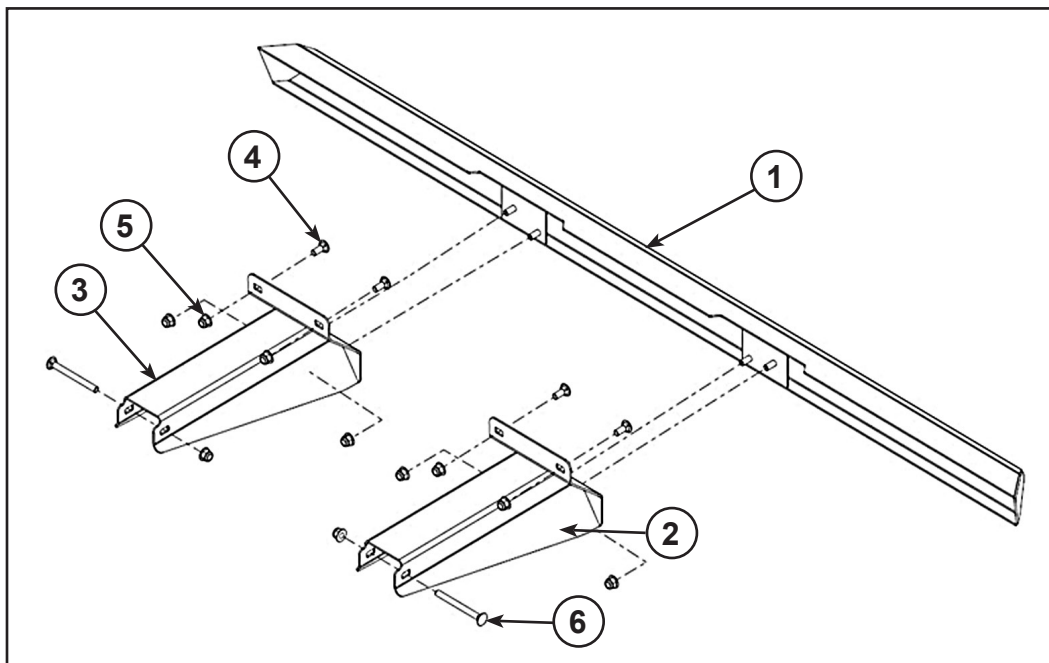

Kit Contents:

<u>Ref</u>	<u>Qty</u>	<u>Part Description</u>	<u>Part Number</u>
1	1	Rear Brushguard	1018892
2	1	Rear Weld Mount, LH, Brushguard, TTN	1018890
3	1	Rear Weld Mount, RH, Brushguard, TTN	1018891
4*	4	Carriage Bolt-M8x1.25x20 mm	7518479
5*	10	Nut-M8x1.25 mm, Hex Flange, Nyloc	7547317
6*	2	Carriage Bolt-M8x1.25x85 mm	-
	1	Instructions	9924734

Items marked (*) are included in Hardware Kit PN 2204789.

Tools Required:


Metric Socket Set

APPROXIMATE ASSEMBLY TIME: 10-15 minutes

IMPORTANT: Your Polaris RANGER 900 XP REAR BRUSHGUARD is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris. For your safety and to ensure a satisfactory installation, perform all installation steps correctly and in the sequence shown.


INSTALLATION INSTRUCTIONS:

1. Place the vehicle in "PARK" and turn the key to "OFF" position. Remove the key from the vehicle.
2. Unlatch the tailgate and disconnect the retaining cables. Remove the tailgate by opening the tailgate so that it is about 2" from the closed and latched position, then lifting up on the left (driver's) side of the tailgate to disconnect it from the pivot. Once the lower left side is disconnected slide the tailgate slightly leftward to disconnect it from the pivot on the right had (passenger's) side.
3. Install the mounting brackets (PN 1018890 LH; 1018891 RH) onto the rear brushguard (PN 1018892) by aligning the holes on the brackets with the brushguard studs. Secure the brackets to the bumper using nuts (PN 7547317). Figure 1.

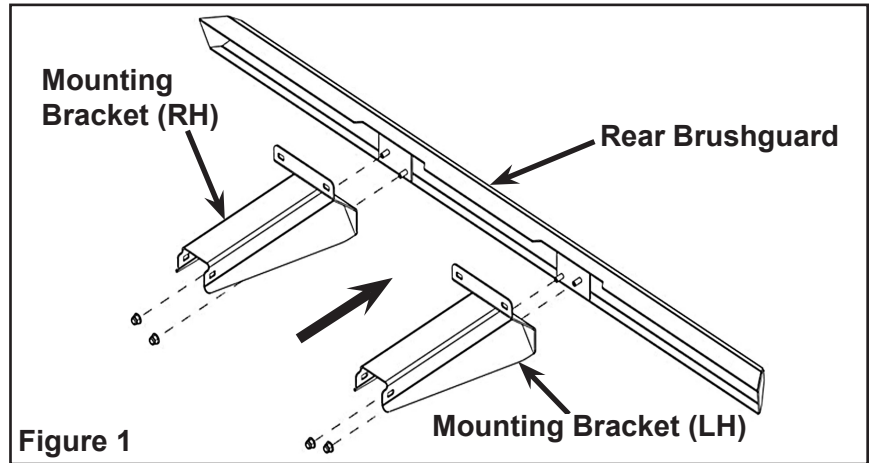

4. Lift the vehicle and get under to install the rear brushguard assembly (PN 1018892) using two carriage bolts. Hand tighten the nuts (PN 7547317). Figure 2.

NOTE: Ensure the alignment of the upper mounting holes of the bracket with the dump box frame before installing the carriage bolts.

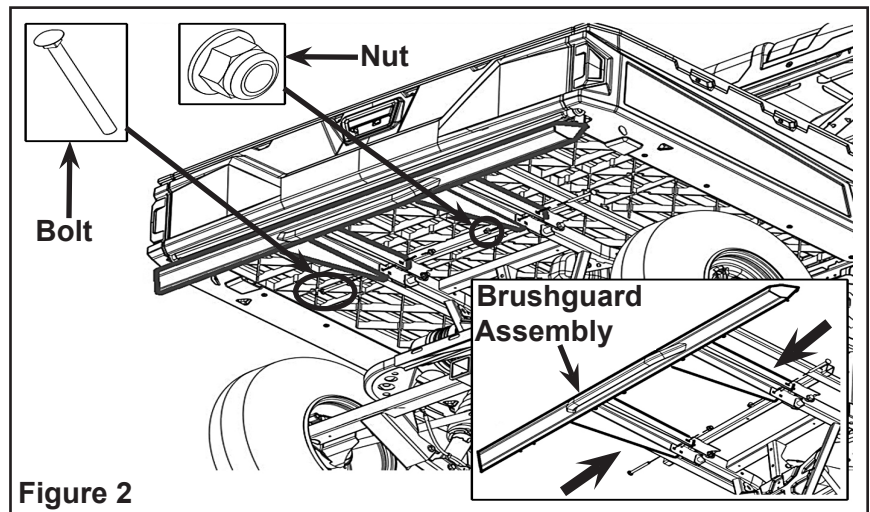

5. Secure the rear bumper assembly with the dump box frame with the four bolts (PN 7518479). Hand tighten the nuts (PN 7547317). Figure 3.

6. After installing the hardware, tighten the four bolts. Tighten the two carriage bolts just beyond snug.

NOTE: Torque to 12 ft. lbs. (16.26 Nm).

NOTE: Do not over tighten the carriage bolts. This might cause damage to box hinges.

7. Reinstall the tailgate.

