

GUN BRACKET KIT



P/N 2889327

BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference and parts ordering information.

APPLICATION

Verify accessory fitment at www.polaris.com.


This kit designed to hold *Kolpin Stronghold Gun Boots*®

REQUIRED SOLD SEPARATELY

Only parts for installation of the Gun Bracket Kit are included. For complete installation, the following additional kit is required (sold separately):

- *Box Rack*, P/N 2889235
- *Platform Rack*, P/N 2889236
- *Stronghold Latch Mount*, P/N 2884106

KIT CONTENTS

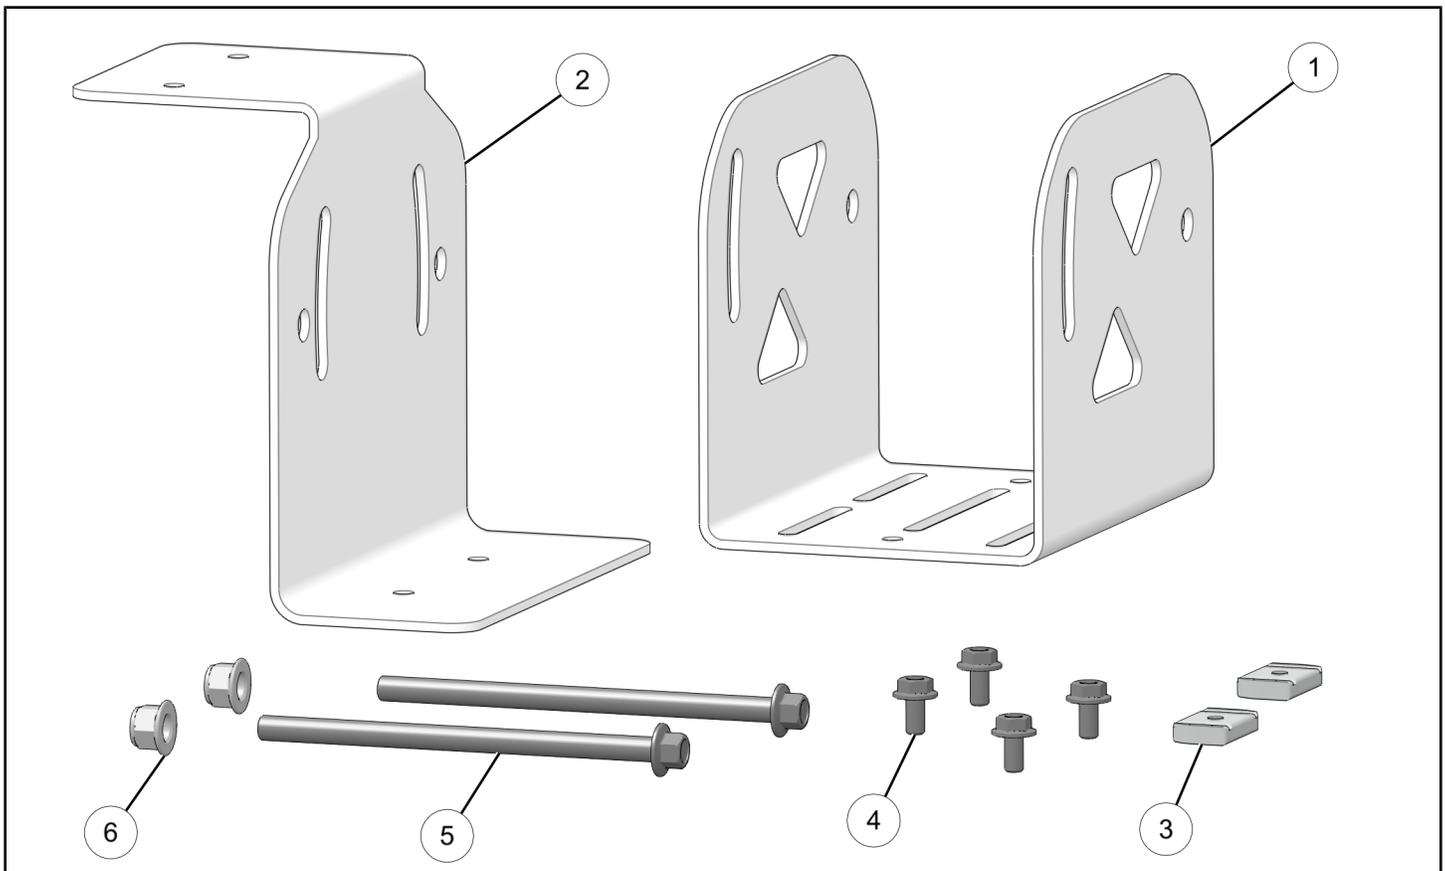

REF	QTY	PART DESCRIPTION	P/N AVAILABLE SEPARATELY
1	1	U-Bracket – Steel, 3.0 mm	n/a
2	1	Weld – Side Bracket	n/a
3	2	Nut – Channel, M6	n/a
4	4	Screw – Hex Flange, M6 x 1.0 x 12 mm	n/a
5	2	Screw – Hex Flange, M8 x 1.25 x 135 mm	7517719
6	2	Nut, M8 x 1.25 mm	7547332

TOOLS REQUIRED

- Safety Glasses
- Socket Set, Metric
- Torque Tool (provided with Platform Kit, P/N 2889237)

IMPORTANT

Your Gun Bracket Kit is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris. For your safety, and to ensure a satisfactory installation, perform all installation steps correctly in the sequence shown.

INSTALLATION INSTRUCTIONS

VEHICLE PREPARATION

GENERAL

1. Park vehicle on a flat surface.
2. Shift vehicle into PARK.
3. Turn key to OFF position and remove key.

ACCESSORY INSTALLATION

IMPORTANT

Box Rack Brackets and the Platform Rack (both sold separately) must be installed prior to installing the Gun Bracket.


GUN BRACKET INSTALLATION

NOTICE


For versatility and ease of access, the gun bracket can be installed in multiple locations on the platform rack.

POSITION 1

1. Insert two channel nuts ③ into platform rack frame (A).

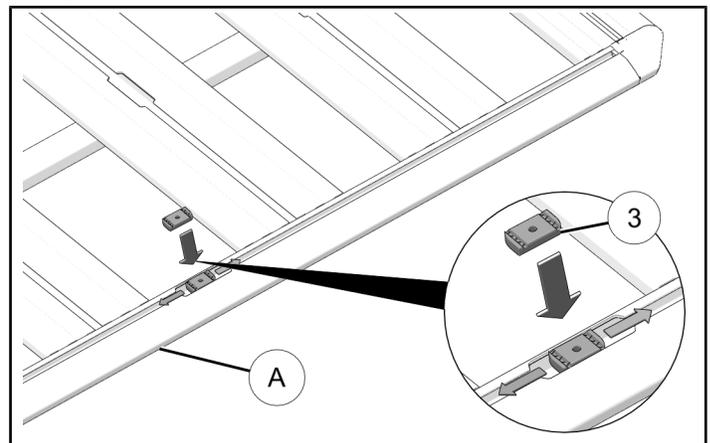


2. Slide both channel nuts ③ to desired location.

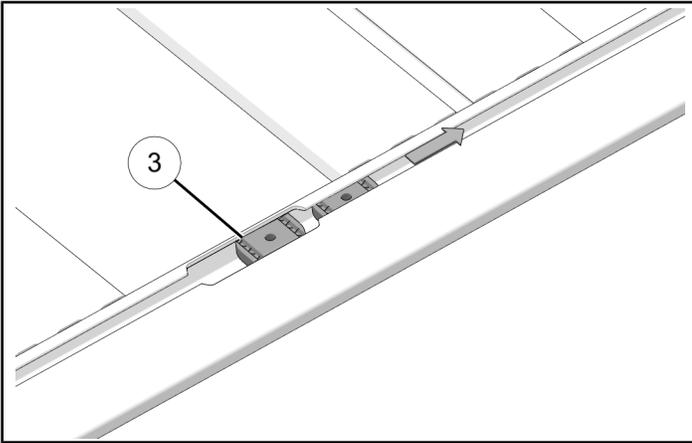


3. Loosely install pioneer side bracket ② to platform rack frame ① with two screws ④ and the two channel nuts ③.

Do not torque screws at this time.

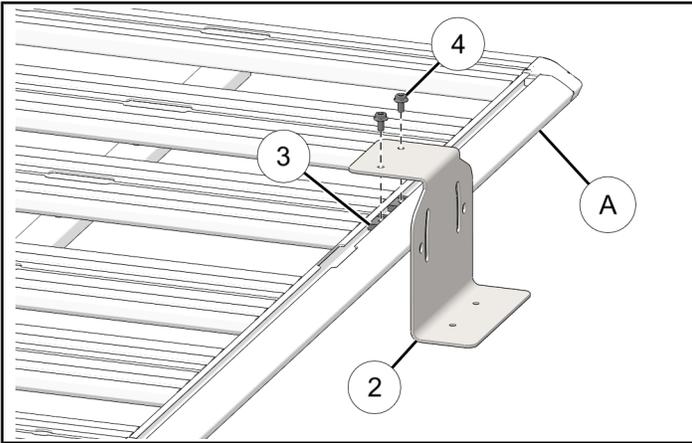

4. Attach pioneer u-bracket ① to pioneer side bracket ② with two screws ④.

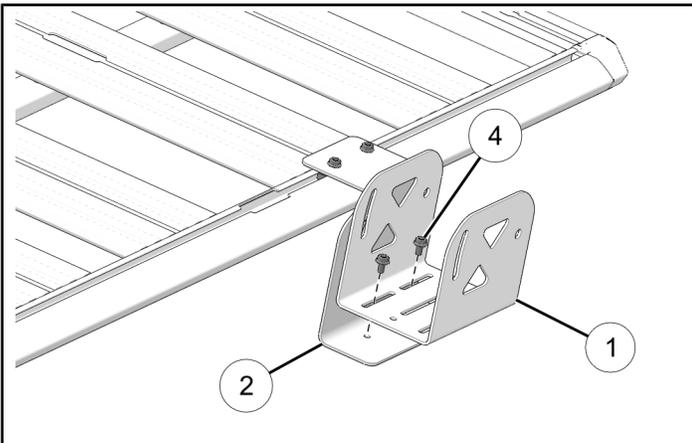


5. Torque two pioneer side bracket screws ④ with torque tool ⑤ or torque to specification using socket set.

NOTICE

Turn each screw with torque tool until it clicks.


TORQUE

Bracket Screws ④:
44 in-lbs (5 N·m)

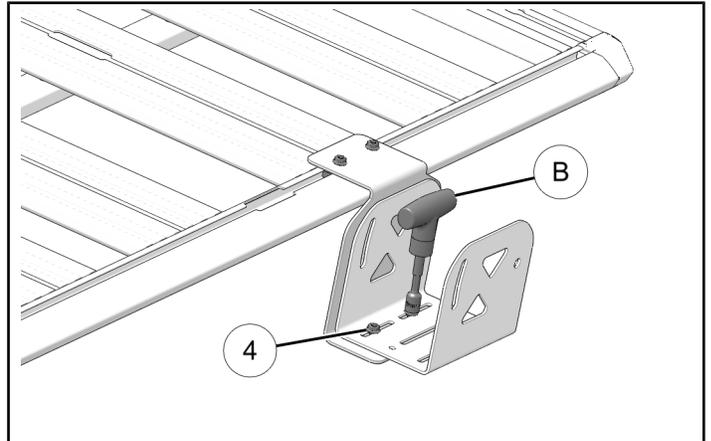


**STRONGHOLD® AUTOLATCH MOUNT
INSTALLATION (REQUIRED SOLD
SEPARATELY)**


1. Slide autolatch mount ① into pioneer u-bracket ①, as shown.

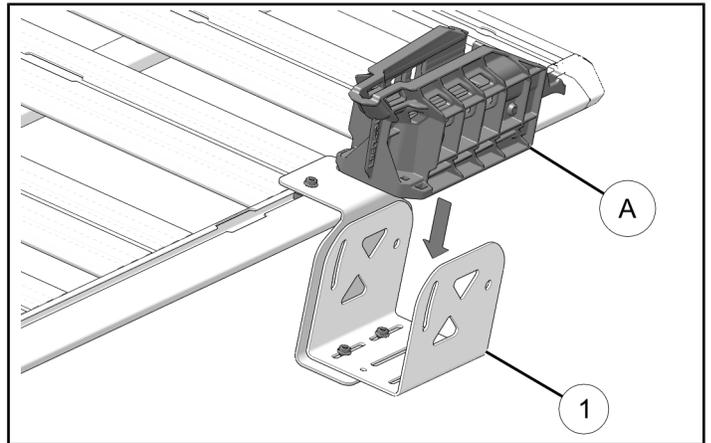

- Align holes on autolatch mount (A) with holes on pioneer u-bracket (1).

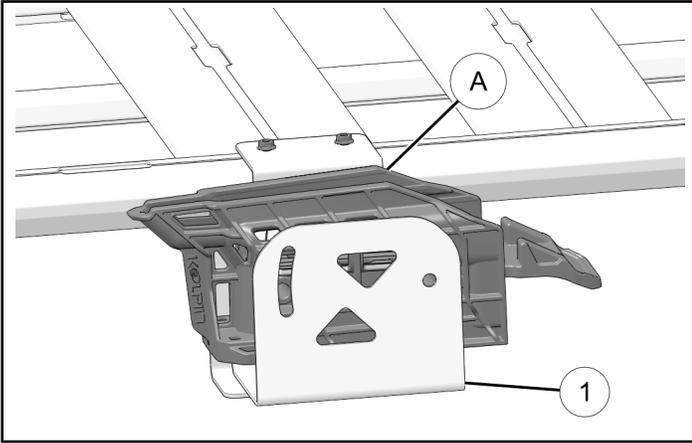


- Loosely install autolatch mount (A) to pioneer u-bracket (1) with two screws (5) and two nuts (6).

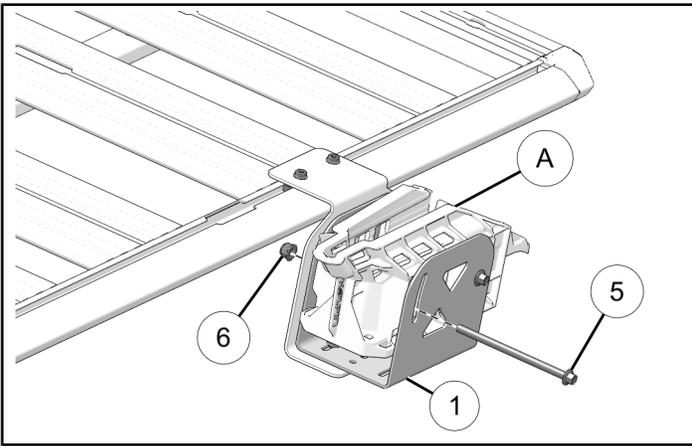


GUN BRACKET POSITION

- Push gun boot (sold separately) into gun bracket assembly until autolatch mount (A) clicks.

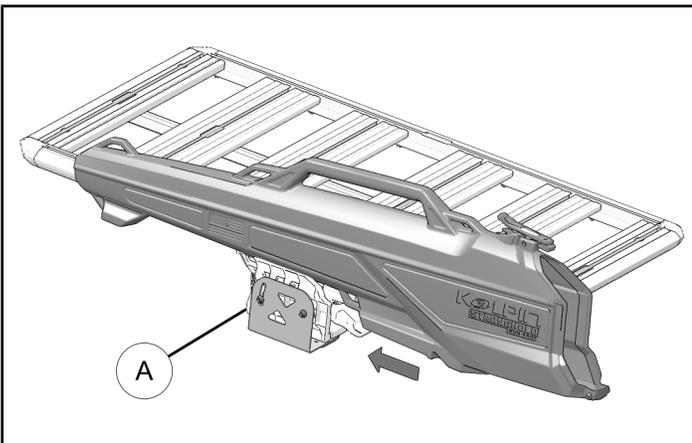

- Slide assembly to desired position.

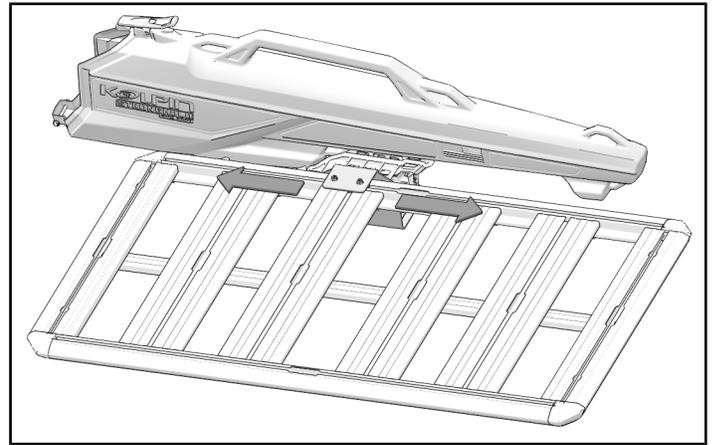


- Torque two pioneer side bracket screws (4) with torque tool (B) or torque to specification using socket set.

NOTICE


Turn each screw with torque tool until it clicks.

TORQUE

Bracket Screws (4):
44 in-lbs (5 N·m)

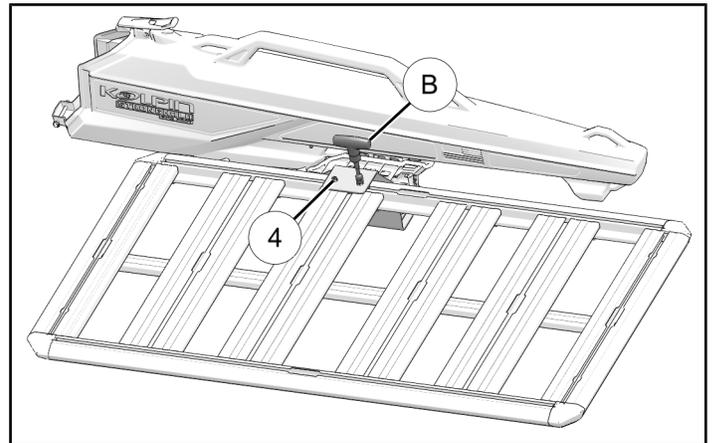


- Adjust angle of gun boot to desired position.

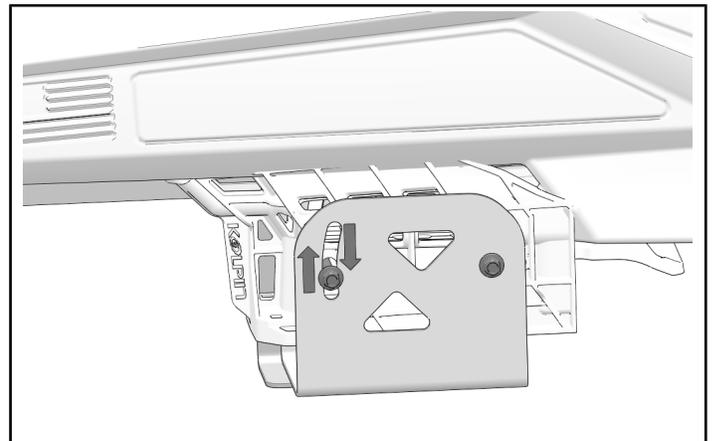

5. Counter hold nuts and torque two screws ⑤ to specification.


TORQUE

Pioneer U-Bracket Screws ⑤:
80 in-lbs (9 N·m)

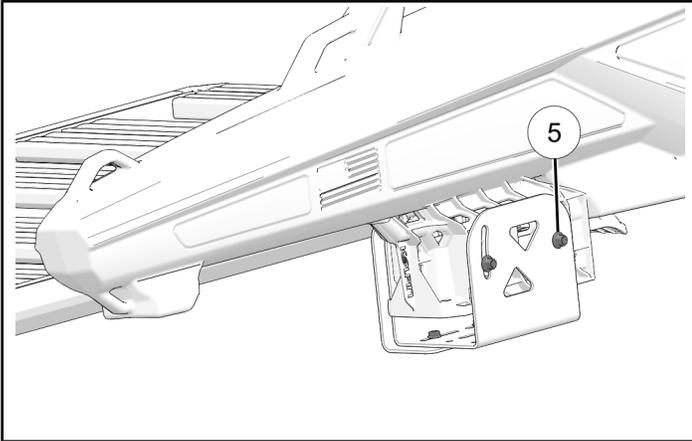


POSITION 2 AND 3

1. Insert two channel nuts ③ into preferred platform plank.

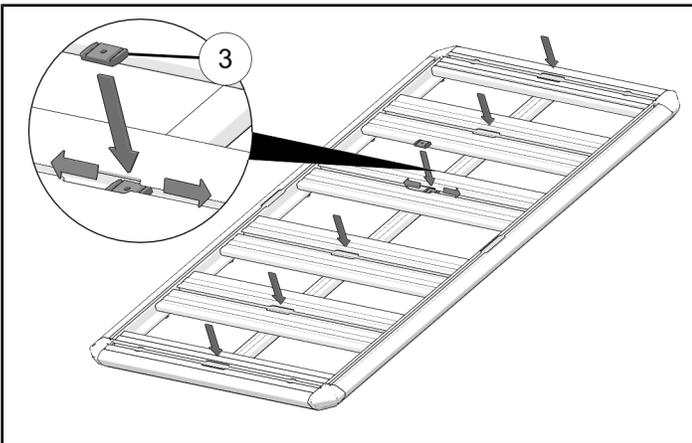


2. Slide channel nuts ③ to preferred location.

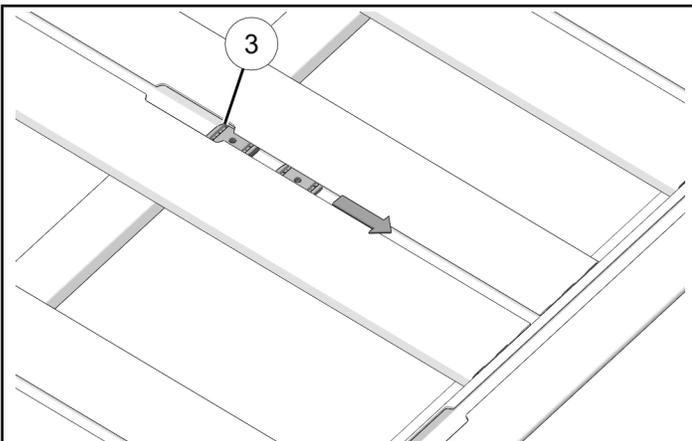


3. Install pioneer u-bracket ① to platform A with two screws ④ and the two channel nuts ③.

- Position 2:

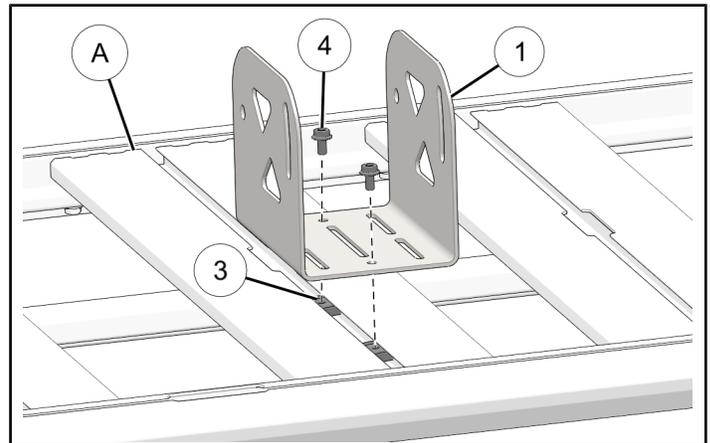

- Position 3:

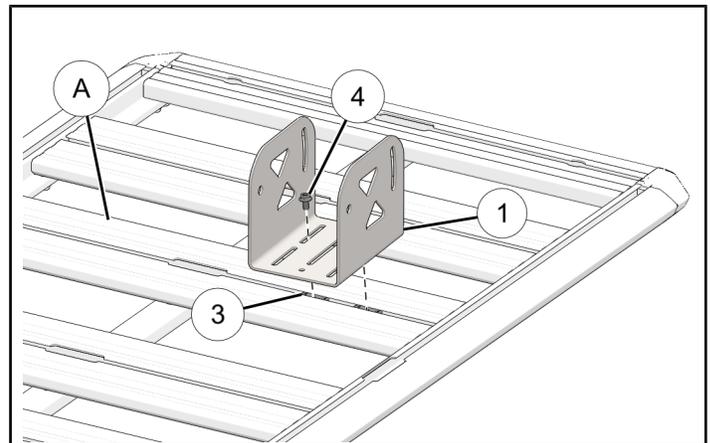


- Torque two screws ④ with torque tool ③ or torque to specification using socket set.

NOTICE

Turn each screw with torque tool until it clicks.


TORQUE

Bracket Screws ④:
44 in-lbs (5 N·m)

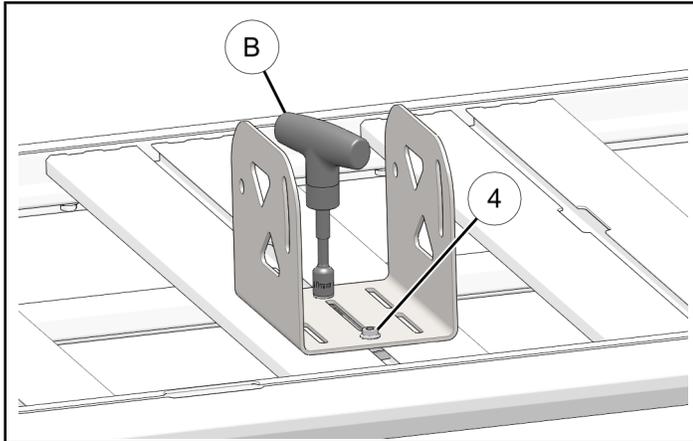


**STRONGHOLD® AUTOLATCH MOUNT
INSTALLATION (REQUIRED SOLD
SEPARATELY)**


- Slide autolatch mount ① into pioneer u-bracket ②, as shown.

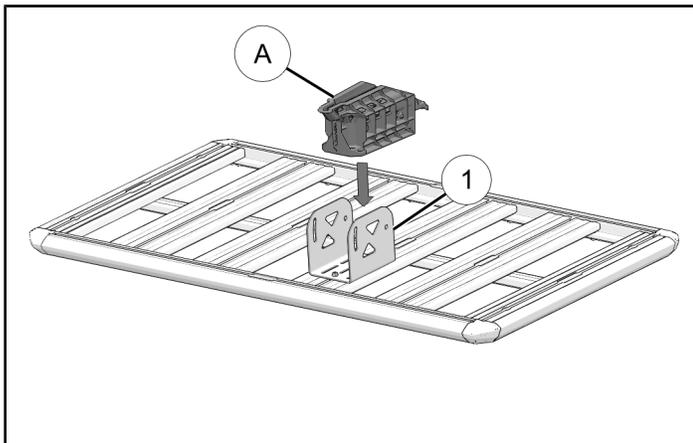

- Align holes on autolatch mount ① with holes on pioneer u-bracket ②.

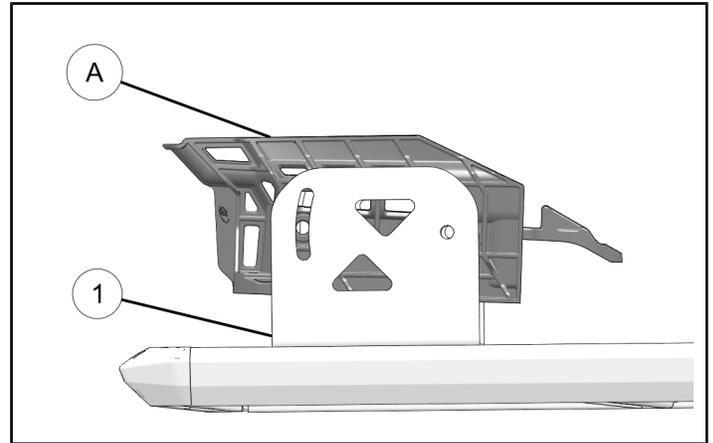


- Loosely install autolatch mount ① to pioneer u-bracket ② with two screws ⑤ and two nuts ⑥.

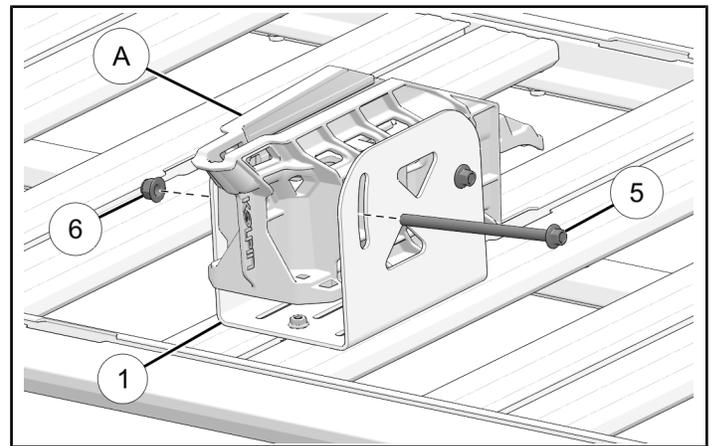


GUN BRACKET POSITION

- Push gun boot (sold separately) into gun bracket assembly until autolatch mount ① clicks.

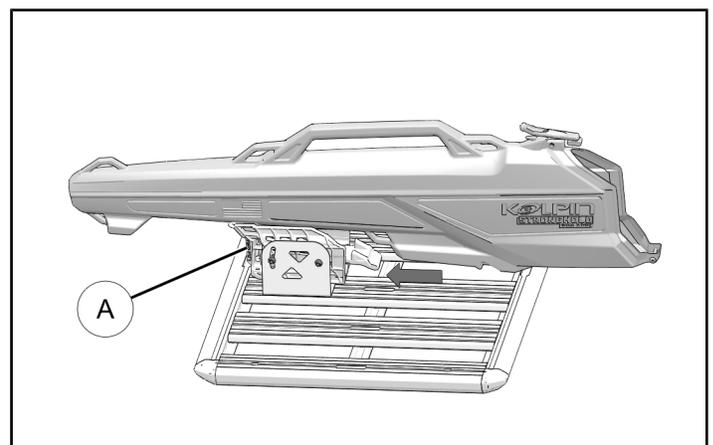


2. Adjust angle of gun boot to desired position.

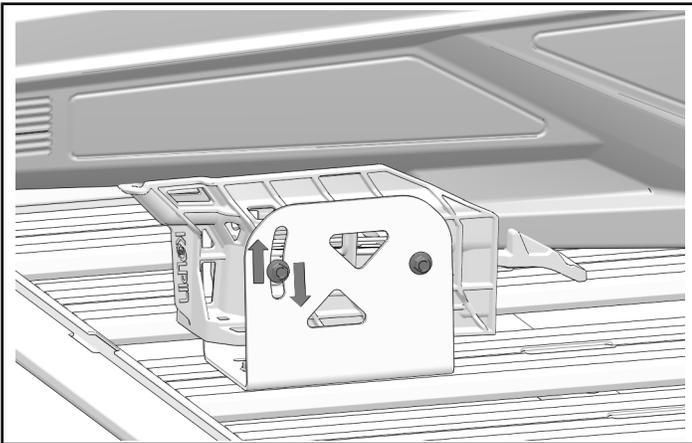

3. Counter hold nuts and torque two screws ⑤ to specification.

TORQUE

Pioneer U-Bracket Screws ⑤:
80 in-lbs (9 N·m)

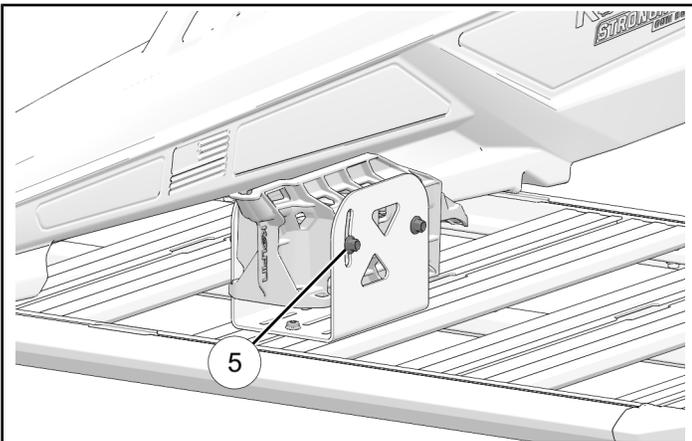


OPERATION

GUN BOOT INSTALLATION

1. Push gun boot into autolatch mount (A) until autolatch mount clicks.


CAUTION

Make sure gun boot is fully seated in autolatch mount. Failure to install gun boot properly could result in gun boot coming loose and falling out of autolatch mount and vehicle, causing damage to autolatch mount and/or vehicle.

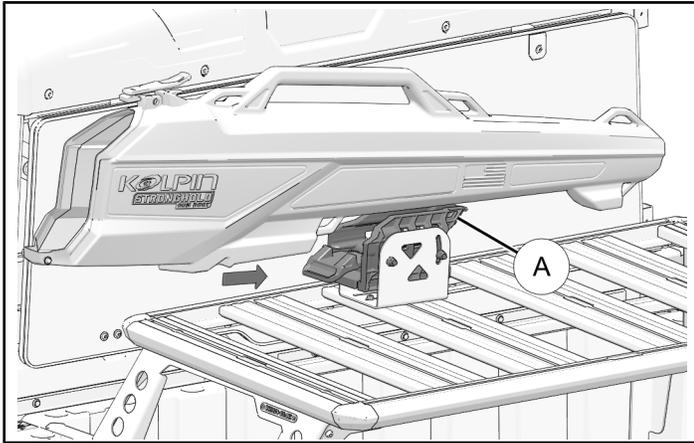

GUN BOOT REMOVAL

1. Push lever on autolatch mount (A) down and pull gun boot out of autolatch mount.

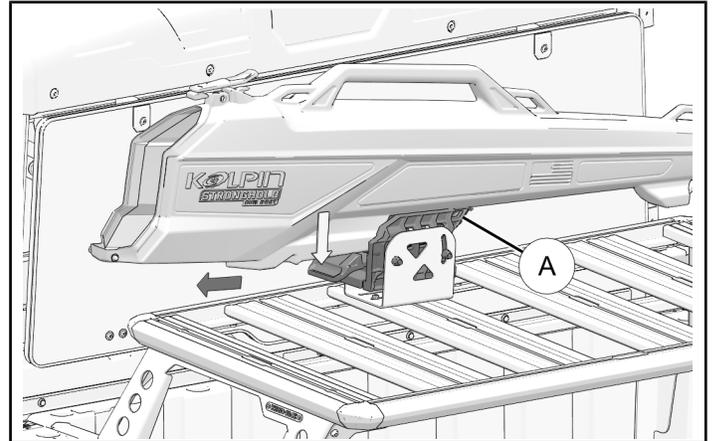

INSTRUCTION FEEDBACK FORM

A feedback form has been created for the installer to provide any comments, questions or concerns about the installation instructions. The form is viewable on mobile devices by scanning the QR code or by clicking [HERE](#) if viewing on a PC.

