

RIDER BACKREST PAD KIT

KIT P/N 2879542



Application

All MY14 Indian Motorcycles

NOTE: Before you begin, read these instructions and check to be sure all parts and tools are accounted for in package. Please retain these installation instructions for future reference and parts ordering information. For your safety, and to ensure a satisfactory installation, perform all installation steps correctly in the sequence shown below..

Kit Contents:


| Quantity | Part Description | Part Number |
|----------|-----------------------------|-------------|
| 1 | Rider Backrest Pad Assembly | 2685709 |
| 1 | Instructions | 9924322 |

You will need to supply:


Rider Backrest Mount PN 2879543 must be installed on motorcycle in order to use this product.

INSTALLATION INSTRUCTIONS

1. Slide post through slot in rear of driver seat and engage in mount. You will hear a click as the detents engage.
2. Set height to desired detent.

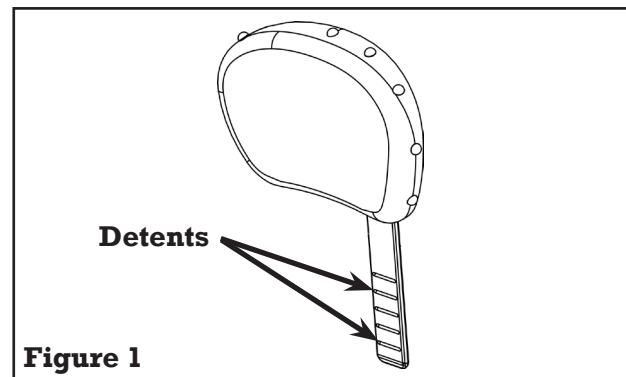

3. Adjust fore-aft position using threaded knob on the rear side of the pad.

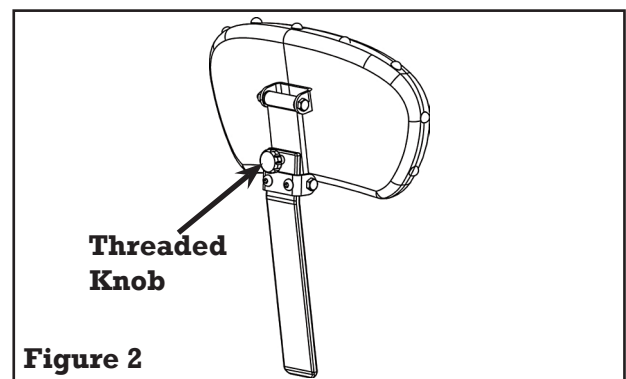

WARNING: Post must be engaged in a detent. Do not set height higher than the tallest detent. Periodically check all fasteners to ensure they are remaining tight.

Clean pad with warm water, mild soap and soft cloth. Let air dry.

NOTE: Leather will lose oils and condition with time and exposure to the elements. Leather Dressing will add back many of the oils that are lost from exposure to the weather. Apply dressing with a clean dry cloth. Use generously and allow to soak in. Allow to dry overnight. Wipe off excess. Under normal conditions annual application is sufficient.