

TIMBERSLED® SNOWBIKE TOW ROPE



P/N 2883655

APPLICATION

The Timbersled Snowbike Tow Rope is design to work with all Timbersled Snowbike models.


For more information visit Timbersled.com

BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference and parts ordering information.

KIT CONTENTS

This Kit includes:

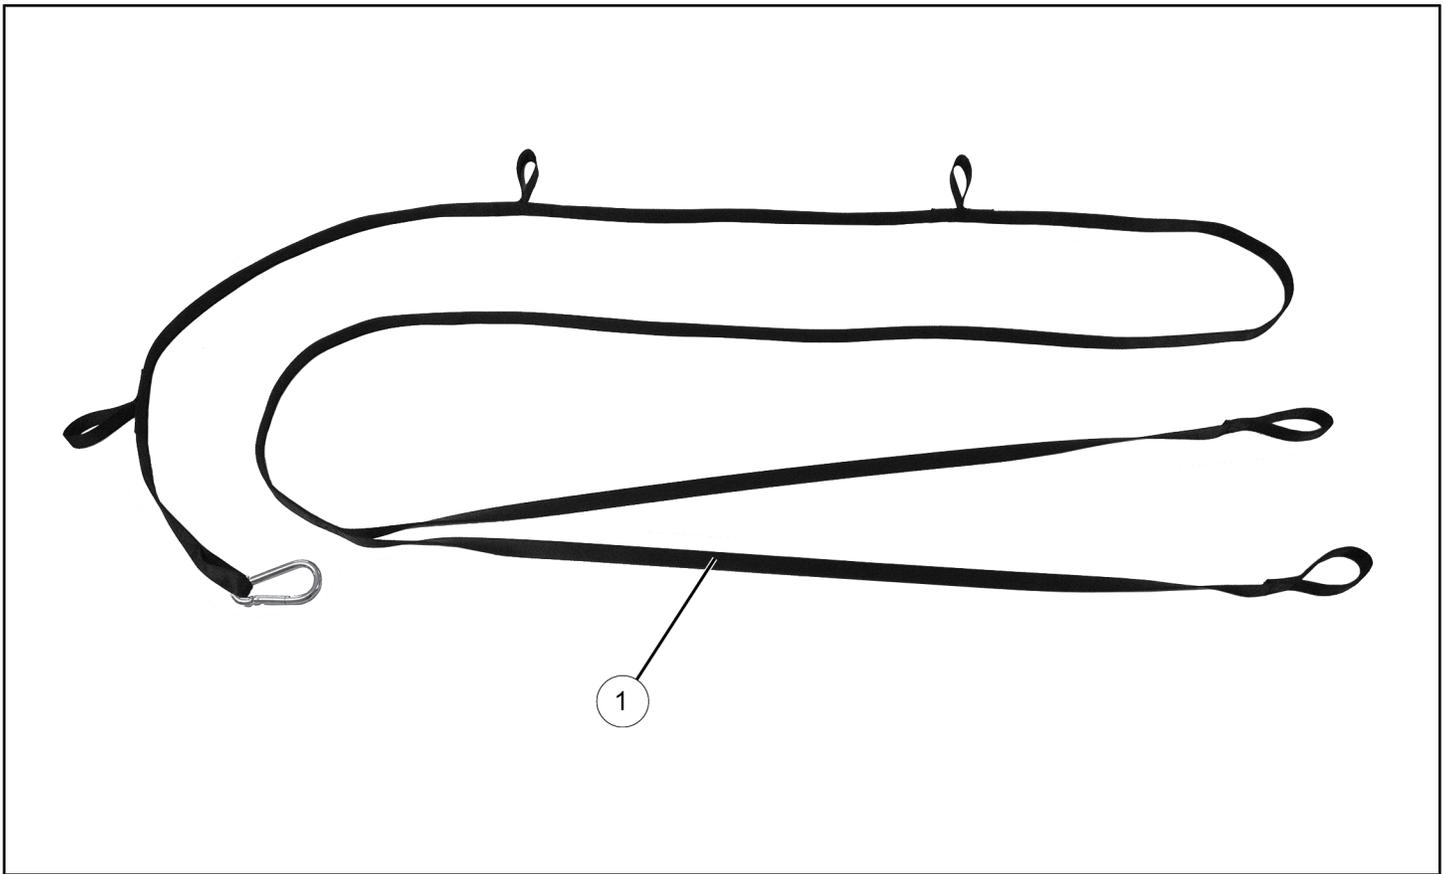

REF	QTY	PART DESCRIPTION	PART NUMBER
1	1	Tow Rope	2883655
	1	Instructions	9929052

TOOLS REQUIRED

None

IMPORTANT

Your Timbersled® Snowbike Tow Rope is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris. For your safety, and to ensure a satisfactory installation, perform all installation steps correctly in the sequence shown.

INSTALLATION INSTRUCTIONS

⚠ WARNING

NEVER use a strap that is frayed, worn, or otherwise damaged.

NEVER use the Timbersled Snowbike Tow Rope in conjunction with cables, chains or other devices.

NEVER place or wrap strap on or around any sharp objects that may damage, cut or otherwise compromise strap integrity.

NEVER apply excessive force into strap by using as a jerk strap.

ALWAYS take out all slack in tow rope BEFORE pulling vehicle. **DO NOT** use as a jerk strap. Failure to comply may lead to serious personal injury or death.



1. Locate the two foot peg loops **A** on the end of the strap and pass the leading portion of each foot peg strap through the foot peg loop to create a cinching loop as shown.





2. Feed both foot peg straps through the front forks to each foot peg as shown. Pull cinch loops tight around the inner portion of foot pegs as shown to ensure loops do not pull off during use.

NOTE

If snowbike is equipped with a Timbersled TRIO™, ensure the straps are routed as shown with one strap on each side of the TRIO™ shock assembly. **DO NOT** cross straps.

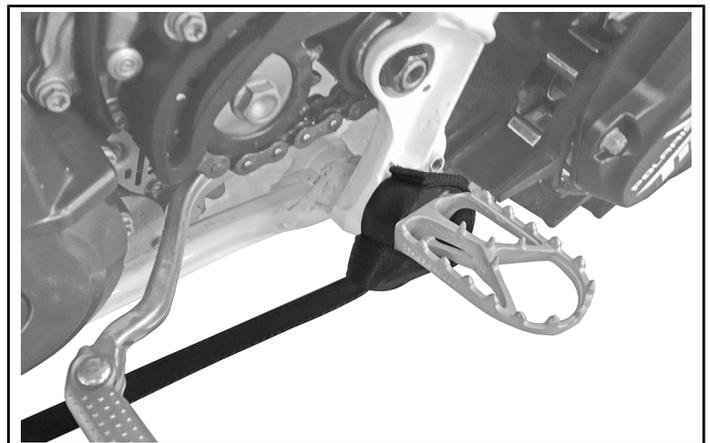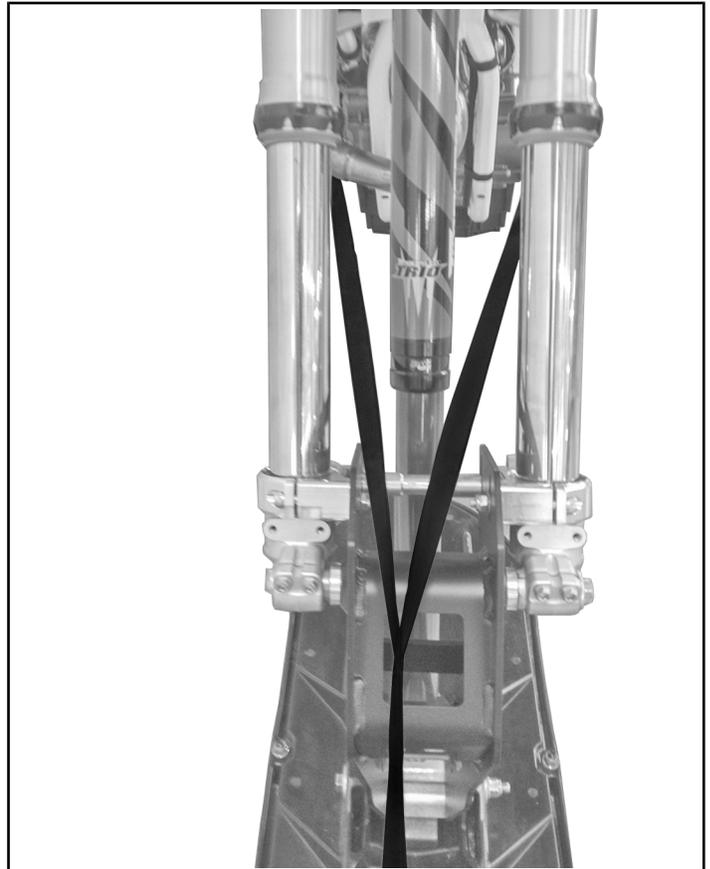

3. Next, connect to towing vehicle by feeding carabiner and strap around rear bumper and clipping the carabiner strap to one of three loop strap locations to achieve the desired tow rope length.

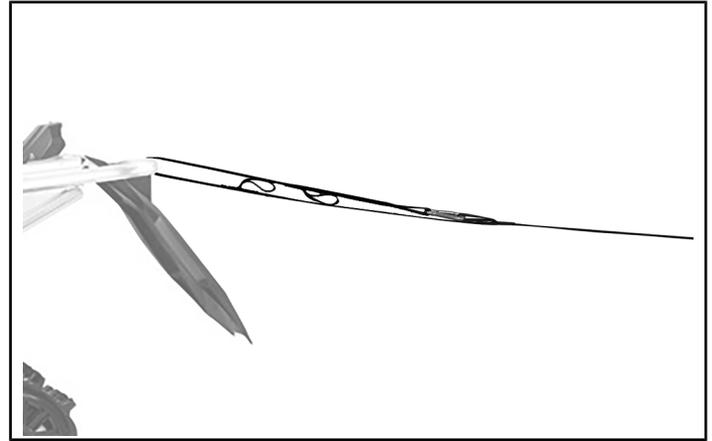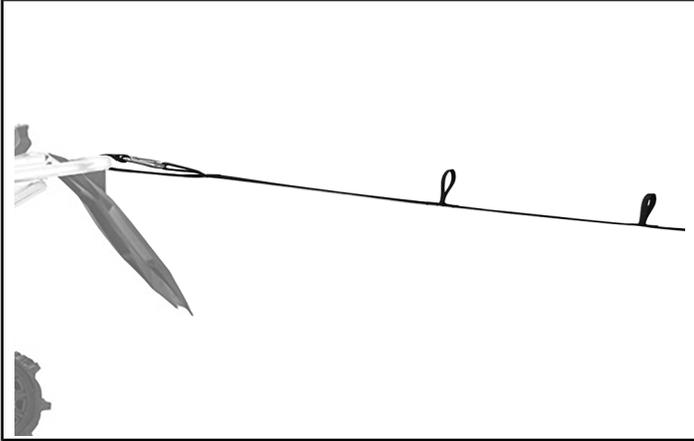

4. Double check to make sure strap is properly routed and secured before towing.

FEEDBACK FORM

A feedback form has been created for the installer to provide any comments, questions or concerns about the installation instructions. The form is viewable on mobile devices by scanning the QR code or by clicking [HERE](#) if viewing on a PC.

