

AUDIO MOUNT KIT




P/N 2880458

APPLICATION

2009 AND NEWER SPORTSMAN 500/800 MODELS; 2009 AND NEWER SPORTSMAN TOURING 500/800; 2009 AND NEWER SPORTSMAN X2 500/800; 2015 SPORTSMAN SP 570 AND 570 TOURING MODELS; SPORTSMAN 570 AND SPORTSMAN 570 TOURING MODELS; SPORTSMAN ACE MODELS; RANGER AND RZR MODELS

BEFORE YOU BEGIN

Read these instructions thoroughly and make sure all parts and tools are accounted for. Please retain these installation instructions for future reference and parts ordering information.

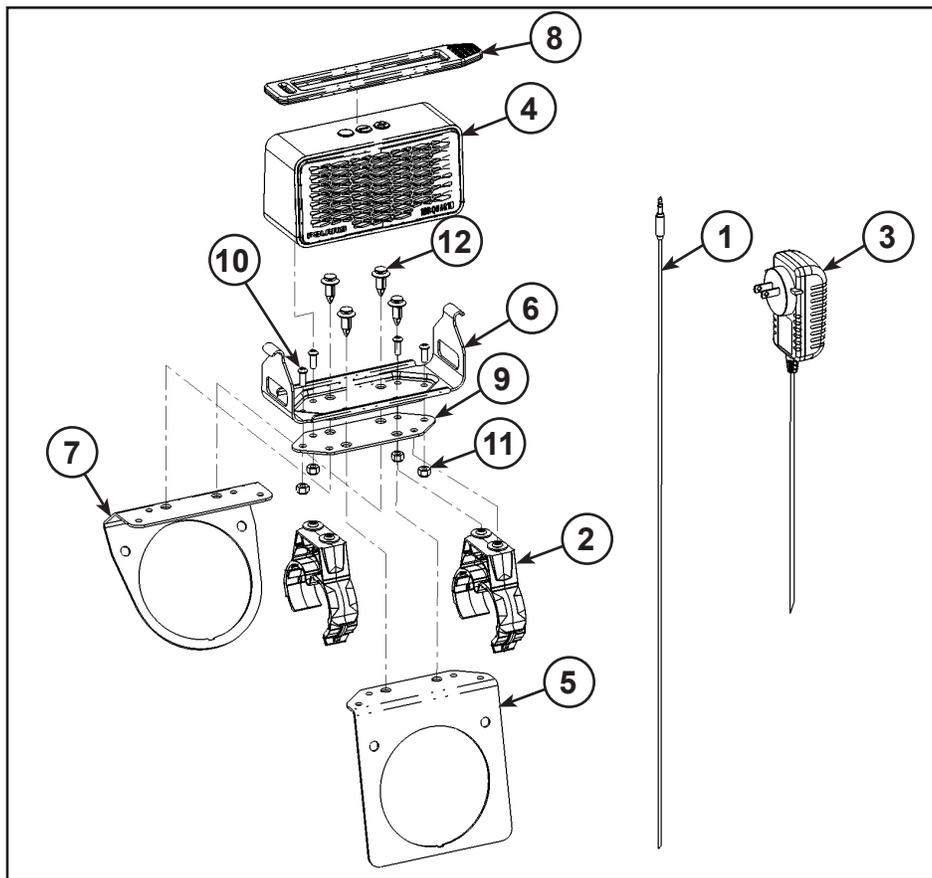

KIT CONTENTS

Ref	Qty	Part Description	Part Number
1	1	Audio Cable	2412741
2	2	Plastic Clamp	2878747
3	1	Charger	4015142
4	1	Bluetooth Speaker	4015226
5	1	Audio Mount Bracket, XP	5260513
6	1	Audio Mount Base	5260511
7	1	Audio Mount Bracket, SPH	5260512
8	1	Strap Audio Mount	5415440

Ref	Qty	Part Description	Part Number
9	1	Pad	5415441
10*	4	Screw	7517396
11*	4	Nyloc Nut	7541925
12*	4	Tuflok Rivet	7661855
	1	Audio User Manual	9925016
	1	Instructions	9925685

ITEMS MARKED (*) ARE INCLUDED IN HARDWARE KIT PN 2205767.

TOOLS NEEDED

Safety Glasses 5/16" Drill Bit Drill Metric Socket Set and Ratchet

APPROXIMATE ASSEMBLY TIME

10-15 min



IMPORTANT

Your Polaris AUDIO MOUNT KIT is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris. For your safety, and to ensure a satisfactory installation, perform all installation steps correctly in the sequence shown.


INSTALLATION INSTRUCTIONS

FOR 2009 AND NEWER SPORTSMAN 500/800 MODELS; 2009 AND NEWER SPORTSMAN TOURING 500/800; 2009 AND NEWER SPORTSMAN X2 500/800; 2015 SPORTSMAN SP 570 AND 570 TOURING MODELS


1. Place the vehicle in "PARK" and turn the key to "OFF" position. Remove the key from the vehicle.
2. Push out cluster with bezel assembly (A) by hand from pod (B). If Bezel separates from gauge don't be alarmed, you will snap it back into place in a later step. If you cannot remove the cluster by hand, consider removing the front pod (C) by removing six screws (D) allowing access to push the gauge out from the back side. See figures.

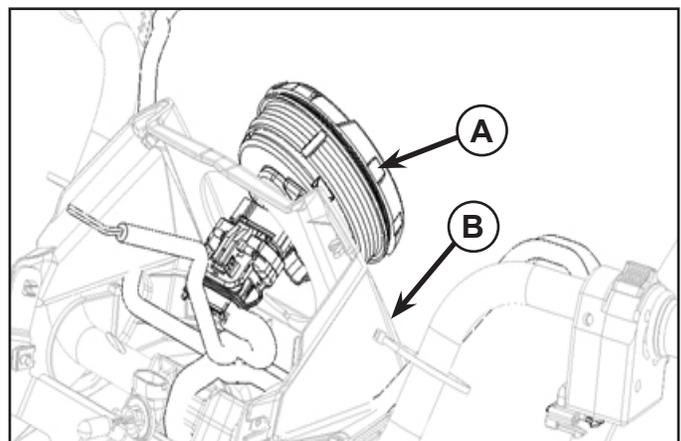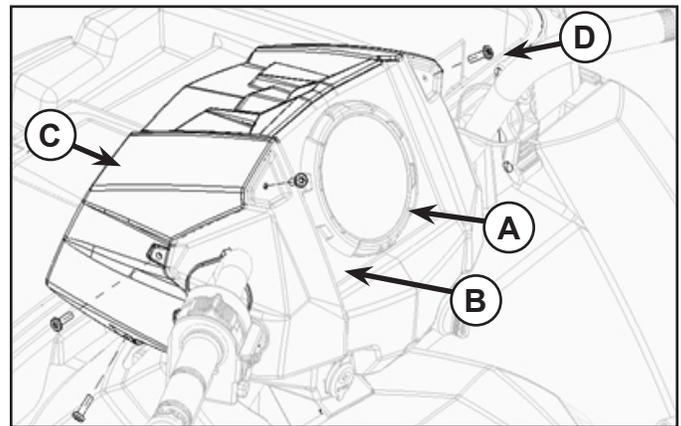


3. Align audio mount bracket (5) on the pod (B) and use as template to drill the holes (E) of dia 5/16" as shown in figure.

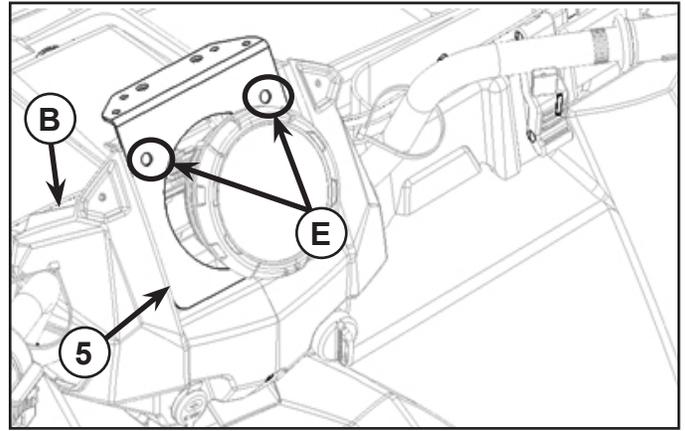


4. Fasten audio mount bracket (5) with audio mount base (6) using four screws (10) and nyloc nuts (11). Tighten screws until snug.

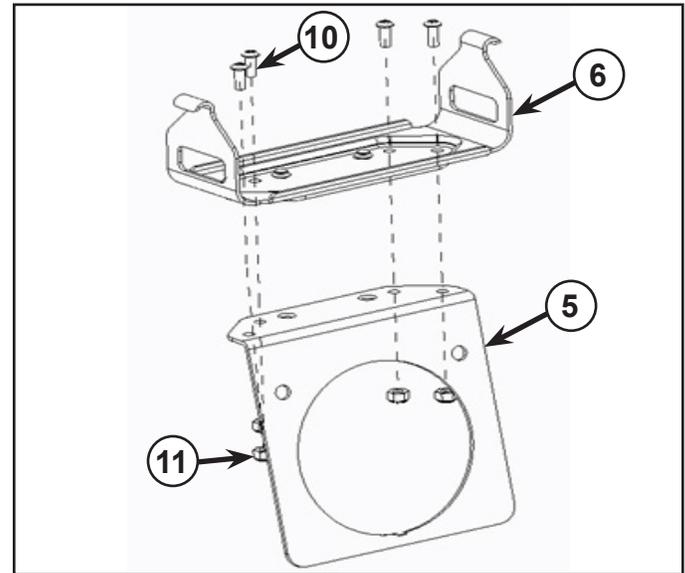


5. Place bluetooth speaker (4) and strap (8) on to the audio mount assembly as shown in figure.

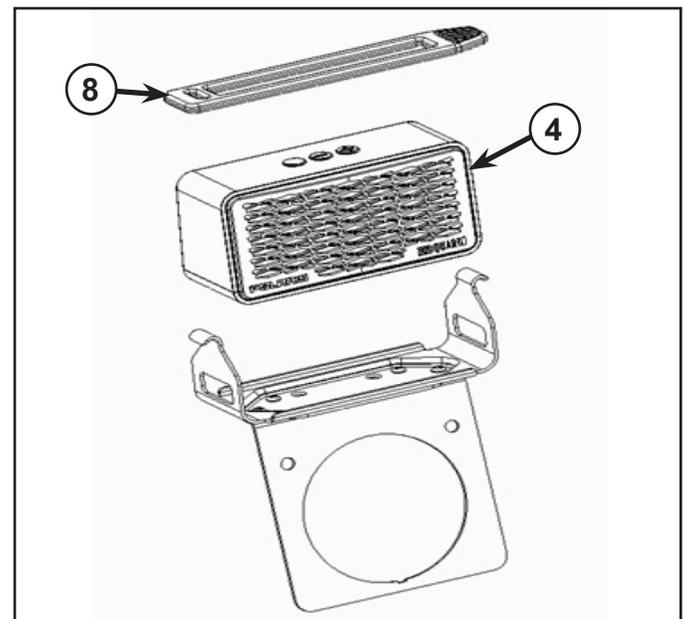

- Align and Install audio mount assembly using two tuflok rivets (L) as shown in figure.

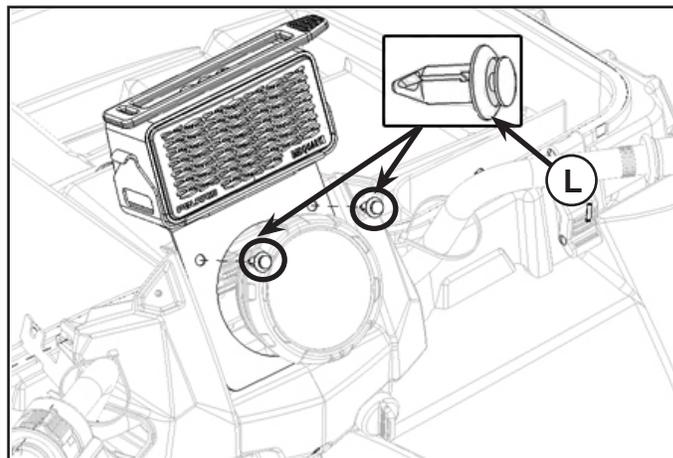


- Use rubbing alcohol, pledge or other temporary lubricant on the rubber gasket, both sides. Push back bezel and cluster assembly (A) onto the pod as shown in figure.

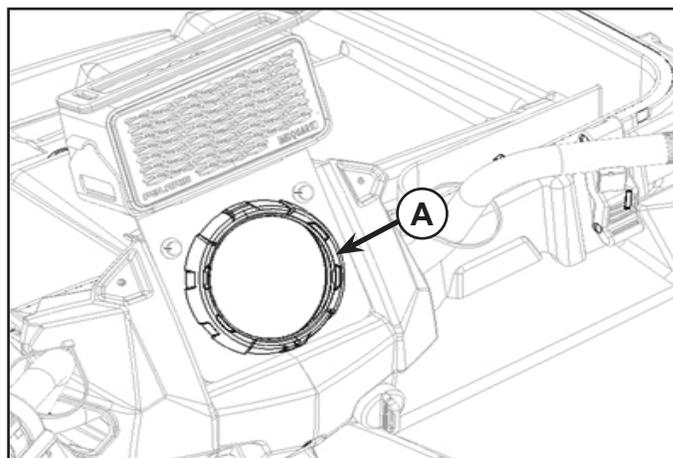


- Only if removed in Step 2, re-install front pod (C) by fastening six screws. Tighten screws to torque 10 in-lbs. (1.13 Nm).

FOR SPORTSMAN 570 AND SPORTSMAN 570 TOURING


- Place the vehicle in "PARK" and turn the key to "OFF" position. Remove the key from the vehicle.
- Push out cluster with bezel assembly (F) by hand from upper pod (G). If Bezel separates from gauge don't be alarmed, you will snap it back into place in a later step. See figure.

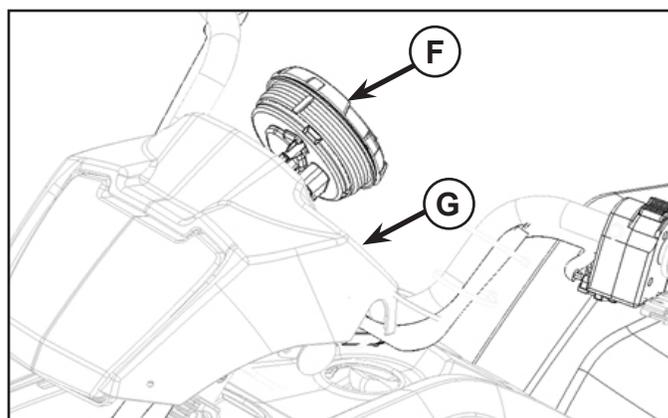


3. If you cannot remove the cluster by hand, consider removing the upper pod (G) by removing three screws (H) allowing access to push the cluster out from the back side of the assembly as shown in figure.

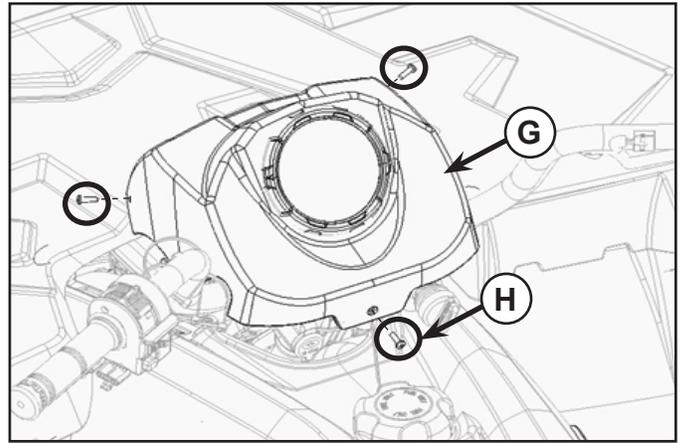


4. Align audio mount bracket (7) with pod (G) and use as template to drill the holes of dia 5/16" as shown in figure.

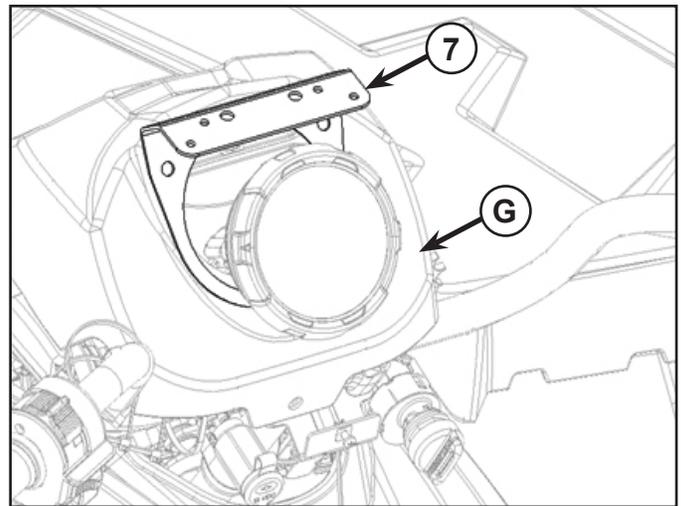


5. Fasten audio mount bracket (7) with audio mount base (6) using four screws (10) and nyloc nuts (11). Tighten screws until snug.

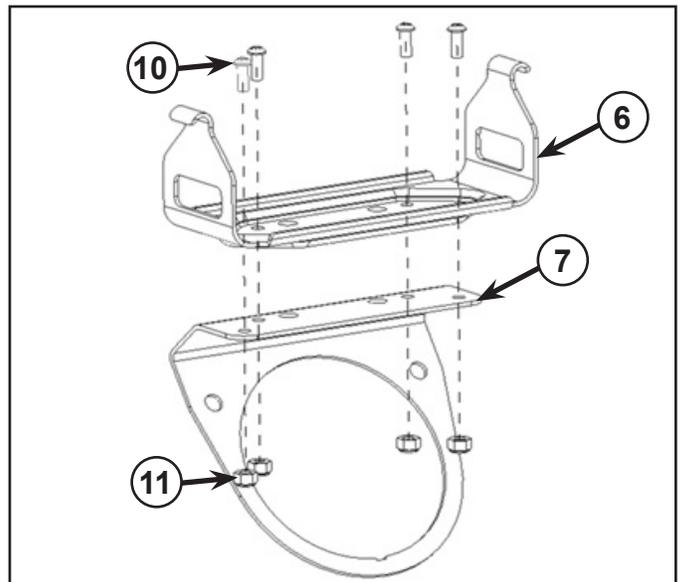


6. Align and Install audio mount bracket assembly on the pod using two tuflok rivets (12) as shown in figure.

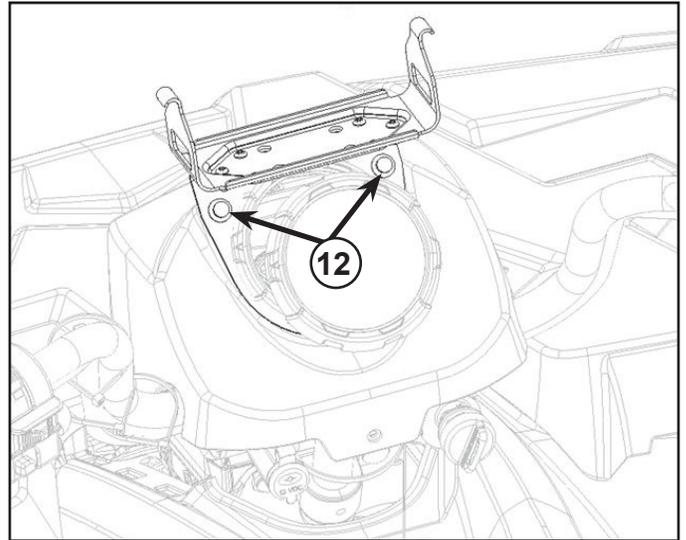

7. Use rubbing alcohol, pledge or other temporary lubricant on the rubber gasket, both sides. Push back bezel and cluster assembly (F) to fix onto the upper pod as shown in figure.

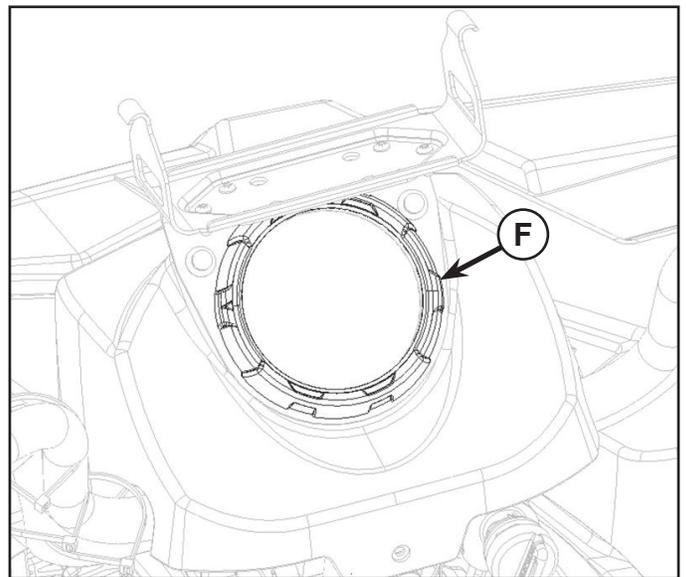


8. Place bluetooth speaker (4) and strap (8) on to the audio mount bracket assembly as shown in figure.

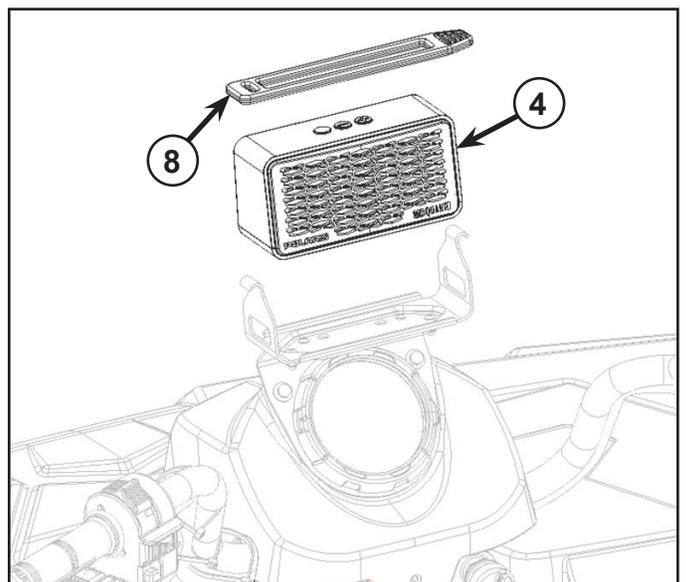


9. Re-install upper pod (G) by fastening three screws removed in Step 2. Tighten screws to torque 10 in-lbs. (1.13 Nm).

FOR SPORTSMAN ACE MODELS (1.75" TUBE MOUNT)

1. Fasten plastic clamp (2) with audio mount base (6) using four screws (10). Tighten screws until snug.

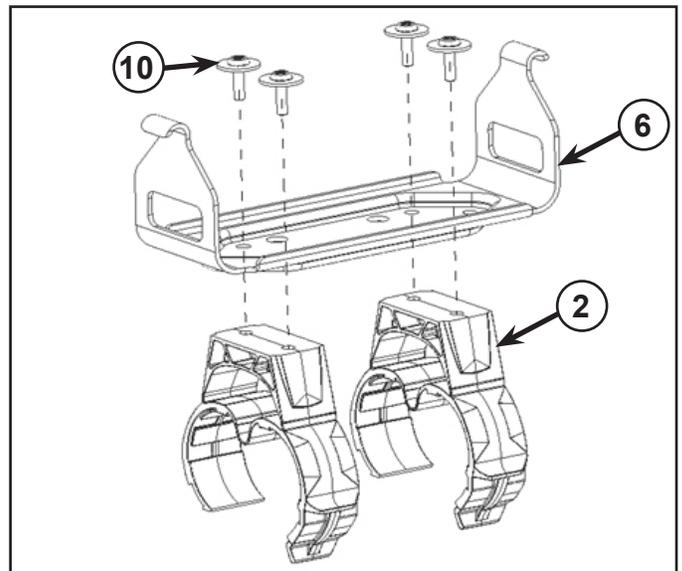


2. Place bluetooth speaker (4) and strap (8) on to the audio mount assembly (K) as shown.

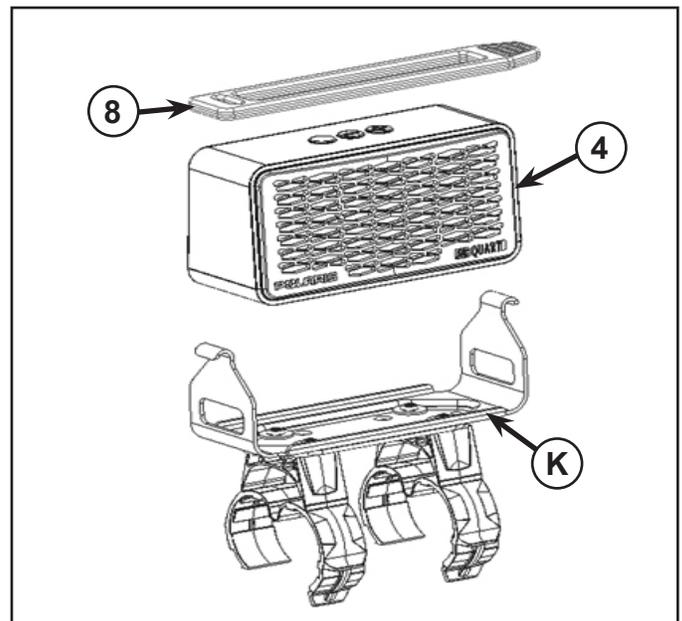

3. Snap fit bluetooth speaker assembly on to the ROPS tube (1.75" Dia) at any required location.


NOTE: Ensure audio mount assembly installed on ROPS tube will not obstruct vehicle operation and driver's vision.

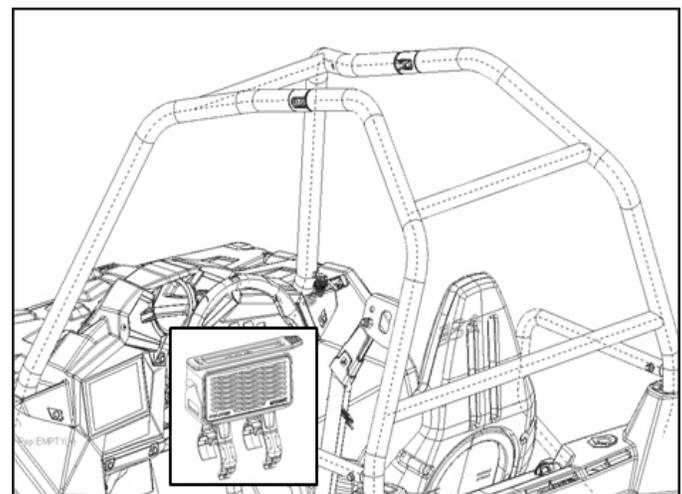


FOR RANGER AND RZR MODELS (DASH MOUNT)

1. Place audio mount base (6) at required location on the passenger side dash panel and use as template to drill hole of dia 5/16" as shown in figure.


NOTE: Ensure audio mount assembly installed on dash will not obstruct vehicle operation and driver's vision.

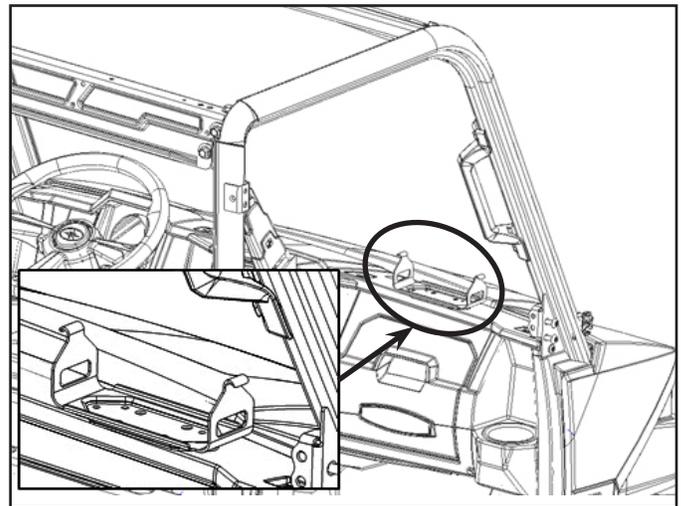

2. Before installing audio mount base (6), place and align the pad (9) with holes on dashboard and audio mount as shown in figure.

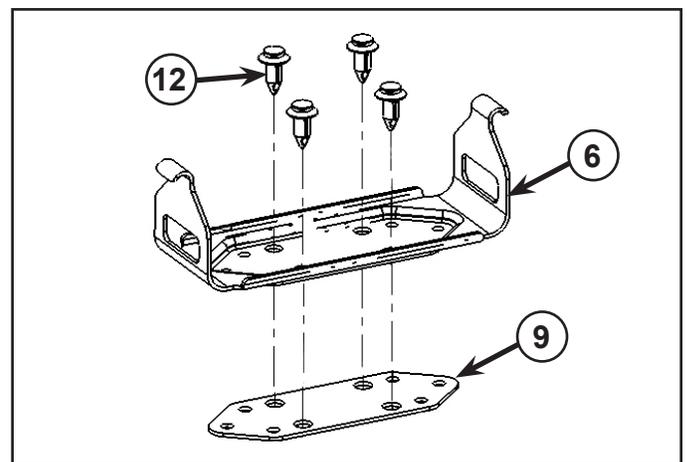

3. Mount audio mount base (6) with four tuflok rivets (12) on the dash panel as shown.

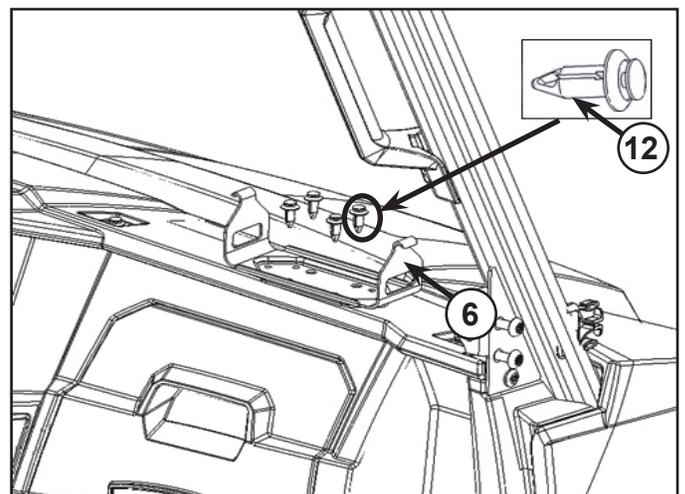

4. Place bluetooth speaker (4) and strap (8) on to the audio mount base (6) as shown in figure.

