PLATFORM RACK KIT

P*LARIS

ENGINEERED PARTS
ACCESSORIES & APPAREL

P/N 2889236; 2889237


BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference and parts ordering information.

APPLICATION

Verify accessory fitment at www.polaris.com.

KIT CONTENTS

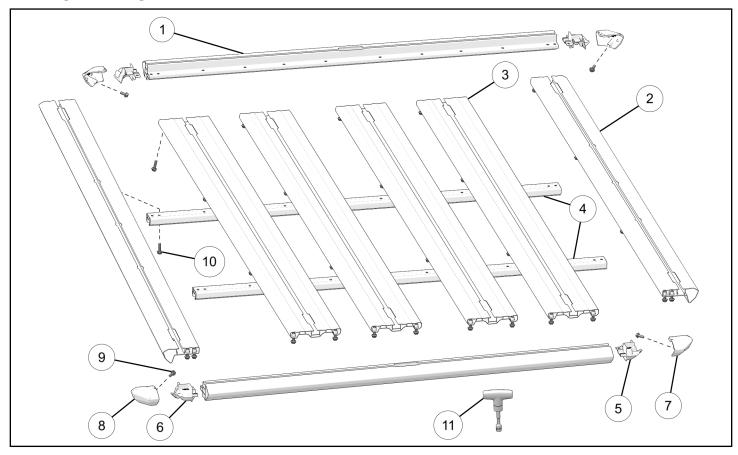

| REF | QTY | PART DESCRIPTION | P/N AVAILABLE SEPARATE- LY | AVAILABLE SERVICE KIT |
|-----|-----|---|-------------------------------------|-----------------------------|
| 1 | 2 | Platform Extrusion, Front and Rear | n/a | n/a |
| 2 | 2 | Platform Extrusion, Side | n/a | n/a |
| 3 | 4 | Platform Planks | n/a | n/a |
| 4 | 2 | Underbar Extrusion (Three Passenger P/N 2889236) Underbar Extrusion (Crew P/N 2889237) | n/a n/a | n/a n/a |
| 5 | 2 | Corner Base, RH | n/a | 2209074 |
| 6 | 2 | Corner Base, LH | n/a | 2209074 |

| REF | QTY | PART DESCRIPTION | P/N AVAILABLE SEPARATE- LY | AVAILABLE SERVICE KIT |
|-----|-----|--|-------------------------------------|-----------------------------|
| 7 | 2 | Corner Cover, RH | n/a | 2209074 |
| 8 | 2 | Corner Cover, LH | n/a | 2209074 |
| 9 | 4 | Bolt, Hex Head Flanged, M6 x 12 mm | n/a | 2209074 |
| 10 | 48 | Bolt, Hex Head Flanged, M6 x 25 mm (Three Passenger P/N 2889236) | n/a | n/a |
| | 36 | Bolt, Hex Head Flanged, M6 x 25 mm (Crew P/N 2889237) | n/a | n/a |
| 11 | 1 | Torque Tool, 53 in-lbs (6 N·m) | n/a | n/a |

TOOLS REQUIRED

- · Safety Glasses
- · Socket Set, Metric
- Torque Tool (provided)

IMPORTANT

Your Platform Rack Kit is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris. For your safety, and to ensure a satisfactory installation, perform all installation steps correctly in the sequence shown.

INSTALLATION INSTRUCTIONS

ACCESSORY INSTALLATION

PLATFORM ASSEMBLY


TIP

Assemble bed rack platform on soft surface to prevent damage to platform.


NOTICE

Platform bed rack will be assembled with bottom of rack facing up.

1. Set front and rear extrusion ① onto soft surface with shorter edge facing up.

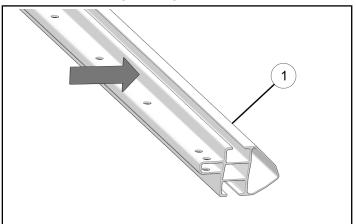


2. Install two right-hand corner base pieces ⑤ to front and rear extrusions ①.

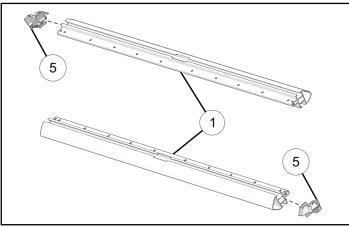

3. Insert right-hand corner base pieces ⑤ inside the channel on each end of extrusion ①.


NOTICE

Make sure holes on corner base pieces align with holes on extrusion.

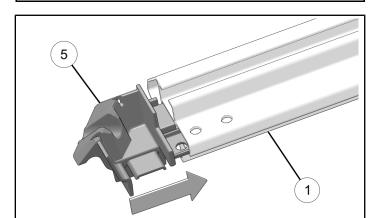




5

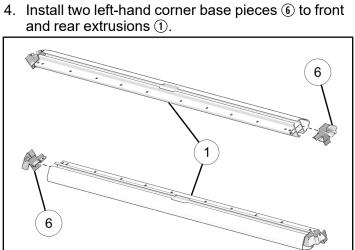


5. Insert left-hand corner base pieces ⑥ inside the channel on each end of extrusion ①.

NOTICE

Make sure holes on corner base pieces align with holes on extrusion.

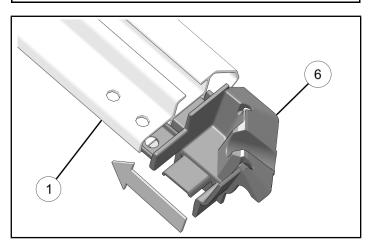


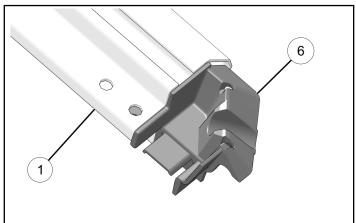



6. Slide two side extrusions ② into each corner base.

IMPORTANT

Make sure the holes on the side extrusions align with the holes on the front and rear extrusion bar assemblies.

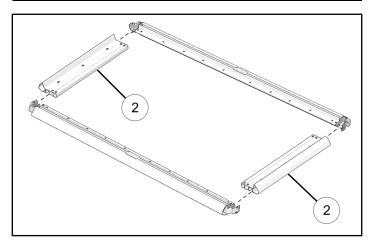


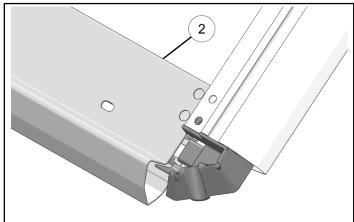

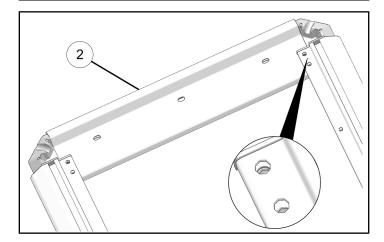


7. Loosely install side extrusions with eight bolts 10.

Do not torque bolts at this time.

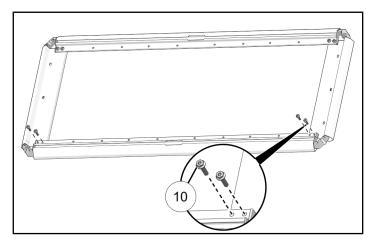


8. Loosely install four platform planks 3 to platform frame assembly with sixteen bolts 10.


Do not torque bolts at this time.

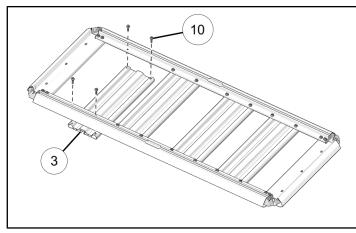

9. Loosely attach two right-hand ① and two left-hand8 corner covers with four bolts ⑨.

Do not torque bolts at this time.

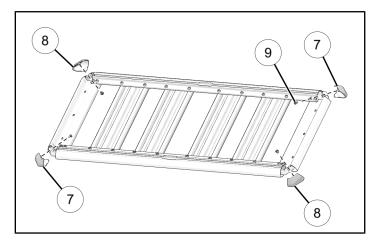


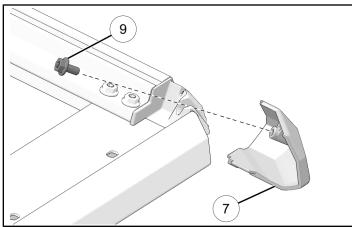

10. Torque all bolts with torque tool ①.

NOTICE


Turn each bolt with torque tool until it clicks.

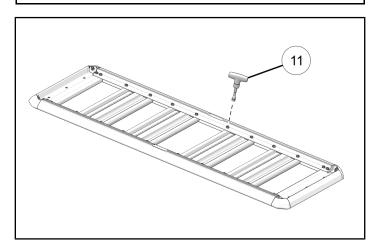

CREW UNDERBAR EXTRUSION INSTALLATION

1. Install two underbar extrusions ④ to platform assembly ⑥ using twenty-four bolts ⑩.


Do not torque bolts at this time.

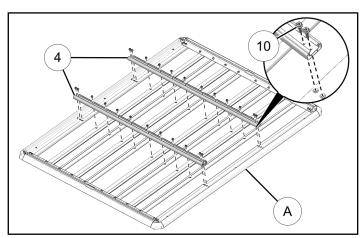

2. Torque all bolts sequentially from one end with torque tool ①.

NOTICE


Turn each bolt with torque tool until it clicks.

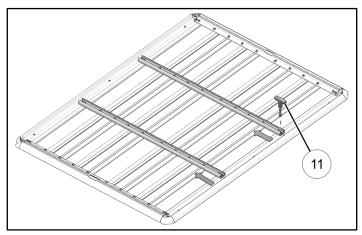

THREE PASSENGER UNDERBAR EXTRUSION INSTALLATION

1. Install one underbar extrusion ④ to platform assembly ⑧ using twelve bolts ⑩.


Do not torque bolts at this time.

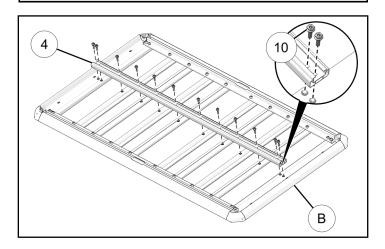

2. Torque all bolts sequentially from one end with torque tool ①.

NOTICE

Turn each bolt with torque tool until it clicks.

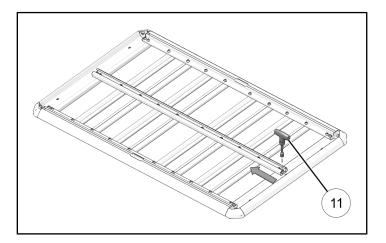

INSTRUCTION FEEDBACK FORM

A feedback form has been created for the installer to provide any comments, questions or concerns about the installation instructions. The form is viewable on mobile devices by scanning the QR code or by clicking **HERE** if viewing on a PC.

PLATFORM RACK LOAD RATINGS

CREW ROOF PLATFORM RACK P/N 2889237 AND THREE PASSENGER ROOF PLATFORM RACK P/N 2889236

IMPORTANT

Weight limit of Roof Platform Rack is 150 lbs/68 kg. To prevent damage to Roof Platform Rack never exceed the standard weight limit of 150 lbs/68 kg.

CARGO BOX PLATFORM RACK P/N 2889236

IMPORTANT

Weight limit of Cargo Box Platform Rack is 150 lbs/68 kg. To prevent damage to Cargo Box Platform Rack never exceed the standard weight limit of 150 lbs/68 kg.

